

# Colorado™ Series

*all-terrain GPS navigator*



© 2007 Garmin Ltd. or its subsidiaries

Garmin International, Inc.  
1200 East 151st Street,  
Olathe, Kansas 66062, USA  
Tel. (913) 397.8200 or (800) 800.1020  
Fax (913) 397.8282

Garmin (Europe) Ltd.  
Liberty House  
Hounslow Business Park,  
Southampton, Hampshire, SO40 9RB UK  
Tel. +44 (0) 870.8501241 (outside the UK)  
0808 2380000 (within the UK)  
Fax +44 (0) 870.8501251

Garmin Corporation  
No. 68, Jangshu 2nd Road,  
Shijr, Taipei County, Taiwan  
Tel. 886/2.2642.9199  
Fax 886/2.2642.9099

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site ([www.garmin.com](http://www.garmin.com)) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Colorado™, myGarmin™, Rock 'n Roller™, Dynastream™, ANT™, and MapSource® are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Geocaching 4-box logo is a registered trademark of Groundspeak Inc., in the United States and other countries. Used with permission. The Wherigo logo is a trademark of Groundspeak in the United States and other countries. Used with Permission. Use of geocaching.com data is subject to the Geocaching.com Terms of Use Agreement located at <http://www.geocaching.com/about/termsfuse.aspx>. The Wherigo application is covered by patent 6,691,032 and US and foreign patents pending.

Other trademarks and trade names are those of their respective owners.



## INTRODUCTION

This manual includes information for the following products:

- Colorado 300
- Colorado 400i
- Colorado 400c
- Colorado 400t

### Manual Conventions

When you are instructed to select something, highlight the item using the **Rock ‘n Roller™**, and press the **ENTER** key on the **Rock ‘n Roller** to complete the selection.

The small arrows (>) used in the text indicate that you should select a series of items.

For example, if you see “select **Shortcuts** > **Others** > **Calculator**” press the **Shortcuts** soft key, and using the **Rock ‘n Roller**, select **Others**, then select **Calculator**.

### Product Registration

Help us better support you by completing our online registration today! Connect to our Web site at <http://my.garmin.com>. Keep the original sales receipt, or a photocopy, in a safe place.

### Contact Garmin

Contact Garmin if you have any questions while using your Colorado. In the USA contact Garmin Product Support by phone: (913) 397-8200 or (800) 800-1020, Monday–Friday, 8 AM–5 PM Central Time; or go to [www.garmin.com/support](http://www.garmin.com/support).

In Europe, contact Garmin (Europe) Ltd. at +44 (0) 870.8501241 (outside the UK) or 0808 2380000 (within the UK).

**WARNING:** See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

## Colorado Series Features

Features	300	400i	400c	400t
<b>World Base Map</b>	Yes (DEM*)	Yes (Satellite)	Yes (Satellite)	Yes (DEM*)
<b>U.S. Inland Lakes Mapping</b>	Optional	Yes	Optional	Optional
<b>U.S. Bluechart Mapping</b>	Optional	Optional	Yes	Optional
<b>U.S. TOPO Mapping</b>	Optional	Optional	Optional	Yes

### \* Digital Elevation Model




---

**NOTE:** Additional, optional maps are available for the Colorado.

---

## Optional Accessories

For a list of available accessories and maps for use with the Colorado, refer to the Garmin Web site:

[www.garmin.com](http://www.garmin.com).

## Table of Contents

<b>Introduction</b> .....	i	<b>Applications</b> .....	10
Manual Conventions .....	i	Map Page.....	10
Product Registration.....	i	Geocaching.....	11
Contact Garmin .....	i	Compass Page.....	13
Colorado Series Features.....	ii	Elevation Plot.....	14
Optional Accessories.....	ii	Trip Computer.....	15
<b>Getting Started</b> .....	1	Wherigo™ .....	15
Colorado Overview.....	1	Tracks.....	16
Installing the Batteries.....	2	Others.....	17
Turning the Colorado On and Off.....	2	Share Wirelessly.....	17
Using the Rock ‘n Roller™ .....	3	Image Viewer.....	18
Operating the Colorado .....	3	3D View.....	18
System Status / Backlight Adjustment.....	4	Calendar.....	18
Scrolling.....	4	Sun and Moon.....	19
Entering Text.....	5	Hunt and Fish .....	19
<b>Basic Operation</b> .....	6	Route Planner .....	20
Using Shortcuts.....	6	Active Route .....	21
Profiles .....	6	Waypoint Manager.....	21
Creating and Using Waypoints .....	7	Alarm Clock .....	22
Navigating to a Destination .....	8	Calculator.....	22
		Stopwatch .....	23
		Satellite Page .....	24
		Profile Change .....	25
		Area Calculation .....	25

<b>Customizing the Colorado</b> .....	<b>26</b>	<b>Appendix</b> .....	<b>34</b>
System Setup.....	26	Specifications .....	34
Display Setup.....	27	Connecting Your Colorado to a Computer.....	35
Shortcuts.....	27	Data Management.....	37
Profile Change.....	28	Attaching the Carabiner.....	38
Map Setup .....	28	Software License Agreement .....	39
Tracks Setup .....	29	Declaration of Conformity (DoC) .....	39
Routing Setup.....	30	<b>Index</b> .....	<b>40</b>
Marine Setup Page .....	30		
Setting Time .....	31		
Units Setup .....	31		
Position Format Setup .....	32		
Heading Setup .....	32		
Altimeter Setup.....	32		
Calibration.....	33		
Fitness Setup.....	33		

## GETTING STARTED

## Colorado Overview




## Installing the Batteries

The Colorado operates on two AA batteries (not included). You can use alkaline, NiMH, or lithium batteries.

### To install the batteries:

1. Remove the battery cover by lifting the latch and sliding the cover off the back of the Colorado.
2. Insert the batteries, observing the diagram molded into the battery compartment.
3. Replace the battery cover by sliding it back onto the Colorado and fastening the latch.

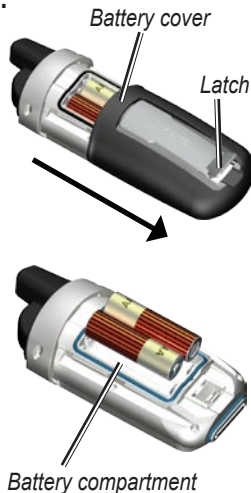


---

**NOTE:** Remove batteries when you do not plan to use the Colorado for several months. Stored data is not lost when batteries are removed.

---

## Turning the Colorado On and Off

### To turn the Colorado on:

Press and hold the  **Power** key until the Garmin logo appears on the Colorado.

### To turn the Colorado off:

Press and hold the  **Power** key.

The first time you turn the Colorado on, the GPS receiver must collect satellite data and establish its current location.




---

**NOTE:** To receive satellite signals, you must be outdoors and have a clear view of the sky.


---

When you turn the Colorado on for the first time, the Colorado sequences through several setup screens: language selection, time zone, and daylight saving time mode. For complete information on initial Colorado setup, see the *Colorado Series Quick Start Guide*.

## Using the Rock 'n Roller™


When searching for and selecting different functions on the Colorado, use the **Rock 'n Roller**.

- The **Rock 'n Roller** rotates clockwise and counter-clockwise, and can be used to move through the lists on any of the Colorado screens and to zoom in or out on the map.

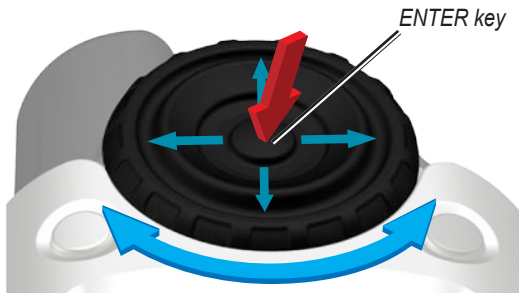

- Highlight options and pan the map by pressing up, down, left, or right.
- To select a highlighted item, press the **ENTER** key in the center of the **Rock 'n Roller**.


## Operating the Colorado

**Power key**—press and hold the  **Power** key to turn the Colorado on or off. Press quickly and release to access the System Status page.

**Select**—highlight an area on the screen with the **Rock 'n Roller** and press **ENTER** to make a selection.

**Soft keys**—the **Left** soft key and the **Right** soft key are used to access specific functions that appear on the soft key labels.


**Restore Defaults**—factory settings that are saved in the memory of the Colorado. If you customize the settings on the Colorado, you can revert to the factory settings by choosing **Restore Defaults**.

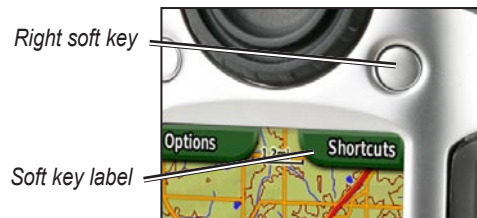


## System Status/Backlight Adjustment

In addition to adjusting the backlight on the Colorado, the System Status page is a quick way to check the time, day, date, battery level, and GPS signal strength.

### To adjust the backlight level:


1. Press and quickly release the  **Power** key.
2. Rotate the **Rock 'n Roller** clockwise or counter-clockwise to increase or decrease the backlight.
3. Select **Back** to return to the previous page.

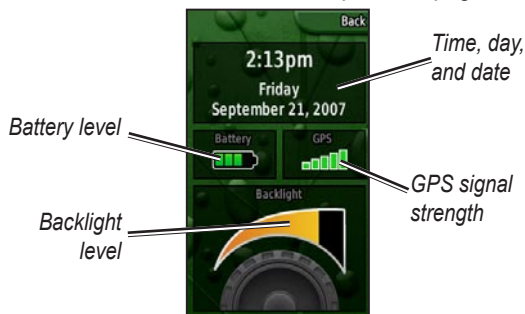

**System Status Page**

## Scrolling

When moving through a list to select applications, options, or locations, rotate the **Rock 'n Roller** to the preferred item. If a list is longer than the page can display, scroll indicators appear at the top and bottom of the page, indicating that more selections are available.

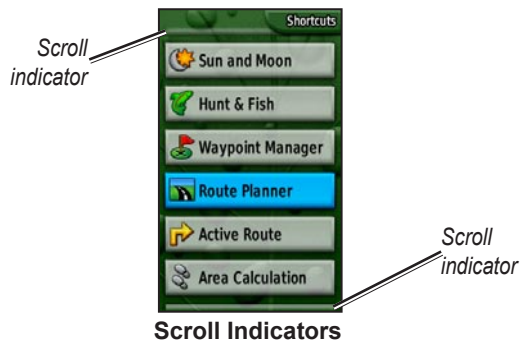

## Entering Text

When entering text, rotate the **Rock 'n Roller** to select from a list of applicable characters. Selected characters are displayed above the list.

### To add or edit information:

1. On the **Text Entry** page, rotate the **Rock 'n Roller** to the character. Press **ENTER** to select the character. For spaces between words or numbers, select \_ (underscore).
2. Select **Done** when text entry is complete.
3. Select **Cancel** to end information entry without saving and return to the previous page.



*Selected characters*

**Text Entry Page**

## BASIC OPERATION

Applications you typically use on the Colorado are accessed from **Shortcuts**. Whether using the map or compass, marking a waypoint, or setting up the Colorado, **Shortcuts** is the starting point.

### Using Shortcuts

To access the **Shortcuts** menu, press the **Right** soft key any time it is labeled **Shortcuts** and rotate the **Rock 'n Roller** to view the available applications. The applications that are not in Shortcuts can be accessed through **Others**.



---

**NOTE:** For complete information on Shortcuts, see [page 27](#).

---



**Shortcuts Menu**

### Profiles

Profiles are a collection of settings that allow you to optimize your Colorado from one type of use to another, such as moving from recreational use to automotive. Because the Colorado can be used for a variety of GPS functions, saving specific profiles for different functionalities allows you to quickly move from one type of activity to another. It also allows you to easily share your Colorado with another user.

## Setting up Profiles


The Colorado comes preloaded with five default profiles: Recreational, Geocaching, Automotive, Marine, and Fitness. You can also create your own profiles. See [pages 25 and 28](#).

## Creating and Using Waypoints

Waypoints are locations you record and store in the Colorado that you might want to return to later or share with other users. You can mark waypoints at any time on the Colorado.

### To mark a waypoint:

1. From **Shortcuts**, rotate the **Rock 'n Roller** and select **Mark Waypoint**. The new page shows that the waypoint was successfully saved. A default, three-digit number is assigned to the new waypoint (your current location).

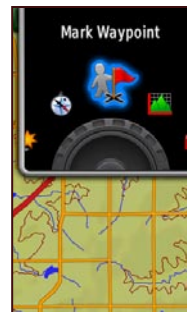

### Mark Waypoint on Shortcuts

2. To edit the new waypoint, highlight **Edit** and press **ENTER**. Highlight **Done** and press **ENTER** to save the changes. Highlight **Cancel** to delete the waypoint.




---

**NOTE:** Press and hold **ENTER** to quickly mark a new waypoint.

---

## Navigating to a Destination

You can navigate to a destination with the Colorado either by using the **Where To?** menu or by choosing a point on the map.

### *Navigating from the Where To? Menu*

The **Where To?** menu provides several categories you can use to search for and navigate to destinations.



**Where To? on Shortcuts**

#### To access the Where To? menu:

1. Select **Shortcuts > Where To?**.
2. Select the preferred search category.

3. Select a point. A green circle containing the word **Go** appears at the bottom of the page.
4. Press **ENTER** to begin navigating to the selected point.

The **Where To?** menu categories may include:

**Recent Finds**—shows a list of the items you have searched for or gone to recently.

**Waypoints**—a list of waypoints stored on the Colorado (see [page 7](#)).

**Tracks**—a list of tracks on your Colorado (see [page 29](#)).

**Geocaches**—a list of downloaded geocaches (requires downloading from [www.geocaching.com](http://www.geocaching.com)).

**Routes**—a list of routes stored on the Colorado (see [pages 20 and 30](#)).

**All POI** (Points of Interest)—if supported by the preloaded or optional mapping, various Points of Interest categories may be listed.

## Where To? Search Options

By default, **Where To?** searches near your current location, but you can configure it to search near another location.

### To do a Search Near:


1. Select **Shortcuts > Where To?**.
2. Select **Options > Search Near**.
3. Highlight and select the type of search.
4. Navigate to the selected location.

## Navigating from the Map Page

You can use the preloaded or optional mapping on the Colorado to navigate directly to a destination.

### To navigate to a point on the map:

1. On the Map page, use the **Rock 'n Roller** to move the pointer to a preferred location and press **ENTER**. A green circle containing the word **Go** appears at the bottom of the page.
2. To start navigating to the point, press **ENTER**.

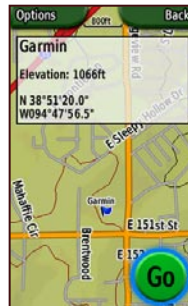

Begin Navigating Page



Stop Navigation on Shortcuts

## Stop Navigation

When navigating to a waypoint or to other destinations, the **Stop Navigation** icon appears in the **Shortcuts** menu. Select **Stop Navigation** at any time to stop navigation. This option is only available when you are navigating.

## APPLICATIONS

### Map Page

To access the Map page select **Shortcuts > Map**.

#### To zoom in and out on the Map page:

1. Rotate the **Rock 'n Roller** clockwise to zoom in.
2. Rotate the **Rock 'n Roller** counter-clockwise to zoom out.



Map Page with Data Fields



Zoom Out View

Zoom scale



Zoom In View

#### To pan across the map:

1. To start panning, press up, down, left, and right on the **Rock 'n Roller** to move the pointer on the map.
2. Select **Done** to stop panning.

#### To review a point on the map:

1. When the pointer is on a location you want to review, press **ENTER**. Detailed information about the selected point appears.
2. Select **Back** when finished.
3. Select **Done** to stop panning.

### To show or hide data fields:

1. To show the data fields on the Map page, select **Options > Show Data Fields**.
2. To hide the data fields, select **Options > Hide Data Fields**.

### To change the data fields:

1. Select **Options > Change Data Fields**.
2. Use the **Rock 'n Roller** to select the data field to change.
3. Press **ENTER** to change the selected field. Scroll through the list of data field options (examples: Odometer, Pointer, Speed, Temperature - Air, Trip Odometer, and so forth) and press **ENTER** to change the field.



---

**NOTE:** For Map setup information, see [pages 28–29](#).

---

## Geocaching

Geocaching is a high-tech version of treasure hunting. Geocachers seek hidden treasures using GPS coordinates posted on the Internet by those hiding the geocache. Using your Colorado, you can search the backwoods or urban streets to find the hiding spot of the geocache.

The first step in using your Colorado to hunt and find geocaches is to download a geocache from [www.geocaching.com](http://www.geocaching.com). The Colorado is supported by the site, and after registering, you can download geocaches directly to your Colorado.




---

**NOTE:** Downloading geocache locations to your Colorado requires installing the Garmin plug-in.


---

## To access a downloaded geocache:

1. Select **Shortcuts > Others > Geocaches** (unless Geocaches is currently on your Shortcuts menu).
2. Highlight the preferred geocache and press **ENTER**.
3. Begin navigation to the geocache.
4. For a complete geocache description, full-screen compass, or full-screen map, select **Options**.

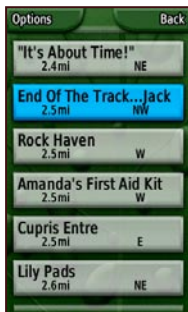

Geocache List Page

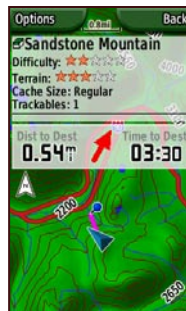

Geocache Page



Geocache Description Page




**NOTE:** Use the Options menu on the Geocache description page to access hints for geocaches.



**NOTE:** For more information on geocaching, visit [www.geocaching.com](http://www.geocaching.com).

## Compass Page

During active navigation, the Compass page guides you to your destination with a graphic compass display using a pointer.

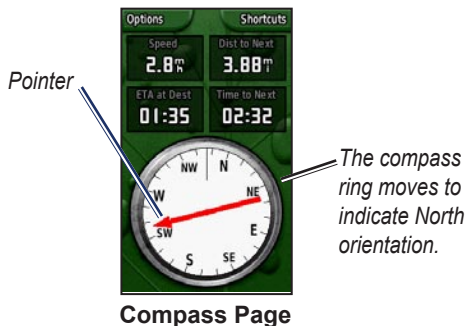

**Compass Page**

Data fields show information such as current speed, distance to the next point on the route, and estimated arrival time.

The compass ring indicates your heading, and the pointer tells you what direction you should be headed to reach your destination.

## Calibrating the Compass

You must calibrate the electronic compass outdoors. When you calibrate the compass, hold the Colorado level and do not stand near objects that influence magnetic fields, such as cars, buildings, or overhead power lines.

### To calibrate the electronic compass:

1. From the Compass page, select **Options > Calibrate Compass**.
2. Press **ENTER** to start the calibration, and follow the on-screen directions.




---

**NOTE:** Calibrate the compass after moving large distances, experiencing temperature changes, or changing the batteries.

---

## Elevation Plot

The Elevation Plot page shows you elevation changes over distance or time, or pressure changes over time. You can change the data fields at the top of the page to show various elevation and pressure-related data.



**Elevation Plot Page**

The Elevation Plot page options include:

**Plot Over Time or Plot Over Distance**—view changes over a set period of time or over a set distance.

**View Elevation Plot or View Pressure Plot**—view a plot of elevation changes that occur over a set distance or view changes in the barometric pressure for a set period of time.

**Change Data Fields**—select the type of data you want to show in the data fields.

**Reset**—reset the elevation data and the maximum elevation data.

### To adjust the zoom levels:

- To adjust the distance or time scale (along the bottom), press left on the **Rock 'n Roller** to zoom in and press right on the **Rock 'n Roller** to zoom out.
- To adjust the elevation scale or pressure (along the left), press down on the **Rock 'n Roller** to zoom in and press up on the **Rock 'n Roller** to zoom out.

### To review data at any point:

Rotate the **Rock 'n Roller** counter-clockwise to move backward on the plot chart and clockwise to move forward.

## Trip Computer

The Trip Computer page provides a variety of useful travel data when using your Colorado. Set in either Automotive Mode or Recreational Mode, the Trip Computer indicates your current speed, average speed, maximum speed, trip odometer, and other helpful statistics.

### Trip Computer Options

Customize the trip computer page by choosing from the following data options.

**Reset**—record new data for each trip. The Reset page has options for resetting trip computer data.

**Big Numbers/Small Numbers**—view fewer/more fields with larger/smaller numbers.


**Change Data Fields**—select the type of data you want to show in the data fields.

**Restore Defaults**—return the data fields to factory settings.

**Automotive Mode or Recreational Mode**—the Automotive Mode page is designed for driving and the Recreational Mode is for pedestrian travel.



Trip Computer  
Recreational Page

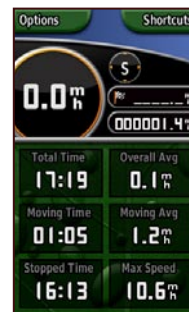

Trip Computer  
Automotive Page

## Wherigo™

Wherigo (pronounced “where I go”) is a toolset for creating and playing location-based adventures in the real world. As you use your Colorado to guide you to a physical location, you can take and use virtual items, interact with characters, and solve puzzles. The Wherigo experience combines physical and virtual

elements, overlaying engaging story lines onto a real-world background. You can build and play an exciting adventure game or other innovative activities.

### To access the **Wherigo** tutorial:

1. Select **Shortcuts > Others > Wherigo > Wherigo Tutorial**.
2. Read the description and select **Play**.
3. Follow the on-screen instructions.



**NOTE:** For complete information on Wherigo and additional cartridges, visit [www.wherigo.com](http://www.wherigo.com).



**Wherigo Tutorial Page**

## Tracks

The track log starts recording as soon as the Colorado gets a location fix. Additional tracks can be archived from your current track and shared with other users.

To use Tracks, select **Shortcuts > Where To? > Tracks**.

### To archive your current track:

1. Select **Current Track**.
2. Select **Options > Archive**.
3. Follow the on-screen instructions.

### To clear your current track:

1. Select **Current Track**.
2. Select **Options > Archive**.

Archived or loaded tracks are listed on the Tracks page. You can view the tracks on the map, view elevation profiles, or navigate the track.

## Others

Applications not on the Shortcuts menu are accessible through Others. The following applications are found in Others on most of the default Profile settings on the Colorado.



**NOTE:** When an application is added to **Shortcuts** it is removed from **Others**.



**Others on Shortcuts**



**Others Page**

## Share Wirelessly

The Colorado can wirelessly share waypoints, routes, tracks, and geocaches with another Colorado.

### To share wirelessly with another Colorado:

1. Select **Shortcuts > Others > Share Wirelessly**.
2. Select **Send** or **Receive**.
3. Select the type of information to send or receive and press **ENTER**.
4. When **Send** appears at the bottom of the page, press **ENTER**. If receiving, the Colorado searches for another Colorado. A message appears when the transmission is successful.



**Share Wirelessly Options**

## Image Viewer

The Colorado is equipped with an image viewer.

### To view images on the Colorado:

1. Insert an SD card in the SD card slot. See [page 36](#) for instructions on inserting an SD card.
2. Select **Shortcuts > Others > Image Viewer**.
3. Move through the images by rotating the **Rock 'n Roller**.
4. To pan an image, press the **Rock 'n Roller**.
5. If zooming is an option, rotate the **Rock 'n Roller** to zoom in or out.

## 3D View

The Colorado 400t has the capability to display a 3D view. All other Colorado models require DEM (digital elevation model) data that can be found in some Garmin topographic cartography.

### To show a 3D view:

1. Make sure you have detailed DEM data on the loaded map.
2. Select **Shortcuts > Others > 3D View**.

## Calendar

The calendar shows sunrise time, sunset time, and the phases of the moon on each date.

### To view the Calendar:

1. Select **Shortcuts > Others > Calendar**.
2. Rotate the **Rock 'n Roller** clockwise or counter-clockwise to move through the dates.
3. To return to the current date, select **Options > Use Current Date**.



Calendar Page


## Sun and Moon

The Sun and Moon page shows sunrise, sunset, moonrise, and moonset times for specified dates, times, and locations.

- To view sun and moon locations select **Shortcuts > Others > Sun and Moon**.
- To view the sun and moon times on a different date, scroll to the preferred date.
- To see the sun and moon positions in the sky, select **Options > Show Position in Sky**.
- Use the **Rock 'n Roller** to adjust the time of day.



Sun and Moon Page

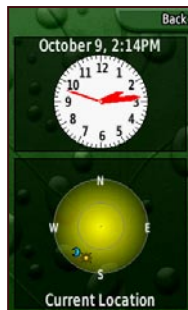


Sun and Moon Positions Page

## Hunt and Fish

An almanac provides the predicted best times for hunting and fishing on a chosen date.

### To view hunting and fishing predictions:

1. Select **Shortcuts > Others > Hunt and Fish**.  
The current date is highlighted on the calendar.
2. To view the predictions for a different date, scroll through the calendar by using the **Rock 'n Roller** to find the preferred date.
3. Select **Options** to view almanac data at a different location.

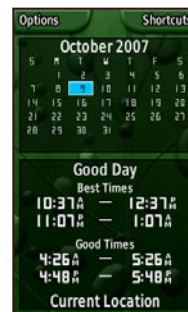

Hunt and Fish Page

## Route Planner

You can plan and create a specific route to navigate using your Colorado.


**Turn-by-Turn Routes**—requires routable cartography and provides along-the-road guidance to a destination.

**Point-to-Point Routes**—provides straight-line guidance to each successive point in the route and does not require special cartography.

### To create a new route:

1. Select **Shortcuts > Others > Route Planner**.
2. Highlight and select **<Create Route>**.
3. Select **<Select Next Point>** to select a starting point.
4. Select a recent find, waypoint, or point of interest and press **ENTER**.
5. A page for the selected point appears with a green circle containing the word **Use** at the bottom of the page. Press **ENTER** to use the point.
6. Select the next point by repeating steps 1–5.

7. To change, review, move down, insert, or remove a point, highlight a preferred point and press **ENTER**.
8. To reverse a route, remove all routes, or view a route on the map, highlight a preferred route and select **Options**.

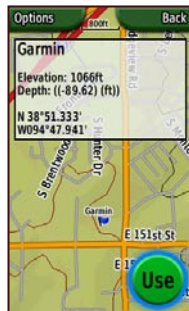

**Route Planner Selected Point Page**

## Active Route


While actively navigating, you can view your progress along a route.

### To view your active route:

1. Select **Shortcuts > Others > Active Route**.
2. Your current route is shown.
3. Select the preferred point or turn for additional details.



**Point-to-Point  
Active Route**

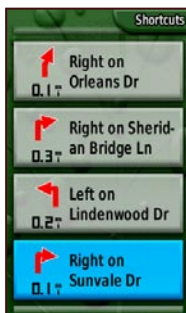

**Turn-by-Turn  
Active Route**



**NOTE:** The appearance of your active route page varies depending on your along road routing preference.

## Waypoint Manager

You can edit waypoints to change the symbol, name, comment, location, elevation, and depth.

### To edit a waypoint:

1. Select **Shortcuts > Others > Waypoint Manager** (if reviewing a waypoint, select **Options > Edit Waypoint**).
2. Highlight the waypoint to edit and press **ENTER**.
3. Make changes by highlighting and selecting the attribute to change.
4. Follow the on-screen directions to enter text.

### To delete a waypoint:

1. Select **Shortcuts > Others > Waypoint Manager**.
2. Highlight and select the waypoint to delete.
3. Select **Options > Delete Waypoint**.

## Alarm Clock

You can set the Colorado to automatically turn on at a specified time.

### To set the alarm clock:

1. Select **Shortcuts > Others > Alarm Clock**.
2. To set the time for the Colorado to turn on, highlight and select **Set Time**.
3. To turn the alarm on, highlight and select **Turn Alarm On**. If turning the alarm off, select **Turn Alarm Off**. A page appears with the time the Colorado will turn on and the option to turn the Colorado off.
4. Rotate the **Rock 'n Roller** clockwise or counter-clockwise to set the specified time and select **Done**. A page appears with the time the Colorado will turn on and the option to turn the Colorado off.



Set Alarm Page

## Calculator

The Colorado has a standard calculator and a scientific calculator, operable in radians or degrees. Select **Options** for your preferred usage.

## Stopwatch

The Colorado includes a stopwatch with a lap timer.

The stopwatch can record the lap time based on distance or on a button press.

### To use the Stopwatch:


1. Select **Shortcuts > Others > Stopwatch**.
2. Highlight **Start** and press **ENTER**.
3. Highlight **Stop** and press **ENTER** to stop.

### To time a lap by distance or button press:

1. Select **Options**.
2. Select **Lap by Distance** or **Lap by Button** and press **ENTER**.

### To set lap distance:

1. Select **Options**.
2. Highlight the distance unit to set and press **ENTER**.
3. Enter the distance and select **Done**.

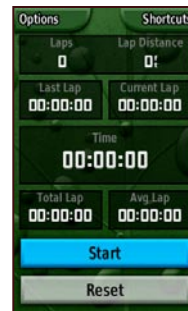

Stopwatch Page


## Satellite Page

The Satellite page shows the GPS accuracy, satellite locations, satellite signal strength, the current location, and GPS elevation.

To access the Satellite page, select **Shortcuts > Others > Satellite**.

### To set up Satellite page options:

1. Select **Options**.
2. To turn GPS off/on, select **Use With GPS Off/On**.
3. To switch between Track Up and North Up, select **Track Up/North Up** (bulls-eye track indicator).
4. To set your current location using the map, select **Set Location On Map**.
5. To have the Colorado autolocate your position select **Autolocate Position** (only available if satellites are not located).

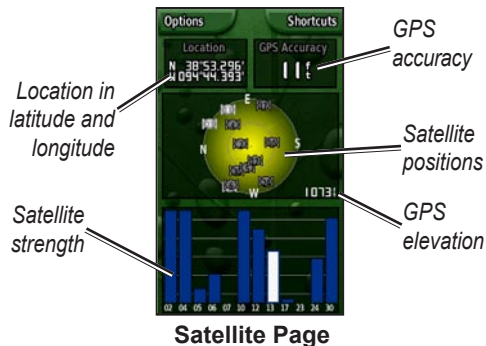

The blue bars on the Satellite page indicate that the Colorado has “locked” on a satellite. White bars indicate that the Colorado is still collecting ephemeris data.




---

**NOTE:** Ephemeris is data used for precise correction of orbit parameters and time for each satellite.

---

## Profile Change

The Colorado is preset with five default profiles: Recreational, Geocaching, Automotive, Marine, and Fitness.

### To access Profile Change:

1. Select **Shortcuts > Others > Profile Change**.  
The list of Profiles appears.
2. Highlight and select the preferred Profile to change to and press **ENTER**.




---

**NOTE:** For complete information on Profile Change see [pages 6–7 and 28](#).


---

## Area Calculation

The Colorado can calculate the size of a specific area.

### To calculate the size of an area:

1. Select **Shortcuts > Others > Area Calculation**.
2. Press **ENTER** to start, and walk around the perimeter of the area you want to calculate.
3. Press **Stop** when finished.
4. To change the measuring units, select **Options > Change Units**.

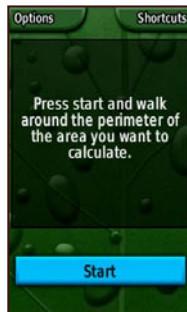

Area Calculation Start Page

## CUSTOMIZING THE COLORADO

To change the settings on your Colorado:

1. Select **Shortcuts > Setup**.
2. Rotate the **Rock 'n Roller** to highlight and select the application to change.



Setup on Shortcuts

### System Setup

To change the system setting select **Shortcuts > Setup > System**.

**GPS**—set the unit to operate in **Normal**, **WAAS**, or **Demo Mode**.

**Language**—set the text language on the Colorado.

**Tones**—turn the tones on or off.

**Serial Interface**—set the serial interface to either **Garmin Serial** or **NMEA In/Out**.

**Battery Type**—select the type of battery you are using (**Alkaline**, **NiMH**, or **Lithium**).




---

**NOTE:** System setup options include restoring default settings, viewing the software version on the Colorado, and Advanced NMEA Setup.

---



Setup List

## Display Setup

To change the screen settings select **Shortcuts > Setup > Display**.

**Backlight Timeout**—sets the backlight to stay on when it is turned on, or to turn off after a selected period of time has elapsed.

**Background**—sets the screen background. Choose from different preloaded images or load your own.

**Soft Key Label Color**—sets the color of the soft key labels.

## Shortcuts

As you use the Colorado to geocache, navigate, or fish, you may find there are some applications you use frequently and others not at all. You can add or remove these applications from the **Shortcuts** menu.

### To add an application to Shortcuts:

1. Select **Shortcuts > Setup > Shortcuts**.
2. Scroll to the bottom of the page and select **<Add Page>**. Highlight the preferred application from the list and press **ENTER**.

### To remove an application from Shortcuts:

1. Select **Shortcuts > Setup > Shortcuts**.
2. Select the application to remove.
3. Select **Remove**.

### Shortcuts setup options:

- Select **Shortcuts > Setup > Shortcuts > Options**.
- To change the position of the application on Shortcuts select **Move Up/Move Down**.
- To clear all applications from Shortcuts select **Clear All**.
- To include all applications in Shortcuts select **Include All**.
- To restore default settings, select **Restore Defaults**.




---

**NOTE:** You can set the Colorado to use a traditional page loop instead of the **Shortcuts** menu to access the applications.

---

## Profile Change

The different applications applied to each profile are accessible on the **Shortcuts** menu.

To change to a different profile, see [page 25](#).

### To edit a profile:


1. Select **Shortcuts > Setup > Profile Change**.
2. Highlight and select the profile to edit.
3. Select **Options** to move a profile, edit the name, or delete the profile.

### To add a new profile:

1. Select **Shortcuts > Setup > Profile Change**.
2. Select **Options > Setup Profiles**.
3. Select **<Create New Profile>**. A name is automatically assigned to the new profile. Your current settings are saved to your new profile.
4. Highlight the new profile name and press **ENTER** to edit the name and settings.



Select Profile Change from the Setup List

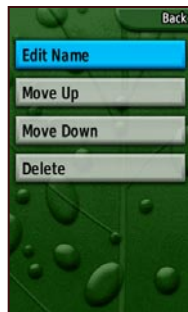

Profile Setup Page




---

**NOTE:** When accessing the Profiles list, the highlighted profile name is the profile currently in use.

---

## Map Setup

To customize the Map page settings select **Shortcuts > Setup > Map**.

**Orientation**—sets how the map is shown on the page.  
**North Up** always shows north at the top of the page.  
**Track Up** shows your current track toward the

top of the page. **Automotive Mode** is a perspective map for use while driving.



**Automotive Mode on the Map Page**

**Detail**—selects the degree of map detail shown. Decreasing detail levels will improve map drawing time.

**Auto Zoom**—automatically selects the appropriate zoom level for optimal use.

**Lock On Road**—locks the current position pointer to show on the nearest road, compensating for variances in map position accuracy (requires routable cartography).

Colorado™ Series Owner's Manual

**Go To Line**—sets the map on either a **Bearing** or a **Course**.

## Tracks Setup

Tracks creates an electronic bread crumb trail or “track log” on the Map page as you travel. The track log contains information about points along its path.

To customize the Tracks settings select **Shortcuts > Setup > Tracks**.

**Track Log**—turn the Track log on or off.

**Record Method**—sets the Track recording method. Select **Distance**, **Time**, or **Auto**. If your record method is time or distance, you can manually set the specific time or distance interval.

**Interval**—sets the Track Interval, ranging from **Most Often** to **Least Often**.

**Show On Map**—turns the Tracks map display on or off.




---

**NOTE:** To clear the Active Track log, select **Shortcuts > Setup > Tracks > Options > Clear Current Track**.

---

## Routing Setup

To customize your routing preferences select **Shortcuts > Setup > Routing**.

**Guidance Method**—sets the Colorado to calculate routes with **Off Road** (a direct line to your destination), **On Road For Time** (the fastest time), and **On Road For Distance** (shortest distance but longer time and requires routable cartography).

**Calculate Routes for**—calculates routes for the type of transportation used on the route.

**Avoid**—allows you to avoid certain road types and maneuvers on your route.

**Off Road Transitions**—set to **Auto**, **Manual**, or by **Distance**.

## Marine Setup Page

To access the Marine Setup page select **Shortcuts > Setup > Marine**. Follow the on-screen instructions to input distances.

**Anchor Drag Alarm**—sets an alarm to sound when you drift more than a specified distance.

**Off Course Alarm**—sets an alarm to sound when you are a set distance off course.

**Deep Water Alarm**—sets an alarm to sound when you enter an area of water that is too deep.

**Shallow Water Alarm**—sets an alarm to sound when you enter an area that is too shallow.

**Marine Chart**—turn Marine Colors, Spot Soundings, Light Sectors, and Symbol Set (**Auto**, **Garmin**, **NOAA**, or **International**) on or off.

## Setting Time

To access the Time Setup page select **Shortcuts > Setup > Time**.

**Time Format**—sets 12- or 24-hour format.

**Time Zone**—set the time zone for your location.

**Daylight Saving Time**—select **Yes** to use Daylight Saving Time, **No** to ignore it, or **Automatic** to set it automatically.



**Set Time Zone Page**

## Units Setup

To access the Units Setup page select **Shortcuts > Setup > Units**.

**Distance/Speed**—sets the units of measurement used to show your speed and the distance traveled.

**Elevation (Vert. Speed)**—sets the unit of measurement (**Feet (ft/min)**, **Meters (m/min)**, or **Meters (m/sec)**) used to show your elevation and rate of ascent or descent.

**Depth**—sets the unit of measurement (**Feet**, **Fathoms**, or **Meters**) used to show water depth (requires a connection to other devices or marine chart data).

**Temperature**—sets the unit of measurement (**Fahrenheit** or **Celsius**) used to show temperature.

**Pressure**—sets the unit of measurement (**Inches**, **Millibars**, or **Hectopascals**) used to show pressure.

## Position Format Setup

The Position Format Setup page allows you to set your position format, map datum, and map spheroid. Unless you have a working knowledge of the position format or grid for your map, it is recommended that you use the default settings.

To access the Position Format Setup page select **Shortcuts > Setup > Position Format**.

## Heading Setup

To access the Heading Setup page select **Shortcuts > Setup > Heading**.



---

**NOTE:** Unless you have a working knowledge of headings and North referencing, it is recommended that you use the default settings.

---

**Display**—sets the units (Cardinal Letters, Degrees, or Mils) used to show your heading.

**North Reference**—provides headings based on a true, magnetic, grid, or specific user value north reference.

## Altimeter Setup

The Altimeter Setup page allows you to set up the altimeter to self-calibrate each time you turn the Colorado on, to function as a barometer, and to continually save pressure trend data.

To set up the altimeter select **Shortcuts > Setup > Altimeter**.

**Auto Calibration**—when turned on, elevation is calibrated by the GPS elevation on the Colorado.

**Barometer Mode**—select **Variable Elevation** (used when moving) or **Fixed Elevation** (used when stationary, allowing the Altimeter to function as a standard barometer).

**Pressure Trending**—select **Save Always** to record pressure data every 15 minutes, even when the Colorado is turned off. Select **Save When Power On** to record data only when the Colorado is turned on.

## Calibration

You can calibrate the altimeter and compass from the Calibration page.

Calibrate the altimeter by entering information or letting the Colorado determine the elevation and pressure. The Colorado relies on barometric pressure to determine elevation, and the pressure at any given elevation can fluctuate. You must know the elevation (from a map point or other reliable data) or the pressure (calibrated to sea level) for your current location.

Calibrate the compass by following the on-screen directions.

### To calibrate the altimeter select **Shortcuts > Setup > Calibration > Altimeter.**

1. If you know the elevation, select **Yes** and enter the information. Select **No** if you do not know the elevation.
2. If you know the pressure select **Yes**. Select **No** if you do not know the pressure.
3. A **“Calibration Completed”** or **“Calibration Failed”** message appears after calibration is completed.

## Fitness Setup

To connect an optional Garmin Heart Rate Monitor or Garmin Bike Cadence Sensor to your Colorado, select **Shortcuts > Setup > Fitness.**

**Heart Rate Monitor**—to use the Colorado with a heart rate monitor, select **On**. Select **Off** when not in use.

**Search for a Heart Rate Monitor**—selecting this automatically begins a search for a Garmin Heart Rate Monitor and the message “Searching” appears. A “Connected” message appears when the Colorado connects to a Garmin Heart Rate Monitor.

**Bike Cadence Sensor**—to use the Colorado with a bike cadence sensor, select **On**. Select **Off** when not in use.

**Search for a Bike Cadence Sensor**—selecting this automatically begins a search for a Garmin Bike Cadence sensor and the message “Searching” appears. A “Connected” message appears when the Colorado connects to a Garmin Bike Cadence sensor.




---

**NOTE:** To determine if you are connected to another Colorado, move away from other Colorado units, sensors, or monitors.

---

## APPENDIX

### Specifications

#### Physical

**Size:** 5.5" H x 2.4" W x 1.4" D (14 x 6.1 x 3.6 centimeters)

**Weight:** 5.9 ounces (167.26 grams) without batteries installed.

**Display:** 1.53" x 2.55" backlit color TFT display (240 x 400 pixels) backlit.

**Case:** Rugged, metal-plated, waterproof to IPX7

**Temp Range:** From -4°F to 158°F (from -20°C to 70°C)\*

\*The temperature rating of the Colorado may exceed the usable range of some batteries. Some batteries can rupture at high temperatures.

#### Performance

**Receiver:** 12 channel WAAS enabled/High sensitivity

#### Acquisition Times:

- < 1 second (warm start)
- < 33 seconds (cold start)
- < 36 seconds (autolocate)

**Update Rate:** 1/second, continuous

**Antenna:** Built-in Quad Helix

**Compass:** Accuracy: +/- 2 degrees (+/- 5 degrees extreme Northern/Southern latitudes)\*, resolution: 1 degree

**Altimeter:** Accuracy: +/- 10 feet\*, resolution: 1 foot  
Range -2,000 to 30,000 feet

\*Subject to proper user calibration.

#### Power

**Source:** Two AA batteries (alkaline, NiMH, or lithium)

**Battery Life:** Up to 16 hours

#### Accuracy

**GPS:** < 33 feet (10 meters) 95% typical\*

\*Subject to accuracy degradation to 100m 2DRMS under the U.S. DoD imposed Selective Availability (SA) Program when activated.

**DGPS:** 10–16 feet (3–5 meters) 95% typical\*

\*WAAS accuracy in North America.

**Velocity:** 0.1 meter/sec steady state

**Interfaces:** Garmin Proprietary serial, USB mass storage device, NMEA 0183

**Data Storage Life:** Indefinite; no memory battery required

**Map Storage:** Internal or SD Card

## Connecting Your Colorado to a Computer

You can connect the Colorado to your computer using the supplied USB cable.




---

**NOTE:** Install the supplied Trip and Waypoint Manager software on your computer before connecting the USB cable. Follow the instructions provided with the software.

---

### To connect your Colorado to your computer:

1. Lift the weather cap on the top of the Colorado and insert the smaller connector on the USB cable into the USB mini-B jack.
2. Connect the remaining cable end to an empty USB port on your computer.

### Information About USB Drivers

The USB drivers are automatically installed when you install the Trip and Waypoint Manager software that came with your Colorado. When you initially connect the Colorado to a USB port, your computer might prompt you to locate the destination of the drivers for

the device. You only need to install the drivers once. After the drivers are installed, your computer always detects your Colorado when it is connected. USB drivers might be updated periodically. You can find updates at [www.garmin.com](http://www.garmin.com).

### ***Transferring Tracks, Routes, or Waypoints from the Colorado to Your Computer***

Tracks, routes, and waypoints saved on your Colorado can be saved and viewed in the Trip and Waypoint Manager software.

#### **To transfer tracks, routes, or waypoints:**

1. Ensure that Trip and Waypoint Manager is installed on your computer and open.
2. Ensure that the Colorado is connected to the computer with the USB cable and powered on.
3. Click **Receive from Device** on the Transfer menu or click the **Receive from Device** icon at the top of the screen.

## Installing and Using an SD Card

The Colorado has an SD data card slot. You can purchase an SD card programmed with detailed map data.

### To install or remove an SD card:


1. Remove the battery cover from the back of the Colorado. See [page 2](#).
2. To Install: Locate the card slot at the bottom of the Colorado and push the card into place until it clicks.
3. To Remove: Push in on the card and release it quickly to eject it from the slot.
4. Replace the battery cover.



---

**NOTE:** In addition to map and data storage, the SD card can be used to view images. See [page 18](#).

---

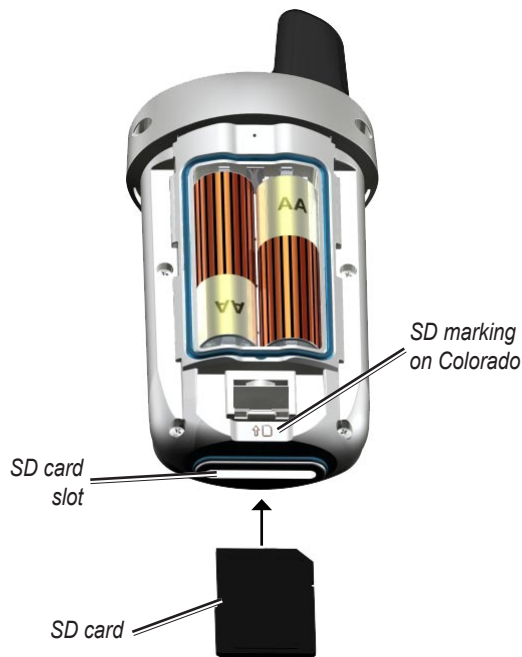

### Inserting an SD Card into the Colorado

## Data Management

You can use the Colorado as a USB mass storage device, and you can purchase a separate SD card for additional external memory.



---

**NOTE:** The Colorado is not compatible with Windows® 95, 98, Me, or NT. It is also not compatible with Mac® OS 10.3 or earlier.

---

### Loading and Deleting Files

#### To load a file onto the Colorado or SD card:

1. Remove the battery cover and insert an SD card.
2. Connect the USB cable to the Colorado and computer.
3. Browse your computer for the files to copy. Highlight the file and select **Edit > Copy**.
4. Open **Garmin > GPX**, **Garmin > Profiles**, or **SD card drive/volume**. Select **Edit > Paste**.
6. Click **Eject** when finished transferring the file.

#### To delete a file:

Open the Garmin or SD card drive/volume. Highlight the file and press the **Delete** key on your computer keyboard.



---

**WARNING:** When deleting files, be careful **NOT** to delete pre-programmed map data. It is not recoverable.


---

## Attaching the Carabiner

For convenience, a carabiner clip comes with the Colorado.

### To attach the carabiner clip:

1. Position the carabiner clip in the slots on the mounting spine of the Colorado.
2. Slide the clip up until it locks in place.
3. To remove the carabiner clip, lift the bottom of the clip and gently push down on the carabiner clip until it releases.

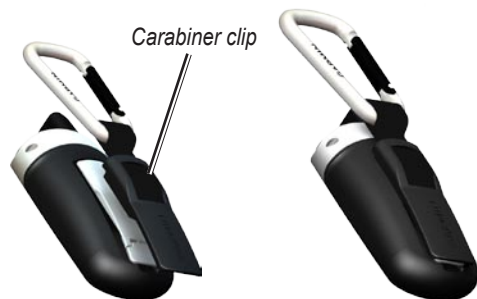

**Attaching the Carabiner Clip to the Colorado**

## Software License Agreement

BY USING THE COLORADO, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

Garmin grants you a limited license to use the software embedded in this device (the “Software”) in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin.

You acknowledge that the Software is the property of Garmin and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of Garmin and that the Software in source code form remains a valuable trade secret of Garmin. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.

## Declaration of Conformity (DoC)

Hereby, Garmin, declares that this Colorado is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

To view the full Declaration of Conformity, see the Garmin Web site for your Garmin product: [www.garmin.com/products/Colorado](http://www.garmin.com/products/Colorado). Click **Manuals**, and then select the **Declaration of Conformity** link.

# INDEX

## Symbols

3D view 18

## A

air temperature 11

alarm clock 21

altimeter

    auto calibration 32

    calibration 33

    setup 32

area calculation 25

automotive mode 29

## B

background options 27

backlight adjustment 4

batteries

    installing 2

    type to use 2

## C

calculator 22

calendar 18

calibration

    altimeter 33

    compass 33

carabiner clip 38

Colorado

    connecting to a

        computer 35

    customizing 26–32

    deleting files 37

    loading files 37

    optional accessories ii

    series features ii

    turning on and off 2

compass calibration 13

## D

declaration of conformity 39

## E

elevation plot

    options 14

    plot over distance 14

    plot over time 14

    reviewing data 14

    zoom levels 14

ephemeris 24

## F

fishing predictions 19

fitness setup 33

    bike cadence sensor 33

    heart rate monitor 33

## G

geocaches

    downloading 12

    sending and receiving 17

geocaching 11

GPS

    accuracy 24

    elevation 24

    mode setup 26

    turning on and off 24

## H

heading setup 32

hunting predictions 19

## I

image viewer zooming 18

## L

language selection 26

## M

Map page

    data fields 11

    panning 10

    zooming 10

marine setup 30

moonset times 19

## N

navigating

    from map page 9

    stopping 9

    Where To? 8

## O

Others 17

## P

page loop 27

position format 32

Power key 3

pressure trending 32

profiles

    adding 28

    changing 28

    default profiles 7

    editing 28

    setting up 7

## R

receiving files 17

recent finds 8

Rock 'n Roller

    entering text 5

    how to use 3

routes  
  active routes 21  
  planning 20  
  point-to-point 21  
  sending and receiving 17  
  turn-by-turn 20–21

## S

satellite  
  page options 24  
  signal strength 4  
screen setup  
  background 27  
  backlight 27  
  soft key label color 27  
scrolling 4  
SD card  
  installing 36  
  using 36  
SD card slot 36  
sending files 17  
Shortcuts  
  adding applications 27  
  definition 6  
  removing applications 27  
  setup options 27  
soft key label 3  
soft keys 3

software license agreement 39  
specifications 34  
stopwatch 23  
sunset times 19  
system setup 26  
System Status page 4

## T

temperature setup 31  
text entry 5  
time format 31  
tones, changing 26  
tracks  
  clearing active track log 29  
  sending and receiving 17  
  setting up 29  
Trip and Waypoint Manager  
  transferring tracks 35  
  transferring waypoints 35  
trip computer 15

## U

units setup 31  
USB drivers 35  
USB mass storage  
  deleting files 37  
  loading files 37  
USB mini-B jack 35

## W

waypoints  
  creating 7  
  deleting 21  
  editing 21  
  navigating 8  
  sending and receiving 17  
Where To? 8  
Wherigo 15–16

## Z

zooming  
  image viewer 18  
  map page 10

**For the latest free software updates (excluding map data) throughout the life of your  
Garmin products, visit the Garmin Web site at [www.garmin.com](http://www.garmin.com).**



© 2007 Garmin Ltd. or its subsidiaries

Garmin International, Inc.  
1200 East 151<sup>st</sup> Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.  
Liberty House, Hounsdown Business Park, Southampton, Hampshire, SO40 9RB UK

Garmin Corporation  
No. 68, Jangshu 2<sup>nd</sup> Road, Shijr, Taipei County, Taiwan

[www.garmin.com](http://www.garmin.com)

Part Number 190-00751-00 Rev. A