

Customer Support


Upgrading the Software

The SD memory card (1) is located in the Navi box (2) attached to the backside of the travel trunk.

NOTE:

The Navigation System is a precision device that can be damaged by static electricity. Before touching the Navi box, discharge any static electricity by touching a metal area of your motorcycle outside the travel trunk.

1. Make sure the ignition switch is **OFF**.
2. Open the travel trunk cover.
3. Push the latch (3) on the left side of the Navi box to open the cover.

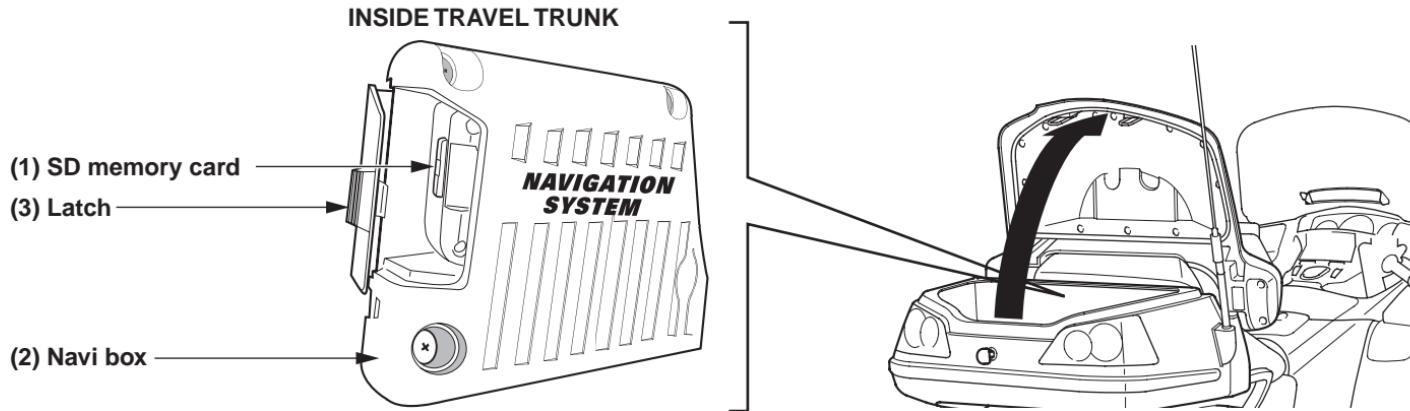

4. Push in to eject the SD memory card (1).

5. Insert the new SD memory card and push in until it clicks.
6. Turn the ignition switch to ACC. It automatically starts updating. The initial Navigation System screen (sunrise beyond the Earth) will appear, followed by the *Copyrights* screen. This means the update is completed.
7. Close the Navi box cover and push the latch to the right until it clicks. Check that the cover is securely closed.
8. Close the travel trunk cover.
9. To check the update was successful, go to the *Setup / Info* menu and select *System Info*. Check that the screen identifies the new update.
10. Turn the ignition switch to OFF.