

**GARMIN®**

# **VIEO™ RV 850 / RV 1050 SERIES**

---

## **Owner's Manual**

© 2020 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to [www.garmin.com](http://www.garmin.com) for current updates and supplemental information concerning the use of this product.

Garmin®, the Garmin logo, Fusion®, and the Fusion logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Apollo™, Connect IQ™, EmpirBus™, Fusion-Link™, Fusion-Link Lite™, Fusion PartyBus™, myTrends™, and Vieo™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Android™ and Google Play™ are trademarks of Google Inc. Apple®, the Apple logo, iPod®, and Mac® are trademarks of Apple Inc., registered in the U.S. and other countries. BLUETOOTH® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Foursquare® is a trademark of Foursquare Labs, Inc. in the U.S. and in other countries. iOverlander™ is a trademark of iOverlander. microSD® and the microSDHC logo are trademarks of SD-3C, LLC. PlanRV™ is a trademark of TruckDown Info International, Inc. SiriusXM®, SportsFlash™, TuneMix™, TuneStart™, and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved. Tripadvisor® is a registered trademark of TripAdvisor LLC. Wi-Fi® is a registered trademark of Wi-Fi Alliance Corporation. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.

# Table of Contents

## Getting Started..... 1

Display Overview .....	1
Dock Overview .....	2
Docking the Display .....	3
Undocking the Display .....	3
Home Screen .....	4
Opening an App .....	4
Adding Shortcuts to the Home Screen .....	4
Viewing Notifications .....	5
Status Bar Icons .....	5
Acquiring GPS Signals .....	5
Using the Touchscreen .....	5
Adjusting the Screen Brightness .....	6

## Video Tutorials..... 6

## Vehicle Profiles..... 6

Adding a Vehicle Profile .....	6
Car Profile .....	6
Switching the Vehicle Profile .....	7
Editing a Vehicle Profile .....	7

## Driver Awareness Features and Alerts..... 7

Enabling or Disabling Driver Alerts .....	8
Red Light and Speed Cameras .....	8

## Navigating to Your Destination..... 8

Routes .....	8
Starting a Route .....	8
Starting a Route by Using the Map .....	9
Going Home .....	9
Editing Your Home Location .....	9
Your Route on the Map .....	9
Active Lane Guidance .....	10
Viewing Turns and Directions .....	11
Viewing the Entire Route on the Map .....	11
Arriving at Your Destination .....	11
Changing Your Active Route .....	11
Adding a Location to Your Route .....	11
Shaping Your Route .....	12
Taking a Detour .....	12

Changing the Route Calculation Mode .....	12
Stopping the Route .....	12
Using Suggested Routes .....	12
Avoiding Delays, Tolls, and Areas .....	13
Avoiding Traffic Delays on Your Route .....	13
Avoiding Toll Roads .....	13
Avoiding Toll Stickers .....	13
Avoiding Road Features .....	13
Avoiding Environmental Zones .....	14
Custom Avoidances .....	14
Avoiding a Road .....	14
Avoiding an Area .....	14
Disabling a Custom Avoidance .....	14
Deleting Custom Avoidances .....	14

## Finding and Saving Locations..... 15

Points of Interest .....	15
Tripadvisor® .....	15
Finding Tripadvisor Points of Interest .....	15
Foursquare® .....	15
Searching Foursquare Points of Interest .....	15
Viewing Foursquare Location Details .....	16
Finding iOverlander™ Points of Interest .....	16
Finding Campgrounds .....	16
Finding RV Parks .....	16
Finding RV Services .....	16
Finding a Location Using the Search Bar .....	16
Finding an Address .....	17
Finding a Location by Category .....	17
Searching Within a Category .....	17
Location Search Results .....	18
Changing the Search Area .....	19
Custom Points of Interest .....	19
Installing POI Loader .....	19
Finding Custom POIs .....	19
Search Tools .....	19
Finding an Intersection .....	20
Finding a Location Using Coordinates .....	20
Viewing Recently Found Locations .....	20

Clearing the List of Recently Found Locations.....	20
Viewing Current Location Information.....	20
Finding Emergency Services and Fuel.....	20
Getting Directions to Your Current Location.....	20
Adding a Shortcut.....	21
Removing a Shortcut.....	21
Saving Locations.....	21
Saving a Location.....	21
Saving Your Current Location.....	21
Editing a Saved Location.....	21
Assigning Categories to a Saved Location.....	22
Deleting a Saved Location.....	22

## **Using the Map..... 22**

Map Tools.....	23
Viewing a Map Tool.....	23
Up Ahead.....	23
Viewing Upcoming Locations.....	23
Customizing the Up Ahead Categories.....	24
Viewing Upcoming Cities and Exit Services.....	24
Warning and Alert Symbols.....	24
Restriction Warnings.....	25
Road Condition Warnings.....	25
Alerts.....	26
Trip Information.....	26
Viewing Trip Data from the Map.....	26
Customizing the Trip Data Fields.....	26
Viewing the Trip Information Page..	26
Viewing the Trip Log.....	26
Resetting Trip Information.....	26
Viewing Upcoming Traffic.....	26
Viewing Traffic on the Map.....	26
Searching for Traffic Incidents.....	27
Customizing the Map.....	27
Customizing the Map Layers.....	27
Changing the Map Data Field.....	27
Changing the Map Perspective.....	27

## **Live Services, Traffic, and Smartphone Features..... 27**

Pairing with Your Smartphone.....	28
Smart Notifications.....	28
Receiving Notifications.....	28
Receiving Notifications while Viewing the Map.....	29
Viewing the List of Notifications.....	29
Going to an Address or Location Using the Garmin Drive App.....	29
Hands-Free Calling.....	30
Placing a Call.....	30
Receiving a Call.....	30
Using the Call History.....	30
Using In-Call Options.....	30
Saving a Phone Number as a Preset.....	30
Changing the Hands-Free Calling Audio Source.....	31
Wireless Headsets.....	31
Enabling or Disabling Bluetooth Features.....	31
Showing or Hiding App Notifications (Android™).....	31
Showing or Hiding Notification Categories for Your Apple® Device.....	31
Disconnecting a Bluetooth Device.....	31
Deleting a Paired Bluetooth Device.....	31
Deleting a Paired Phone.....	32

## **Music Playback and Stereo Features..... 32**

Playing Music.....	32
Music Player Overview.....	32
Selecting a Source.....	33
Playback Controls.....	34
Media Player Connection.....	35
USB Device Compatibility.....	35
Playing Media from a USB Device.....	35
Connecting an Auxiliary Device.....	35
Connecting an Apple Device Using AirPlay.....	36
Setting an AirPlay Password.....	36
Connecting a UPnP Device.....	36
Audio Control.....	36
Adjusting the Volume for a Zone.....	36
Muting all Connected Stereos.....	36

Enabling Automatic Volume Adjustment Based on Speed .....	36	Changing SportsFlash Team Priority .....	44
Adjusting the Tones .....	37	Enabling the TuneStart™ Feature .....	44
Disabling the Loud Setting for a Zone .....	37	Parental Controls .....	45
Adjusting the Gain for an Auxiliary Device .....	37	Unlocking the Parental Controls .....	45
Speaker Zones .....	37	Locking Channels .....	45
Adjusting the Audio Settings for a Zone .....	37	Clearing All Locked Channels .....	45
Adjusting the Subwoofer Filter .....	37	Changing the Parental Control Passcode .....	45
DSP Settings .....	38	SiriusXM Troubleshooting .....	46
Configuring the DSP Settings .....	38	Clearing SiriusXM Data .....	46
Bluetooth Device Playback .....	38	DAB Playback .....	47
Connecting a Compatible Bluetooth Device .....	39	Setting the Tuner Region .....	47
Bluetooth Range Information .....	39	Scanning for DAB Stations .....	47
Selecting a Different Bluetooth Device .....	39	Changing DAB Stations .....	47
Bluetooth Source Settings .....	39	Selecting a DAB Station from a List .....	47
USB Device Playback .....	40	Selecting a DAB Station from a Category .....	47
Controlling Music Playback on a Connected Android Device, USB Flash Drive, or Media Player .....	40	Presets .....	47
Controlling Music Playback on a Connected Apple Device .....	40	Saving a Station as a Preset .....	47
Radio .....	40	Selecting a Preset from a List .....	48
Setting the Tuner Region .....	41	Removing Presets .....	48
Changing the Radio Station .....	41	Fusion PartyBus™ Networking .....	48
SiriusXM Satellite Radio .....	41	Streaming from a Fusion PartyBus Device on the Network .....	49
Enabling the SiriusXM Source .....	41	Stopping Streaming from a Fusion PartyBus Device on the Network .....	49
Locating the SiriusXM Radio ID .....	41	Network UPnP Playback .....	49
Activating a SiriusXM Subscription .....	42	Audio Settings .....	50
Selecting a Category .....	42	Speaker Zone Settings .....	50
Using Replay Mode .....	42	Setting a Zone Name .....	50
Alerts .....	42	Linking Zones .....	50
Adding an Artist or Song Alert .....	42	Enabling Volume Control of Zone 3 or 4 from a Connected Amplifier .....	50
Adding Teams for Game Alerts .....	43	Disabling a Zone .....	50
Viewing Active Alerts .....	43	Disabling the Internal Amplifiers .....	51
Managing Alerts .....	43	Source Settings .....	51
TuneMix™ Feature .....	43	Network Configuration .....	51
Starting and Stopping a TuneMix Collection .....	43	Setting the Fusion PartyBus Device as the DHCP Server .....	51
Creating and Customizing a TuneMix Collection .....	44	Setting the Fusion PartyBus Device as a Wireless Access Point .....	51
SportsFlash Feature .....	44	Connecting the Fusion PartyBus Device to a Wireless Access Point .....	52
Adding Teams to Receive SportsFlash Alerts .....	44	Advanced Network Configuration .....	52

Resetting Network Settings.....	53	Viewing the Weather Forecast.....	58
Additional Stereo Control Options.....	53	Viewing Weather Near a Different	
Connecting to a Garmin Watch.....	53	City.....	59
Fusion-Link Wireless Remote Control			
App.....	53	<b>Onboard Systems Control and</b>	
Resetting the Stereo Settings.....	54	<b>Monitoring.....</b>	<b>59</b>
<b>Vehicle Cameras.....</b>	<b>54</b>	Opening the Digital Switching	
Viewing a Vehicle Camera.....	54	Controls.....	59
Enabling Camera Auto-Display.....	54	<b>Settings.....</b>	<b>59</b>
Flipping the Camera Image.....	55	Navigation Settings.....	59
Enabling the Vehicle Camera		Map and Vehicle Settings.....	59
Microphone.....	55	Enabling Maps.....	60
<b>Traffic.....</b>	<b>55</b>	Route Preference Settings.....	60
Receiving Traffic Data Using Your		Driver Assistance Settings.....	60
Smartphone.....	55	Traffic Settings.....	60
Enabling Traffic.....	55	Enabling Bluetooth Wireless	
Viewing Traffic on the Map.....	55	Technology.....	60
Searching for Traffic Incidents.....	55	Connecting to a Wireless Network.....	61
<b>Voice Command.....</b>	<b>56</b>	Display Settings.....	61
Tips for Speaking to the Device.....	56	Sound and Notification Settings.....	61
Launching Garmin Voice-Activated		Adjusting Sound and Notification	
Navigation.....	56	Volume.....	61
Checking Your Arrival Time.....	56	Enabling or Disabling Location	
Changing Device Settings Using Your		Services.....	62
Voice.....	56	Setting the Text Language.....	62
Disabling Voice Command.....	56	Date and Time Settings.....	62
<b>Using the Apps.....</b>	<b>57</b>	Device Settings.....	62
Viewing the Owner's Manual on		Resetting Data and Settings.....	62
Your Device.....	57	<b>Device Information.....</b>	<b>63</b>
Trip Planner.....	57	Viewing E-label Regulatory and	
Planning a Trip.....	57	Compliance Information.....	63
Editing and Reordering Locations in a		Specifications.....	63
Trip.....	57	<b>Device Maintenance.....</b>	<b>64</b>
Optimizing the Order of Destinations		Garmin Support Center.....	64
in a Trip.....	57	Map and Software Updates.....	64
Discovering Attractions Along Your		Updating Maps and Software Using a	
Trip.....	57	Wi-Fi Network.....	65
Changing Routing Options for a		Updating Maps and Software with	
Trip.....	58	Garmin Express.....	66
Navigating to a Saved Trip.....	58	Device Care.....	67
Editing and Saving Your Active		Cleaning the Touchscreen.....	67
Route.....	58	<b>Troubleshooting.....</b>	<b>67</b>
Viewing Previous Routes and			
Destinations.....	58		

My device is not acquiring satellite signals..... 67

My device does not connect to my phone..... 67

My phone is not listed as a Bluetooth audio source..... 67

Network Troubleshooting..... 67

    Network Status Icons..... 68

My steering wheel controls are unresponsive or inaccurate..... 68

    Calibrating Steering Wheel Controls..... 68

**Appendix..... 68**

Data Management..... 68

    About Memory Cards..... 68

    Installing a Memory Card for Maps and Data..... 69

    Formatting the Memory Card..... 69

Purchasing Additional Maps..... 69

Purchasing Accessories..... 69





# Getting Started

## ⚠ WARNING


See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.







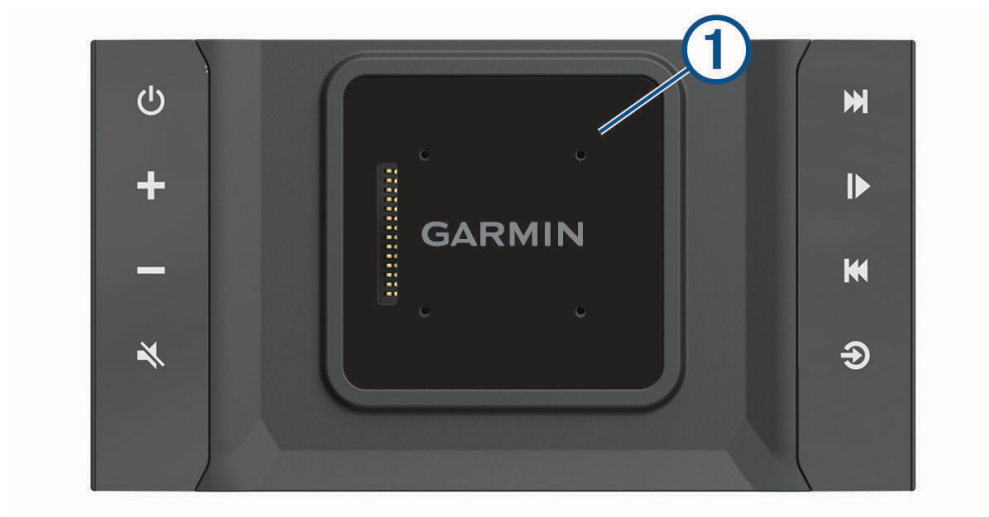


## Display Overview



①	Microphone for voice recognition
②	Volume control
③	Power key
④	micro USB power and data port
⑤	microSD® memory card slot
⑥	Magnetic mount interface with 14-pin connector
⑦	Speaker

## Dock Overview



	Magnetic dock for the Vieo display. Charges the display and sets the display user interface to docked mode.
	Power. Hold to turn the system on or off.
	Volume up
	Volume down
	Mute
 	<ul style="list-style-type: none"> <li>• Select to skip to the previous or next track, when using an applicable source.</li> <li>• Hold to rewind or fast forward the current track, when using an applicable source.</li> <li>• AM or FM source: <ul style="list-style-type: none"> <li>◦ Select to tune to the previous or next station.</li> <li>◦ Hold for faster tuning (manual mode only).</li> </ul> </li> <li>• Aux1 or Aux2 source: Select to decrease or increase the gain for the connected source.</li> <li>• SiriusXM source: Select to change to the previous or next channel.</li> <li>• DAB source: Select to change to the previous or next DAB station in the ensemble.</li> </ul>
	<ul style="list-style-type: none"> <li>• Select to pause or resume.</li> <li>• AM or FM source: <ul style="list-style-type: none"> <li>◦ Select to move through the tuning modes: auto, manual, and presets (when two or more presets are saved).</li> <li>◦ Hold to save this station as a preset.</li> </ul> </li> <li>• SiriusXM source: Select to move through the tuning modes (auto and presets), when you have at least one preset channel.</li> <li>• DAB source: Select to scan for DAB stations.</li> </ul>
	Select to change the audio source.

## Docking the Display

The display provides a touchscreen interface for the infotainment system. It can control the system while docked or undocked.

- 1 Place the bottom edge of the display into the dock.
- 2 Tilt the top of the display toward the dock until the magnets pull the remote into the correct position.

The dock charges the display.  in the status bar indicates the battery charge level.

## Undocking the Display


- 1 Tilt the display toward you by pressing the bottom edge of the display inward while pulling the top edge of the display toward you.

This method keeps the bottom of the display seated in the dock and helps to prevent dropping the display.

- 2 After the display releases from the magnet, carefully remove the display from the mount.

## Home Screen

**NOTE:** The home screen layout may vary if it has been customized.

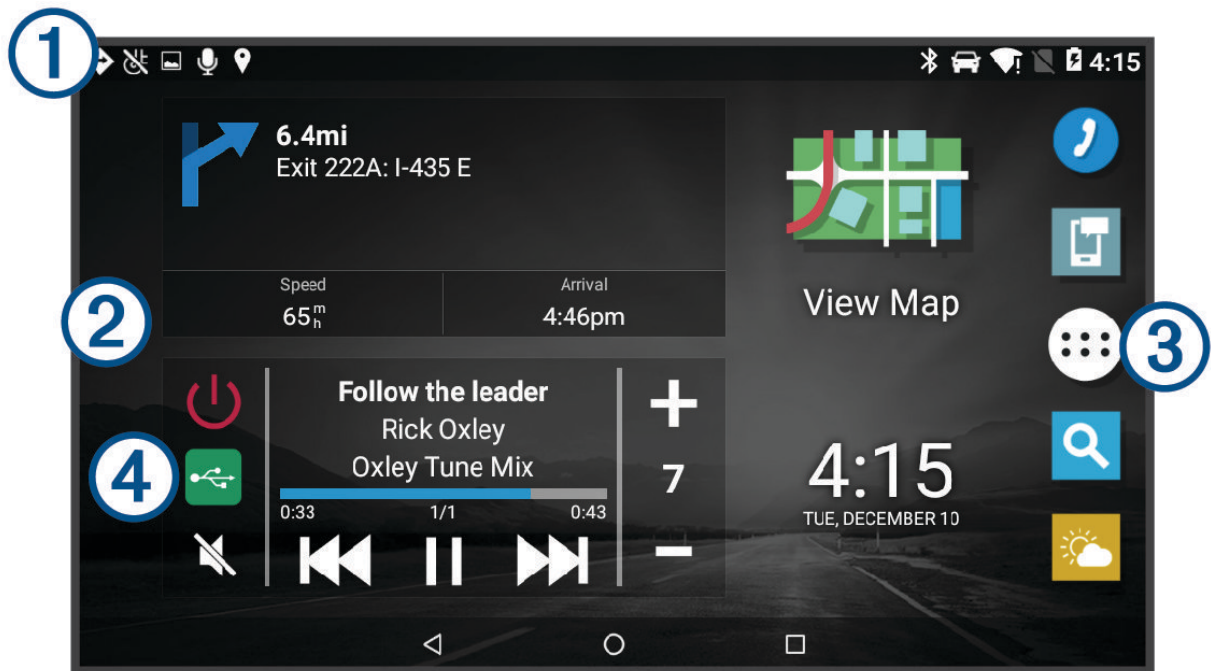

①	Swipe down to view notifications. Swipe down twice to quickly change the settings and backlight brightness.
②	Hold to customize the wallpaper or add widgets to the home screen.
③	Select to open the app drawer. The app drawer contains shortcuts to all of the apps installed on your device.
④	Select media controls to turn the stereo on or off, change stations, change volume, and mute the stereo ( <a href="#">Playback Controls</a> , page 34).

## Opening an App

The home screen contains shortcuts for frequently used apps. The app drawer contains all the apps installed on your device, organized into two tabs. The Navigation tab contains Garmin® apps useful for navigation. The Tools tab contains apps useful for communication, document viewing, and other tasks.

Select an option to start an app:

- Select an app shortcut from the home screen.
- Select , select a tab, and select an app.

## Adding Shortcuts to the Home Screen

- 1 Select .
- 2 Select an app tab to view additional applications.
- 3 Hold an application, and drag it to a location on the home screen.

## Viewing Notifications

 






### ⚠ WARNING

Do not read or reply to notifications while driving. Failure to pay attention to the road could result in an accident involving personal property damage, personal injury, or death.

- 1 Swipe down from the top of the screen.  
The list of notifications appears.
- 2 Select an option:
  - To launch the action or app mentioned in the notification, select the notification.
  - To dismiss a notification, swipe the notification to the right.


## Status Bar Icons

The status bar is located at the top of the main menu. The status bar icons display information about features on the device.

	Location services is enabled ( <a href="#">Enabling or Disabling Location Services, page 62</a> ).
	Bluetooth® technology is enabled.
	Connected to a Bluetooth device.
	Connected to a Wi-Fi® network ( <a href="#">Connecting to a Wireless Network, page 61</a> ).
	Connected to a Wi-Fi network without internet access.
	Active vehicle profile. Swipe down twice and select to view the vehicle profile settings ( <a href="#">Vehicle Profiles, page 6</a> ).
	Battery charge level.

## Acquiring GPS Signals

When you turn on your navigation device, the GPS receiver must collect satellite data and establish the current location. The time required to acquire satellite signals varies based on several factors, including how far you are from the location where you last used your navigation device, whether you have a clear view of the sky, and how long it has been since you last used your navigation device. The first time you turn on your navigation device, it may take several minutes to acquire satellite signals.




- 1 Turn on the device.
- 2 Verify  appears in the status bar, and enable location services if it does not ([Enabling or Disabling Location Services, page 62](#)).
- 3 If necessary, go to an open area with a clear view of the sky, away from tall buildings and trees.  
Acquiring Satellites appears at the top of the navigation map until the device determines your location.

## Using the Touchscreen

- Tap the screen to select an item.
- Drag or swipe your finger across the screen to pan or scroll.
- Pinch two fingers together to zoom out.
- Spread two fingers apart to zoom in.



## Adjusting the Screen Brightness

You can adjust the brightness using either the notification panel or the settings menu.

- 1 Select an option:
  - Swipe down twice from the top of the screen to expand the quick settings in the notification panel.
  - Select  >  >  > **Display > Brightness Level**.
- 2 Use the slider bar to adjust the brightness.

## Video Tutorials

You can view video tutorials to help you start using your device.

Select  >  > **Video Tutorials**.

## Vehicle Profiles

### **WARNING**




Entering your vehicle profile characteristics does not guarantee that your vehicle's characteristics will be accounted for in all route suggestions or that you will receive the warning icons in all cases. Limitations may exist in the map data such that your device cannot account for these restrictions or road conditions in all cases. Always defer to all posted road signs and road conditions when making driving decisions.

Routing and navigation are calculated differently based on your vehicle profile. The activated vehicle profile is indicated by an icon in the status bar. The navigation and map settings on your device can be customized separately for each vehicle type.

When you activate a camper vehicle profile, the device avoids including restricted or impassable areas in routes based on the dimensions, weight, and other characteristics you entered for your vehicle.

## Adding a Vehicle Profile

You should add a vehicle profile for each camper to be used with your device.

- 1 Select  >  > **Vehicle Profile** > .
- 2 Select your vehicle type:
  - To add a motorhome with a permanently attached camper, select **Motorhome**.
  - To add a motorhome pulling a trailer, select **Motorhome with Trailer**.
  - To add a camper pulled behind a passenger vehicle, select **Vehicle with Trailer**.
- 3 If necessary, select your trailer type:
  - To add a camper pulled using a standard hitch, select **Travel Trailer**.
  - To add a camper pulled using a fifth-wheel hitch, select **Fifth Wheel**.  
**NOTE:** This trailer type is not available in all areas.
  - To add a boat trailer pulled using a standard hitch, select **Boat Trailer**.
  - To add a trailer pulled using a standard hitch, select **Trailer**.
- 4 Follow the on-screen instructions to enter the vehicle characteristics.




After you add a vehicle profile, you can edit the profile to enter additional detailed information ([Editing a Vehicle Profile](#), page 7).

## Car Profile

The car profile is a preloaded vehicle profile intended for use in an automobile without a trailer. While using the car profile, the device calculates standard automobile routes, and routing for large vehicles is not available. Some features and settings specific to large vehicles are not available while using the car profile.

## Switching the Vehicle Profile









You can manually switch to another vehicle profile at any time.

- 1 Select an option:
  - Swipe down from the top of the screen, and select the active vehicle profile icon, such as  or .
  - Select  > **Navigation** > **Vehicle Profile**.
- 2 Select a vehicle profile.

The vehicle profile information appears, including measurements and weight.
- 3 Select **Select**.

## Editing a Vehicle Profile

You can change basic vehicle profile information or add detailed information to a vehicle profile, such as maximum speed.

- 1 Select  >  >  > **Navigation** > **Vehicle Profile**.
- 2 Select the vehicle profile to edit.
- 3 Select an option:
  - To edit the vehicle profile information, select , and select a field to edit.
  - To rename a vehicle profile, select  >  > **Rename Profile**.
  - To delete the vehicle profile, select  >  > **Delete**.

## Driver Awareness Features and Alerts

### NOTICE

The driver alerts and speed limit features are for information only and do not replace your responsibility to abide by all posted speed limit signs and to use safe driving judgment at all times. Garmin is not responsible for any traffic fines or citations you receive for failing to follow all applicable traffic laws and signs.

Your device provides features that can help encourage safer driving and increase efficiency, even when you are driving in a familiar area. The device plays an audible tone or message and displays information for each alert. You can enable or disable the audible tone for some types of driver alerts. Not all alerts are available in all areas.

**Schools:** The device plays a tone and displays the distance to and speed limit (if available) for an upcoming school or school zone.

**Speed limit reduction:** The device plays a tone and displays the upcoming reduced speed limit so you can be prepared to reduce your speed.

**Speed limit exceeded:** The device plays a tone and displays a red border on the speed limit icon when you exceed the posted speed limit for the current road.

**Speed limit change:** The device plays a tone and displays the upcoming speed limit so you can be prepared to adjust your speed.

**Railroad crossing:** The device plays a tone and displays the distance to an upcoming railroad crossing.

**Animal crossing:** The device plays a tone and displays the distance to an upcoming animal crossing area.

**Curves:** The device plays a tone and displays the distance to a curve in the road.

**Slower traffic:** The device plays a tone and displays the distance to slower traffic when you approach slower traffic at a higher speed. Your device must be receiving traffic information to use this feature ([Traffic](#), page 55).

**No trucks allowed:** The device plays a tone when you approach a road where no trucks are allowed.

**Risk of grounding:** The device plays a tone and displays a message when you approach a road where your vehicle could become grounded.

**Lateral wind:** The device plays a tone and displays a message when you approach a road where there is risk of lateral wind.

**Narrow road:** The device plays a tone and displays a message when you approach a road that may be too narrow for your vehicle.




**Steep hill:** The device plays a tone and displays a message when you approach a steep hill.

**State and country borders:** The device plays a tone and displays a message when you approach the border of a state or country.

**Shut off propane:** The device plays a tone and displays a message when you approach an area where propane should be turned off.

## Enabling or Disabling Driver Alerts

You can enable or disable several types of driver alerts.

- 1 Select  >  >  > **Navigation > Driver Assistance > Audible Driver Alerts.**
- 2 Select or clear the check box next to each alert.

## Red Light and Speed Cameras

### NOTICE

Garmin is not responsible for the accuracy of or the consequences of using a red light or speed camera database.

**NOTE:** This feature is not available for all regions or product models.

Information about red light and speed camera locations is available in some areas for some product models. The device alerts you when you approach a reported speed or red light camera.

- In some areas, your device can receive live red light and speed camera data while connected to a smartphone running the Garmin Drive™ app.
- You can use the Garmin Express™ software ([garmin.com/express](http://garmin.com/express)) to update the camera database stored on your device. You should update your device frequently to receive the most up-to-date camera information.



## Navigating to Your Destination

### Routes

A route is a path from your current location to one or more destinations.

- The device calculates a recommended route to your destination based on the preferences you set, including the route calculation mode ([Changing the Route Calculation Mode, page 12](#)) and avoidances ([Avoiding Delays, Tolls, and Areas, page 13](#)).
- The device can automatically avoid roads that are not appropriate for the active vehicle profile.
- You can start navigating to your destination quickly using the recommended route, or you can select an alternate route ([Starting a Route, page 8](#)).
- If there are specific roads you need to use or avoid, you can customize the route.
- You can add multiple destinations to a route ([Adding a Location to Your Route, page 11](#)).

### Starting a Route

- 1 Select  and search for a location ([Finding and Saving Locations, page 15](#)).
- 2 Select a location.
- 3 Select an option:
  - To start navigating using the recommended route, select **Go!**.
  - To choose an alternate route, select , and select a route.

Alternate routes appear to the right of the map.

The device calculates a route to the location and guides you using voice prompts and information on the map ([Your Route on the Map, page 9](#)). A preview of the major roads in your route appears at the edge of the map for several seconds.

If you need to stop at additional destinations, you can add the locations to your route ([Adding a Location to Your Route, page 11](#)).



## Starting a Route by Using the Map

You can start route by selecting a location from the map.

- 1 Select **View Map**.
- 2 Drag and zoom the map to display the area to search.
- 3 If necessary, select **Q** to filter the displayed points of interest by category. Location markers (📍 or a blue dot) appear on the map.
- 4 Select an option:
  - Select a location marker.
  - Select a point, such as a street, intersection, or address location.
- 5 Select **Go!**.

## Going Home

The first time you start a route home, the device prompts you to enter your home location.


- 1 Select **Q** > **Go Home**.
- 2 If necessary, enter your home location.

## Editing Your Home Location

- 1 Select **Q** > **≡** > **Set Home Location**.
- 2 Enter your home location.

## Your Route on the Map


As you travel, the device guides you to your destination using voice prompts and information on the map. Instructions for your next turn or exit, or other actions appear across the top of the map.

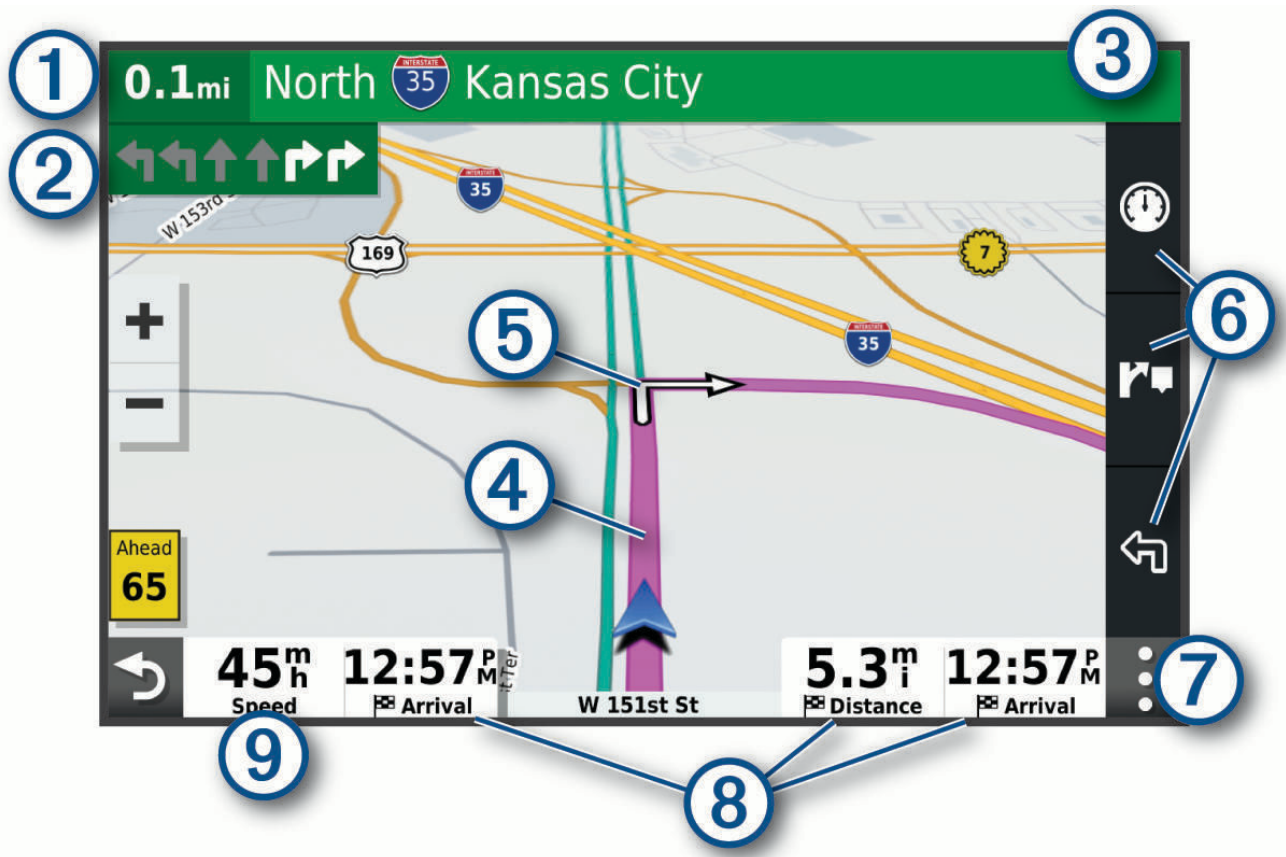

①	Distance to the next action.
②	Next action in the route. Indicates the next turn, exit, or other action and the lane in which you should travel, if available.
③	Name of the street or exit associated with the next action.
④	Route highlighted on the map.
⑤	Next action in the route. Arrows on the map indicate the location of upcoming actions.
⑥	Map tool shortcuts.
⑦	Map tools. You can select the tools to show you more information about your route and surroundings.
⑧	Data fields. <b>TIP:</b> You can touch these fields to change the information they show ( <a href="#">Changing the Map Data Field</a> , page 27).
⑨	Vehicle speed.

## Active Lane Guidance


As you approach some turns, exits, or interchanges in your route, a detailed simulation of the road appears beside the map, if available. A colored line ① indicates the proper lane for the turn.

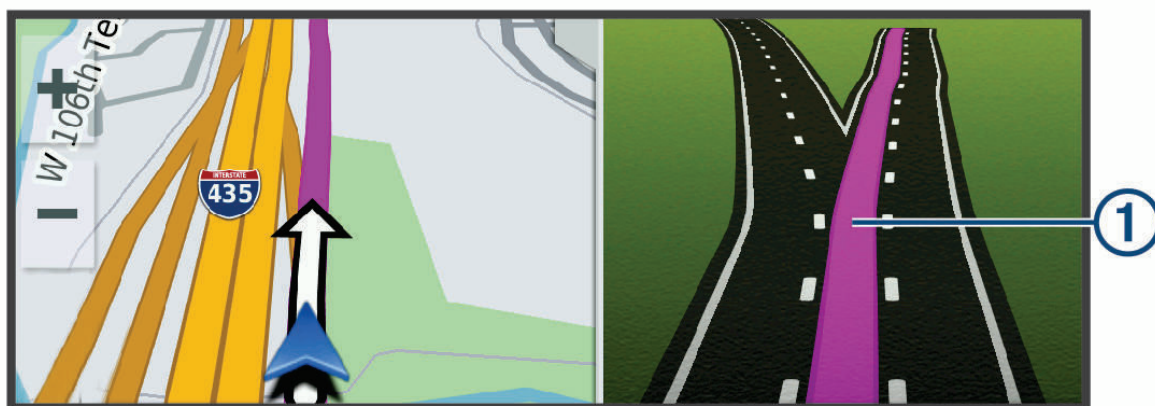

## Viewing Turns and Directions

While navigating a route, you can view upcoming turns, lane changes, or other directions for your route.

1 From the map, select an option:


- To view upcoming turns and directions as you navigate, select  > **Turns**.  
The map tool displays the next four turns or directions beside the map. The list updates automatically as you navigate the route.
- To view the complete list of turns and directions for the entire route, select the text bar at the top of the map.

2 Select a turn or direction (optional).

Detailed information appears. An image of the junction may appear for junctions on major roadways, if available.


## Viewing the Entire Route on the Map

1 While navigating a route, select anywhere on the map.

2 Select .

## Arriving at Your Destination

When you approach your destination, the device provides information to help you complete your route.

-  indicates the location of your destination on the map, and a voice prompt announces you are approaching your destination.
- When you stop at your destination, the device automatically ends the route. If the device does not detect your arrival automatically, you can select Stop to end your route.



## Changing Your Active Route

### Adding a Location to Your Route

Before you can add a location to your route, you must be navigating a route ([Starting a Route, page 8](#)).

You can add locations to the middle or end of your route. For example, you can add a fuel station as the next destination in your route.

**TIP:** To create complex routes with multiple destinations or scheduled stops, you can use the trip planner to plan, schedule, and save a trip ([Planning a Trip, page 57](#)).

1 From the map, select  > .

2 Search for a location ([Finding and Saving Locations, page 15](#)).

3 Select a location.

4 Select **Go!**.

5 Select an option:

- To add the location as the next destination in your route, select **Add As Next Stop**.
- To add the location to the end of your route, select **Add As Last Stop**.
- To add the location and edit the order of destinations in your route, select **Add to Active Route**.

The device re-calculates the route to include the added location and guides you to the destinations in order.


## Shaping Your Route

Before you can shape your route, you must start a route ([Starting a Route, page 8](#)).

You can manually shape your route to change its course. This allows you to direct the route to use a certain road or go through a certain area without adding a destination to the route.

1 Touch anywhere on the map.

2 Select **Shape Route**.

**TIP:** You can select  to zoom in on the map and select a more precise location.

The device enters route shaping mode and recalculates the route to travel through the selected location.

3 Select **Go!**.

4 If necessary, select an option:

- To add more shaping points to the route, select additional locations on the map.
- To remove a shaping point, select the shaping point and select **Remove**.

## Taking a Detour

You can take a detour for a specified distance along your route or detour around specific roads. This is useful if you encounter construction zones, closed roads, or poor road conditions.

1 From the map, select  > **Edit Route**.

2 Select an option:

- To detour your route for a specific distance, select **Detour by Distance**.
- To detour around a specific road on the route, select **Detour by Road**.




## Changing the Route Calculation Mode

1 Select  >  >  > **Navigation** > **Route Preferences** > **Calculation Mode**.

2 Select an option:

- Select **Faster Time** to calculate routes that are faster to drive but can be longer in distance.
- Select **Off Road** to calculate point-to-point routes (without roads).
- Select **Shorter Distance** to calculate routes that are shorter in distance but can take more time to drive.

## Stopping the Route

- From the map, select  > .
- From the notification bar, swipe down, and select  in the **Garmin Navigation** notification.

## Using Suggested Routes

Before you can use this feature, you must save at least one location and enable the travel history feature ([Route Preference Settings, page 60](#)).

Using the myTrends™ feature, your device predicts your destination based on your travel history, the day of the week, and the time of day. After you have driven to a saved location several times, the location may appear in the navigation bar on the map, along with the estimated time of travel, and traffic information.


Select the navigation bar to view a suggested route to the location.

## Avoiding Delays, Tolls, and Areas

### Avoiding Traffic Delays on Your Route




Before you can avoid traffic delays, you must be receiving traffic information ([Receiving Traffic Data Using Your Smartphone, page 55](#)).

By default, the device optimizes your route to avoid traffic delays automatically. If you have disabled this option in the traffic settings ([Traffic Settings, page 60](#)), you can view and avoid traffic delays manually.

- 1 While navigating a route, select  > **Traffic**.
- 2 Select **Alternate Route**, if available.
- 3 Select **Go!**.

### Avoiding Toll Roads




Your device can avoid routing you through areas that require tolls, such as toll roads, toll bridges, or congestion areas. The device may still include a toll area in your route if no other reasonable routes are available.

- 1 Select  >  >  > **Navigation > Route Preferences**.
- 2 Select an option:  
**NOTE:** The menu changes based on your area and the map data on your device.
  - Select **Toll Roads**.
  - Select **Tolls and Fees > Toll Roads**.
- 3 Select an option:
  - To be asked each time before routing through a toll area, select **Always Ask**.
  - To always avoid tolls, select **Avoid**.
  - To always allow tolls, select **Allow**.
- 4 Select **Save**.




### Avoiding Toll Stickers

If the map data on your device contains detailed toll sticker information, you can avoid or allow roads that require toll stickers for each country.

**NOTE:** This feature is not available in all areas.




- 1 Select  >  >  > **Navigation > Route Preferences > Tolls and Fees > Toll Stickers**.
- 2 Select a country.
- 3 Select an option:
  - To be asked each time before routing through an area that requires toll stickers, select **Always Ask**.
  - To always avoid roads that require toll stickers, select **Avoid**.
  - To always allow roads that require toll stickers, select **Allow**.
- 4 Select **Save**.

### Avoiding Road Features

- 1 Select  >  >  > **Navigation > Route Preferences > Avoidances**.
- 2 Select the road features to avoid on your routes, and select **OK**.

## Avoiding Environmental Zones




Your device can avoid areas with environmental or emissions restrictions that may apply to your vehicle. This option applies to the vehicle type in the active vehicle profile ([Vehicle Profiles, page 6](#)).

- 1 Select  >  >  > **Navigation > Route Preferences > Environmental Zones**.
- 2 Select an option:
  - To be asked each time before routing through an environmental zone, select **Always Ask**.
  - To always avoid environmental zones, select **Avoid**.
  - To always allow environmental zones, select **Allow**.
- 3 Select **Save**.




## Custom Avoidances

Custom avoidances allow you select specific areas or sections of road to avoid. When the device calculates a route, it avoids these areas and roads unless no other reasonable route is available.

### Avoiding a Road





- 1 Select  >  >  > **Navigation > Route Preferences > Custom Avoidances**.
- 2 If necessary, select **Add Avoidance**.
- 3 Select **Add Avoid Road**.
- 4 Select the starting point of the section of road to avoid, and select **Next**.
- 5 Select the ending point of the road section, and select **Next**.
- 6 Select **Done**.

### Avoiding an Area






- 1 Select  >  >  > **Navigation > Route Preferences > Custom Avoidances**.
- 2 If necessary, select **Add Avoidance**.
- 3 Select **Add Avoid Area**.
- 4 Select the upper-left corner of the area to avoid, and select **Next**.
- 5 Select the lower-right corner of the area to avoid, and select **Next**.  
The selected area is shaded on the map.
- 6 Select **Done**.

### Disabling a Custom Avoidance

You can disable a custom avoidance without deleting it.

- 1 Select  >  >  > **Navigation > Route Preferences > Custom Avoidances**.
- 2 Select an avoidance.
- 3 Select  > **Disable**.

### Deleting Custom Avoidances

- 1 Select  >  >  > **Navigation > Route Preferences > Custom Avoidances**.
- 2 Select an option:
  - To delete all custom avoidances, select .
  - To delete one custom avoidance, select the avoidance, and select  > **Delete**.

# Finding and Saving Locations

The maps loaded in your device contain locations, such as restaurants, hotels, auto services, and detailed street information. The **Q** menu helps you find your destination by providing several methods to browse, search, and save this information.

- Enter search terms to quickly search all location information ([Finding a Location Using the Search Bar, page 16](#)).
- Browse or search pre-loaded points of interest by category ([Points of Interest, page 15](#)).
- Use search tools to find specific locations, such as addresses, intersections, or geographic coordinates ([Search Tools, page 19](#)).
- Search near a different city or area ([Changing the Search Area, page 19](#)).
- Save your favorite locations to find them quickly in the future ([Saving Locations, page 21](#)).
- Return to recently found locations ([Viewing Recently Found Locations, page 20](#)).

## Points of Interest

### NOTICE

You are responsible for understanding and complying with any applicable rules, laws, or regulations associated with points of interest.

A point of interest is a place that you may find useful or interesting. Points of interest are organized by category and can include popular travel destinations such as gas stations, restaurants, hotels, and entertainment venues.

## Tripadvisor®

### NOTICE

Garmin is not responsible for the accuracy or timeliness of the Tripadvisor information.

You are responsible for understanding and complying with any applicable rules, laws, or regulations associated with points of interest.

Your device includes Tripadvisor traveler ratings. Tripadvisor ratings appear automatically in the search results list for restaurants, hotels, and attractions. You can also search for nearby Tripadvisor points of interest and sort by distance or popularity.

## Finding Tripadvisor Points of Interest

- 1 Select **Q** > **Tripadvisor**.
- 2 Select a category.  
A list of nearby Tripadvisor points of interest for the category appears.
- 3 Select **Sort Results** to sort the search results by distance or popularity (optional).

## Foursquare®

### NOTICE

Garmin is not responsible for the accuracy or timeliness of information provided by Foursquare.

You are responsible for understanding and complying with any applicable rules, laws, or regulations associated with points of interest.

Foursquare is a location-based social network. Your device includes millions of pre-loaded Foursquare points of interest, which are indicated by the Foursquare logo in your location search results.


## Searching Foursquare Points of Interest

You can search for Foursquare points of interest loaded on your device.

Select **Q** > **Foursquare®**.

## Viewing Foursquare Location Details

You can view Foursquare location information and user ratings.


- 1 From the location search results, select a Foursquare point of interest.
- 2 Select .

## Finding iOverlander™ Points of Interest

### NOTICE

You are responsible for understanding and complying with any applicable regulations associated with campsites and points of interest.

Your device includes iOverlander points of interest, which allow you to find points of interest useful for overlanding, such as camp sites, repair services, and lodging.

- 1 Select  > **iOverlander**.
- 2 Select a category.
- 3 Select a location.


## Finding Campgrounds

Select  > **All Campgrounds**.

## Finding RV Parks

**NOTE:** This feature is not available in all areas.

You can search for RV parks based on the amenities available.

- 1 Select  > **PlanRV Parks**.
- 2 If necessary, select **Filter by Amenities**, select one or more amenities, and select **Save**.
- 3 Select a location.

## Finding RV Services



**NOTE:** This feature is not available in all areas.

You can find nearby locations that offer repair, towing, and other services for RVs.

Select  > **PlanRV Services**.

## Finding a Location Using the Search Bar



You can use the search bar to search for locations by entering a category, brand name, address, or city name.

- 1 Select .
- 2 Select **Enter Search** in the search bar.
- 3 Enter all or part of the search term.  
Suggested search terms appear below the search bar.
- 4 Select an option:
  - To search for a type of business, enter a category name (for example, "movie theaters").
  - To search for a business name, enter all or part of the name.
  - To search for an address near you, enter the house number and street name.
  - To search for an address in another city, enter the house number, street name, city, and state.
  - To search for a city, enter the city and state.
  - To search for coordinates, enter latitude and longitude coordinates.
- 5 Select an option:
  - To search using a suggested search term, select the term.
  - To search using the text you entered, select .
- 6 If necessary, select a location.




## Finding an Address

**NOTE:** The order of the steps may change depending on the map data loaded on your device.


- 1 Select .
- 2 If necessary, select  to search near a different city or area.
- 3 Select **Address**.
- 4 Follow the on-screen instructions to enter address information.
- 5 Select the address.

## Finding a Location by Category

- 1 Select .
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select a location.


## Searching Within a Category

After you have performed a search for a point of interest, certain categories may display a Quick Search list that shows the last four destinations you selected.

- 1 Select  > **Categories**.
- 2 Select a category.
- 3 Select an option:
  - Select a destination from the quick search list on the right side of the screen.  
The quick search list provides a list of recently found locations in the selected category.
  - Select a subcategory, if necessary, and select a destination.

## Location Search Results

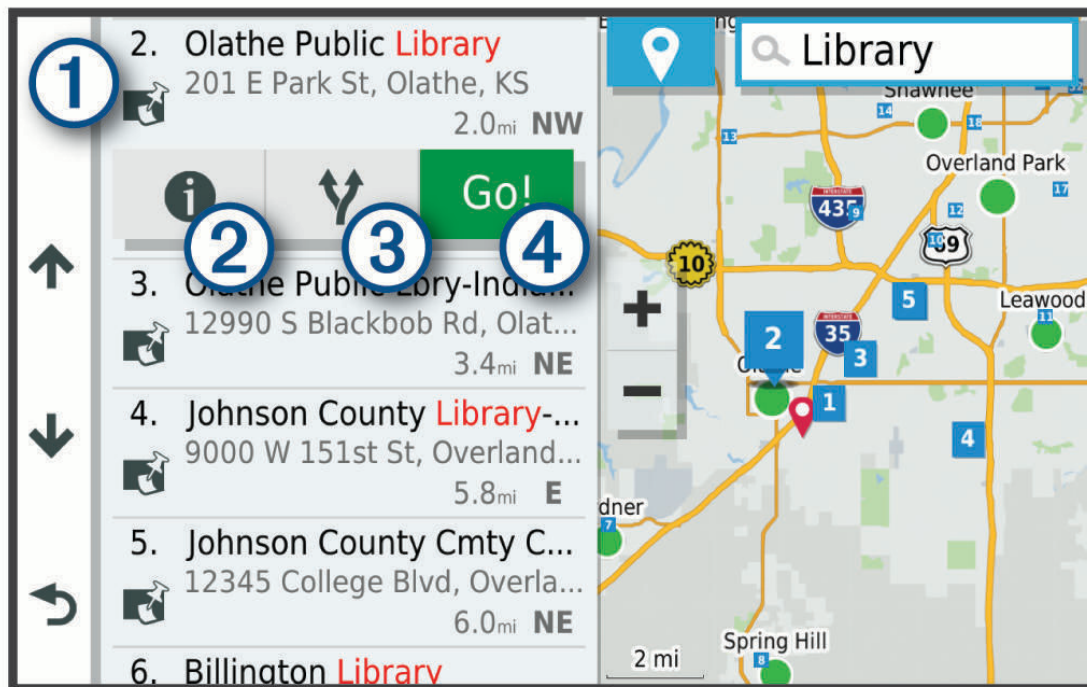


The location search results appear in a list, with the nearest location at the top. Each numbered location also appears on the map. You can scroll down to view more results.




①	Select a location to view the option menu.
② i	Select to view detailed information about the location.
③ Y	Select to view alternate routes to the location.
④ Go!	Select to start navigating to the location using the recommended route.



## Changing the Search Area

By default, the device searches for locations near your current location. You can also search other areas, such as near your destination, near another city, or along your active route.

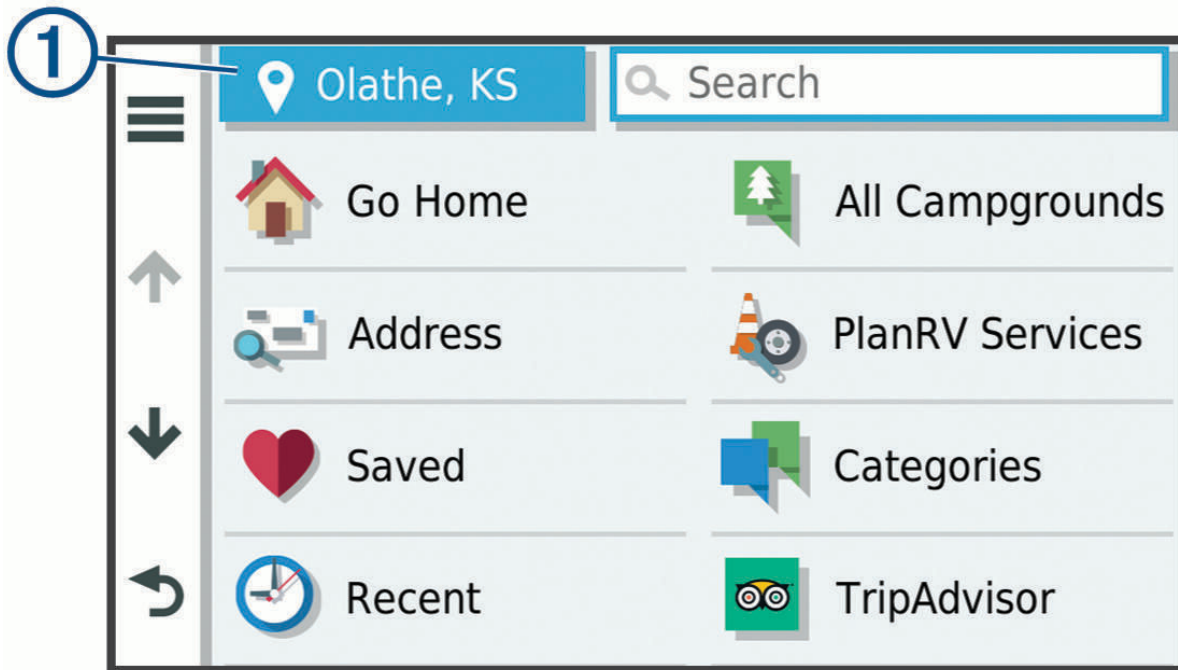- 1 Select .
- 2 Select  next to the current search area .



- 3 Select a search area.
- 4 If necessary, follow the on-screen instructions to select a specific location.

The selected search area appears next to . When you search for a location using any of the options in the  menu, the device suggests locations near this area first.

## Custom Points of Interest

Custom POIs are customized points on the map. They can contain alerts that let you know if you are near a designated point or if you are traveling faster than a specified speed.


### Installing POI Loader

You can create or download custom POI lists on your computer and install them on your device using POI Loader software.

- 1 Go to [www.garmin.com/poiloader](http://www.garmin.com/poiloader).
- 2 Follow the on-screen instructions.

### Finding Custom POIs

Before you can find custom POIs, you must load custom POIs on your device using the POI Loader software ([Installing POI Loader, page 19](#)).


- 1 Select  > **Categories**.
- 2 Scroll to the Other Categories section, and select a category.

## Search Tools

Search tools allow you to search for specific types of locations by responding to on-screen prompts.



## Finding an Intersection

You can search for an intersection or junction between two streets, highways, or other roads.

- 1 Select  > **Intersections**.
- 2 Follow the on-screen instructions to enter street information.
- 3 Select the intersection.

## Finding a Location Using Coordinates

You can find a location using latitude and longitude coordinates.

- 1 Select  > **Coordinates**.
- 2 If necessary, select , and change the coordinate format or datum.
- 3 Enter the latitude and longitude coordinates.
- 4 Select **View on Map**.

## Viewing Recently Found Locations

Your device stores a history of the last 50 locations you have found.

Select  > **Recent**.

## Clearing the List of Recently Found Locations

Select  > **Recent** >  > **Clear** > **Yes**.

## Viewing Current Location Information

You can use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.

From the map, select the vehicle.


## Finding Emergency Services and Fuel

You can use the Where Am I? page to find the nearest hospitals, police stations, and fuel stations.

- 1 From the map, select the vehicle.
- 2 Select **Hospitals**, **Police Stations**, **Fuel**, or **Roadside Assist**.


**NOTE:** Some service categories are not available in all areas.

A list of locations for the selected service appears, with the nearest locations at the top.

- 3 Select a location.
- 4 Select an option:
  - To navigate to the location, select **Go!**.
  - To view the phone number and other location details, select .

## Getting Directions to Your Current Location

If you need to tell another person how to get to your current location, your device can give you a list of directions.



- 1 From the map, select the vehicle.
- 2 Select  > **Directions to Me**.
- 3 Select a starting location.
- 4 Select **Select**.

## Adding a Shortcut

You can add shortcuts to the Where To? menu. A shortcut can point to a location, a category, or a search tool. The Where To? menu can contain up to 36 shortcut icons.


- 1 Select  > **Add Shortcut**.
- 2 Select an item.

## Removing a Shortcut

- 1 Select  >  > **Remove Shortcut(s)**.
- 2 Select a shortcut to remove.
- 3 Select the shortcut again to confirm.
- 4 Select **Done**.

## Saving Locations




### Saving a Location

- 1 Search for a location (*[Finding a Location by Category](#), page 17*).
- 2 From the search results, select a location.
- 3 Select  > **Save**.
- 4 Enter a name, and select **Done**.

### Saving Your Current Location

- 1 From the map, select the vehicle icon.
- 2 Select **Save**.
- 3 Enter a name, and select **Done**.
- 4 Select **OK**.




### Editing a Saved Location

- 1 Select  > **Saved**.
- 2 If necessary, select a category.
- 3 Select a location.
- 4 Select .
- 5 Select  > **Edit**.
- 6 Select an option:
  - Select **Name**.
  - Select **Phone Number**.
  - Select **Categories** to assign categories to the saved location.
  - Select **Change Map Symbol** to change the symbol used to mark the saved location on a map.
- 7 Edit the information.
- 8 Select **Done**.

## Assigning Categories to a Saved Location



You can add custom categories to organize your saved locations.

**NOTE:** Categories appear in the saved locations menu after you have saved at least 12 locations.

- 1 Select  > **Saved**.
- 2 Select a location.
- 3 Select .
- 4 Select  > **Edit** > **Categories**.
- 5 Enter one or more category names, separated by commas.
- 6 If necessary, select a suggested category.
- 7 Select **Done**.





## Deleting a Saved Location

**NOTE:** Deleted locations cannot be recovered.

- 1 Select  > **Saved**.
- 2 Select  > **Delete Saved Places**.
- 3 Select the box next to the saved locations to delete, and select **Delete**.

## Using the Map

You can use the map to navigate a route ([Your Route on the Map, page 9](#)) or to view a map of your surroundings when no route is active.

- 1 Select **View Map**.
- 2 Touch anywhere on the map.
- 3 Select an option:
  - Drag the map to pan left, right, up, or down.
  - To zoom in or out, select  or .
  - To switch between North Up and 3-D views, select .
  - To filter the displayed points of interest by category, select .
  - To start a route, select a location on the map, and select **Go!** ([Starting a Route by Using the Map, page 9](#)).

## Map Tools

Map tools provide quick access to information and device functions while you view the map. When you activate a map tool, it appears in a panel at the edge of the map.

**Stop:** Stops navigation of the active route.

**Edit Route:** Allows you to take a detour or skip locations in your route.

**Mute:** Mutes navigation prompts.

**Cities Ahead:** Displays a list of upcoming cities along the route.

**Up Ahead:** Displays upcoming locations along the route or the road on which you are traveling ([Up Ahead](#), [page 23](#)).

**Elevation:** Displays elevation changes ahead.

**photoLive:** Displays photoLive cameras along your route, where available.

**Traffic:** Displays traffic conditions along your route or in your area ([Viewing Upcoming Traffic](#), [page 26](#)).

**Trip Data:** Displays customizable trip data, such as speed or mileage ([Viewing Trip Data from the Map](#), [page 26](#)).



**Turns:** Displays the turns in the route.

**Fusion Media:** Displays current song or media information and controls.

**Phone:** Displays phone information for hands-free calling.

**Weather:** Displays weather information along your route.

## Viewing a Map Tool


- 1 From the map, select .
- 2 Select a map tool.  
The map tool appears in a panel at the edge of the map.
- 3 When you are done using the map tool, select .

## Up Ahead

The Up Ahead tool provides information about upcoming locations along your route or the road on which you are traveling. You can view upcoming points of interest by category, such as restaurants, fuel stations, or rest areas.



You can customize three categories to show in the Up Ahead tool.

## Viewing Upcoming Locations


- 1 From the map, select  > **Up Ahead**.  
While you are traveling, the map tool shows the next location along your road or route in each of the three categories. While you are not traveling, the map tool shows the three category names.
- 2 Select an option:
  - If the map tool shows categories, select a category to view a list of nearby locations in that category.
  - If the map tool shows upcoming locations, select a location to view location details or start a route to the location.

## Customizing the Up Ahead Categories

You can change the location categories that appear in the Up Ahead tool.

- 1 From the map, select  > **Up Ahead**.
- 2 Select a category.
- 3 Select .
- 4 Select an option:
  - To move a category up or down in the list, select and drag the arrow next to the category name.
  - To change a category, select the category.
  - To create a custom category, select a category, select **Custom Search**, and enter the name of a business or category.
- 5 Select **Save**.

## Viewing Upcoming Cities and Exit Services

- 1 From the map, select  > **Cities Ahead**.

While you are traveling along a highway or an active route, the map tool shows information about upcoming cities and exits.
- 2 Select a city.

The device shows a list of points of interest located at the selected city exit, such as fuel stations, lodging, or restaurants.
- 3 Select a location, and select **Go!** to start navigating.

## Warning and Alert Symbols
















### **WARNING**

Entering your vehicle profile characteristics does not guarantee that your vehicle's characteristics will be accounted for in all route suggestions or that you will receive the warning icons in all cases. Limitations may exist in the map data such that your device cannot account for these restrictions or road conditions in all cases. Always defer to all posted road signs and road conditions when making driving decisions.







Warning and alert symbols may appear on the map or in route directions to alert you to potential hazards and road conditions.





## Restriction Warnings

	Height
	Weight
	Length
	Width
	Trailer height
	Trailer weight
	Trailer length
	Trailer width
	No boat trailers allowed
	No campers allowed
	No trailers allowed
	No propane
	No left turn
	No right turn
	No U turn

## Road Condition Warnings


	Risk of grounding
	Lateral wind
	Narrow road
	Sharp curve
	Steep down hill
	Tree overhang

## Alerts


	Weigh station
	Road not verified for trucks

## Trip Information

### Viewing Trip Data from the Map

From the map, select  > **Trip Data**.

### Customizing the Trip Data Fields

- 1 From the map, select  > **Trip Data**.
- 2 Select a trip data field.
- 3 Select an option.

The new trip data field appears in the trip data map tool.

### Viewing the Trip Information Page

The trip information page displays your speed and provides statistics about your trip.


From the map, select **Speed**.

### Viewing the Trip Log

Your device keeps a trip log, which is a record of the path you have traveled.

- 1 Select  >  >  > **Navigation** > **Map & Vehicle** > **Map Layers**.
- 2 Select the **Trip Log** check box.


### Resetting Trip Information

- 1 From the map, select **Speed**.
- 2 Select  > **Reset Field(s)**.
- 3 Select an option:
  - When not navigating a route, select **Select All** to reset every data field except the speedometer, on the first page.
  - Select **Reset Trip Data** to reset the information on the trip computer.
  - Select **Reset Max. Speed** to reset the maximum speed.
  - Select **Reset Trip B** to reset the odometer.

## Viewing Upcoming Traffic

Before you can use this feature, your device must be receiving traffic data ([Traffic](#), page 55).

You can view traffic incidents coming up along your route or along the road on which you are traveling.

- 1 While navigating a route, select  > **Traffic**.



The nearest upcoming traffic incident appears in a panel on the right side of the map.
- 2 Select the traffic incident to view additional details.

### Viewing Traffic on the Map

The traffic map shows color-coded traffic flow and delays on nearby roads.

- 1 From the main menu, select  >  > **Traffic**.
- 2 If necessary, select  > **Legend** to view the legend for the traffic map.




## Searching for Traffic Incidents

- 1 From the main menu, select  > **Traffic**.
- 2 Select  > **Incidents**.
- 3 Select an item in the list.
- 4 If there is more than one incident, use the arrows to view additional incidents.

## Customizing the Map

### Customizing the Map Layers




You can customize which data appear on the map, such as icons for points of interest and road conditions.

- 1 Select  >  >  > **Navigation > Map & Vehicle > Map Layers**.
- 2 Select the check box next to each layer you want to show on the map.

### Changing the Map Data Field

- 1 From the map, select a data field.  
**NOTE:** You cannot customize Speed.
- 2 Select a type of data to display.

### Changing the Map Perspective

- 1 Select  >  >  > **Navigation > Map & Vehicle > Driving Map View**.
- 2 Select an option:
  - Select **Track Up** to display the map in two dimensions (2-D), with your direction of travel at the top.
  - Select **North Up** to display the map in 2-D with north at the top.
  - Select **3-D** to display the map in three dimensions.

## Live Services, Traffic, and Smartphone Features

The Garmin Drive app allows your device to receive smart notifications and live information, such as live traffic data and weather information.

**Live traffic data:** Sends real-time traffic data to your device, such as traffic incidents and delays, construction zones, and road closings ([Traffic, page 55](#)).

**Weather information:** Sends real-time weather forecasts, road conditions, and weather radar to your device ([Viewing the Weather Forecast, page 58](#)).

**Hands-Free calling:** Allows you to place and receive phone calls using your device, and allows you to use the device as a hands-free speaker phone.

**Send locations to device:** Allows you to send locations from your smartphone to your navigation device.

## Pairing with Your Smartphone

You can pair your Vio device with your smartphone and the Garmin Drive app to enable additional features and access live information ([Live Services, Traffic, and Smartphone Features, page 27](#)).

**NOTE:** This connection enables live services and traffic features. To use your phone for hands-free calling, or to use it as a Bluetooth media source, you must pair it separately in the Music app ([Connecting a Compatible Bluetooth Device, page 39](#)).

- 1 From the app store on your smartphone, install the Garmin Drive app.
- 2 Turn on your Vio device, and place the device and your smartphone within 3 m (10 ft.) of each other.
- 3 On your phone, open the Garmin Drive app.
- 4 Follow the on-screen instructions to sign in to a Garmin account and complete the pairing and setup process.

The main app dashboard appears. After the devices are paired, they connect automatically when they are turned on and within range.

## Smart Notifications

While your device is connected to the Garmin Drive app, you can view notifications from your smartphone on your Vio device, such as text messages, incoming calls, and calendar appointments.

## Receiving Notifications

### WARNING

Do not read or reply to notifications while driving. If you do so, you could become distracted by the display, which could lead to an accident causing serious personal injury or death.

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app ([Pairing with Your Smartphone, page 28](#)).

From most pages, a popup appears when the device receives a notification from your smartphone. If the device is moving, you must verify you are a passenger and not the driver before you can view notifications.

**NOTE:** If you are viewing the map, notifications appear in a map tool.

- To ignore a notification, select **OK**.  
The popup closes, but the notification remains active on your phone.
- To view a notification, select **View**.
- To listen to the notification, select **View > Play**.  
The device reads the notification using text-to-speech technology. This feature is not available for all languages.
- To perform additional actions, such as dismissing the notification from your phone, select **View**, and select an option.

**NOTE:** Additional actions are available for only some notification types and must be supported by the app generating the notification.

## Receiving Notifications while Viewing the Map

### WARNING

Do not read or reply to notifications while driving. If you do so, you could become distracted by the display, which could lead to an accident causing serious personal injury or death.

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app (*Pairing with Your Smartphone*, page 28).

When you are viewing the map, new notifications appear in a map tool at the edge of the screen. If the device is moving, you must verify you are a passenger and not the driver before you can view notifications.


- To ignore a notification, select , or wait for popup to expire.

The popup closes, but the notification remains active on your phone.

- To view a notification, select the notification text.
- To listen to the notification, select **Play Message**.

The device reads the notification using text-to-speech technology. This feature is not available for all languages.

- To listen to the notification using a voice command, say **Play Message**.

**NOTE:** This option is available only when the selected language supports the voice command feature and  appears in the map tool.


## Viewing the List of Notifications

You can view a list of all active notifications.

- 1 Select  >  > **Smart Notifications**.

The list of notifications appears. Unread notifications appear black, and previously read notifications appear gray.

- 2 Select an option:

- To view a notification, select the notification description.
- To listen to a notification, select .

The device reads the notification using text-to-speech technology. This feature is not available for all languages.

## Going to an Address or Location Using the Garmin Drive App

You can use the Garmin Drive app to search for an address, business, or point of interest, and send it to your Vizio device for navigation.

- 1 From the Garmin Drive app, select **Where To?**.

- 2 Select an option:

- To search for an address near you, enter the house number and street name.
- To search for an address in another city, enter the house number, street name, city, and state.
- To search for a business name, enter all or part of the name.
- To search for a city, enter the city and state.

As you type, suggestions appear below the search field.

- 3 Select a suggested search result.

The app displays the location on a map.

- 4 Select **Go!** to start a route.






The Vizio device starts navigating to the selected location, and the location is added to your recent searches in the Where To? menu.

## Hands-Free Calling

**NOTE:** While most phones and headsets are supported and can be used, it cannot be guaranteed that a particular phone or headset can be used. All features may not be available for your phone.

Using Bluetooth wireless technology, your device can connect to your mobile phone and wireless headset or helmet to become a hands-free device. To determine whether your device with Bluetooth technology is compatible with your device, go to [www.garmin.com/bluetooth](http://www.garmin.com/bluetooth).

### Placing a Call



- 1 Select .
- 2 Select an option:
  - To dial a number, select , enter the phone number, and select .
  - To call a recently dialed or received phone number, select , and select a number.
  - To call a contact from your phone book, select , and select a contact.

### Receiving a Call

When you receive a call, select **Answer** or **Dismiss**.

### Using the Call History


Your call history is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the call history to be available. Some phones do not support this feature.



- 1 Select  > .
- 2 Select a category.

A list of calls appears, with the most recent calls at the top.
- 3 Select a call.


### Using In-Call Options

In-call options appear when you answer a call. Some options may not be compatible with your phone.



**TIP:** If you close the in-call options page, you can open it again by selecting  from the main menu.

- To set up a conference call, select .
- To transfer audio to your phone, select .

**TIP:** You can use this feature if you want to disconnect the Bluetooth connection and remain on the call, or if you need privacy.



- To use the dial pad, select .

**TIP:** You can use this feature to use automated systems, such as voice mail.



- To mute the microphone, select .
- To hang up, select .

### Saving a Phone Number as a Preset

You can save up to three contacts as presets on the dial pad. This allows you to quickly call your home phone number, family members, or frequently called contacts.

- 1 Select  > .
- 2 Select a preset number, such as **Preset 1**, and select **OK**.
- 3 Select a contact.

## Changing the Hands-Free Calling Audio Source





- 1 Select .
- 2 Select  > **Bluetooth interfaces**.
- 3 Select an option:
  - To hear phone call audio only from the display device, select **PND**.
  - To hear phone call audio over the stereo system, select **Stereo**.

## Wireless Headsets

Your device can send audio navigation prompts to a Bluetooth enabled wireless headset.


## Enabling or Disabling Bluetooth Features

You can enable or disable hands-free calling and Garmin Drive features for your paired smartphone.

- 1 Select  >  >  > **Bluetooth**.
- 2 Select  next to your phone name.
- 3 In the **Use for** section, select an option:
  - To enable a connection to the Garmin Drive app, select **Garmin Drive**.
  - To enable hands-free calling features, select **Hands-Free**.
- 4 Select **OK**.




## Showing or Hiding App Notifications (Android™)

You can use the Garmin Drive app to customize which types of smartphone notifications appear on your Vio device.

- 1 On your phone, open the Garmin Drive app.
- 2 Select  > **Smart Notifications**.  
A list of your smartphone apps appears.
- 3 Select the toggle switch next to an app to enable or disable notifications for the app.

## Showing or Hiding Notification Categories for Your Apple® Device

If you are connected to an Apple device, you can filter the notifications shown on your Vio device by showing or hiding categories.

- 1 Select  >  > **Smart Notifications** > .
- 2 Select the check box next to each notification to show.





## Disconnecting a Bluetooth Device

You can temporarily disconnect a Bluetooth device without deleting it from the paired devices list. The Bluetooth device can connect to your Vio device automatically in the future.

- 1 Select  >  >  > **Bluetooth**.
- 2 Select the device to disconnect.





## Deleting a Paired Bluetooth Device

You can delete a paired Bluetooth device to prevent it from automatically connecting to your Vio device in the future. Deleting a paired smartphone also deletes all synced phonebook contacts and call history from your Vio device.

- 1 Select  >  >  > **Bluetooth**.
- 2 Next to the Bluetooth device name, select  > **Forget**.




## Deleting a Paired Phone

You can delete a paired phone to prevent it from automatically connecting to your device in the future.

- 1 Select  >  >  > **Bluetooth**.
- 2 Next to the phone name, select  > **Forget**.


## Music Playback and Stereo Features

### Playing Music




- 1 Select  >  > .
- 2 Select a source from the list.
- 3 If necessary, select a song or station.

### Music Player Overview

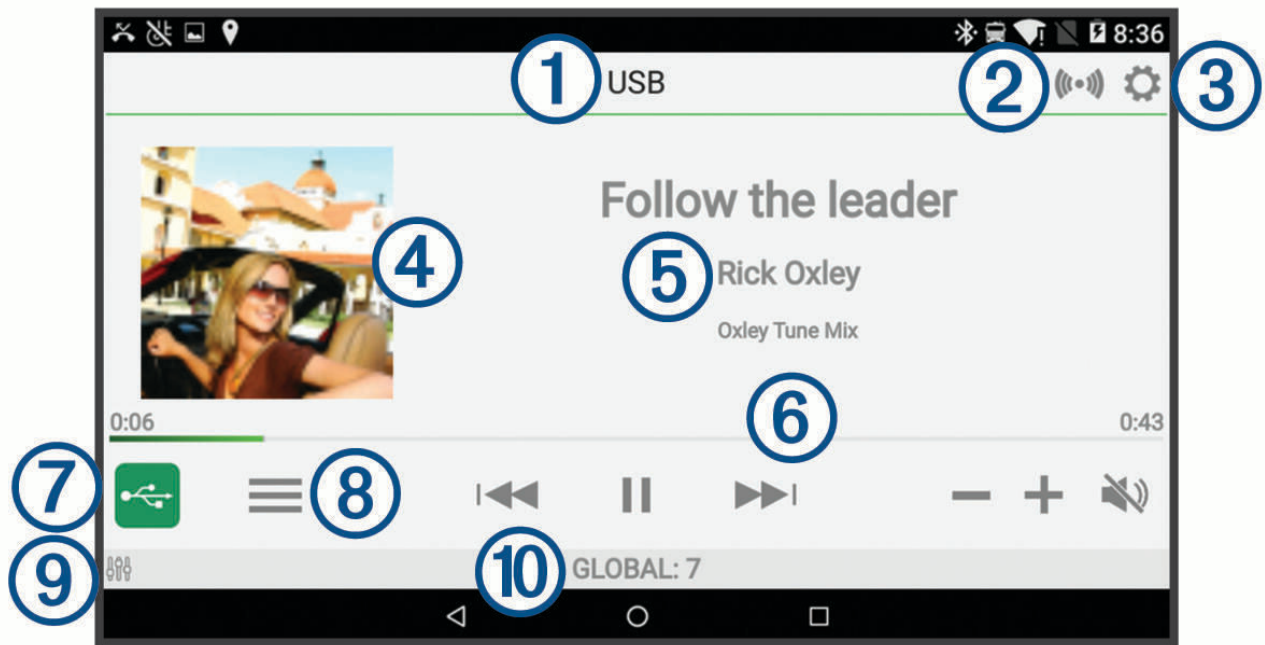The information displayed on the music screen varies depending on the source selected. The on-screen playback controls may change depending on the source selected ([Playback Controls, page 34](#)). This example shows the stereo playing a track from USB device connected to the USB port.





①	Source
②	Network status ( <a href="#">Network Status Icons</a> , page 68)
③ 	Select to open the stereo settings menu.
④	Album art (if available from a compatible source)
⑤	Track details (if available)
⑥	Elapsed time, track duration, and the current track number out of the total number of tracks in the playlist (if available)
⑦ Source Icon	Select to change the source ( <a href="#">Selecting a Source</a> , page 33).
⑧ 	Select to open a menu for the current source. Not available on all sources.
⑨ 	Select to adjust the volume or change speaker zones.
⑩	Speaker zone and volume level.

## Selecting a Source








### 1 Select the source icon.

The source icon is in the lower-left corner of the stereo screen, and shows the source that is currently selected.

### 2 Select a source.

## Playback Controls

The on-screen playback controls may change depending on the source selected.

	Select to pause media playback.
Play	<ul style="list-style-type: none"> <li>Select to play media or resume media playback.</li> <li>DAB source: press to scan for DAB stations.</li> </ul>
	<ul style="list-style-type: none"> <li>Select to skip to the previous track, when using an applicable source.</li> <li>Hold to rewind the track when using an applicable source.</li> <li>AM, FM, or SiriusXM (in Live Mode) source: <ul style="list-style-type: none"> <li>Select to tune to the previous station or preset.</li> <li>Hold for faster tuning (manual mode only).</li> </ul> </li> <li>SiriusXM (in Replay Mode) source: <ul style="list-style-type: none"> <li>Select to skip to the previous track.</li> <li>Hold to rewind the current track.</li> </ul> </li> <li>DAB source: Select to return to the previous DAB station in the ensemble. When you reach the beginning of the current ensemble, the stereo automatically changes to the last available station in the previous ensemble.</li> </ul>
	<ul style="list-style-type: none"> <li>Select to skip to the next track, when using an applicable source.</li> <li>Hold to fast-forward the track when using an applicable source.</li> <li>AM, FM, or SiriusXM (in Live Mode) source: <ul style="list-style-type: none"> <li>Select to tune to the next station or preset.</li> <li>Hold for faster tuning (manual mode only).</li> </ul> </li> <li>SiriusXM (in Replay Mode) source: <ul style="list-style-type: none"> <li>Select to skip to the next track, if applicable.</li> <li>Hold to fast-forward the current track, if applicable.</li> </ul> </li> <li>DAB source: Select to advance to the next DAB station in the ensemble. When you reach the end of the current ensemble, the stereo automatically changes to the first available station in the next ensemble.</li> </ul>
	Select to cycle through the tuning modes (auto or manual) and presets. Press and hold to save the current station as a preset.
 (SiriusXM source)	Hold to switch between Replay Mode and Live Mode ( <a href="#">Using Replay Mode, page 42</a> ). Replay Mode: press to pause and play the channel. Live Mode: Select to cycle through the tuning modes (manual or category) and presets.
	Select to increase the volume for the current zone.
	Select to decrease the volume for the current zone.
Gain	On the Aux source, move the slider left or right to increase or decrease the gain.

## Media Player Connection

### ⚠ CAUTION

Always disconnect your media player from the stereo when not in use and do not leave it in your vehicle. This helps reduce the risk of theft and damage from extreme temperatures.

Do not remove the media player or use your stereo in a distracting manner while operating the vehicle. Check and obey all laws in association with use.

The stereo accepts a variety of media players, including smartphones and other mobile devices. You can connect a compatible media player using a Bluetooth wireless connection or a USB connection to the USB port. The stereo can play media from Universal Plug and Play (UPnP) devices, such as a Network Attached Storage (NAS) device connected to the same network. The stereo can play media from a compatible Apple device connected to the same network using the AirPlay® feature.

## USB Device Compatibility

You can use a USB flash drive or the USB cable included with your media player to connect a media player or mobile device to the USB port.

The stereo is compatible with Android devices that support MTP mode.

The stereo is compatible with media players and other USB mass storage devices, including USB flash drives. Music on USB drives must meet these conditions:

- The music files must be formatted as MP3, AAC (.m4a), or FLAC, files.
- If you connect a portable hard drive, you must connect it to an external power source. The USB port on this stereo cannot provide power for a portable hard drive.
- The USB mass storage device must be formatted using one of the following systems:
  - Microsoft®: NTFS<sup>1</sup>, VFAT, FAT<sup>2</sup>, MSDOS
  - Apple: HFS, HFSPLUS
  - Linux: EXT2, EXT3, EX4

## Playing Media from a USB Device

You can play media from a connected USB flash drive, smartphone, or compatible portable media device.

### 1 Select an option:

- Locate the media USB port in your vehicle.  
For more information, see your vehicle owner's manual.
- Locate the 2.1 A USB port on the back of the Vizio dock.  
For more information, see the *Vizio RV 850 / RV 1050 Series Installation Instructions*.

### 2 Connect the USB device to the USB port.

### 3 Select > > .

### 4 Select the source icon ([Music Player Overview, page 32](#)).

### 5 Select an option:

- To play media from an Apple device, select **iPod**.
- To play media from a smartphone or device with Android, select **MTP**.
- To play media from another portable media player or USB flash drive, select **USB**.

## Connecting an Auxiliary Device



You can connect various auxiliary devices to the stereo. These devices have either RCA connectors, a line output, or a headphone output jack.

- 1 If necessary, connect an RCA-to-3.5 mm adapter cable to the auxiliary device.
- 2 Connect the auxiliary device to the Aux 1 connector on the back of the stereo.
- 3 Select the **Aux1** source.

<sup>1</sup> Software updates are not supported using NTFS file system.





<sup>2</sup> FAT includes most types of FAT file systems except exFAT.

## Connecting an Apple Device Using AirPlay

- 1 From the settings menu on your Apple device, connect to the same wireless network as your compatible Fusion® stereo.  
**NOTE:** You can connect some Apple devices to the network using a wired Ethernet connection, if applicable. Go to the Apple website for more information.
- 2 On your Apple device, open the music app you want to stream to the stereo.
- 3 From the music app or program, select  or , and select the name of the stereo.
- 4 If necessary, start playing music on the app.  
The stereo changes to the AirPlay source automatically and plays audio from your Apple device.  
**NOTE:** On some AirPlay devices, adjusting the volume on the device affects the volume level on the stereo.

## Setting an AirPlay Password

You can set a password that a user must enter when connecting to the stereo using the AirPlay feature.

- 1 Select  >  >  >  > **AirPlay PASSWORD**.
- 2 Enter a password.  
**NOTE:** The AirPlay password is case-sensitive.

When connecting to this stereo using the AirPlay feature, the user must enter the password on their Apple device.





## Connecting a UPnP Device

You must connect your stereo to a network to play media from a UPnP device, such as a NAS device.

- 1 Connect your UPnP device to the same network as the stereo, referring to the instructions provided with your UPnP device and router if necessary.
- 2 Select the UPnP source on the stereo ([Selecting a Source, page 33](#)).  
You can browse and play media from the UPnP device the same way that you would from a USB flash drive ([Controlling Music Playback on a Connected Android Device, USB Flash Drive, or Media Player, page 40](#)).


## Audio Control

### Adjusting the Volume for a Zone

- 1 Select  >  >  > .
- 2 Select a zone.  
**TIP:** To control all zones at the same time, select GLOBAL.
- 3 Drag the slider up or down.





### Muting all Connected Stereos

You can quickly mute the audio from this stereo or from all stereos connected to the network ([Fusion PartyBus™ Networking, page 48](#)).





From any source, select .

The mute symbol appears and audio from this stereo is silenced.

### Enabling Automatic Volume Adjustment Based on Speed





- 1 Select  >  >  >  > **ZONE > SPEED VS VOLUME > ENABLED**.
- 2 Select **MAX/MIN SPEED**, and enter the maximum and minimum speed for volume adjustment.
- 3 Select **VOLUME INCREASE**, and enter a percentage volume increase for each zone.
- 4 Select **CUSTOM UNITS**, and select the unit of measure for speed.

## Adjusting the Tones

- 1 Select  >  >  >  > **ZONE**.
- 2 Select a zone.
- 3 Select **TONE**.
- 4 Use the slider bar to adjust the level of each tone.

## Disabling the Loud Setting for a Zone

The LOUD setting maintains frequency response at low volumes and increases perceived loudness at high volumes. This setting is enabled by default in all zones.

- 1 Select  >  >  >  > **ZONE**.
- 2 Select a zone.
- 3 Select **LOUD** to clear the check box.

## Adjusting the Gain for an Auxiliary Device

You can adjust the gain for a connected auxiliary device to achieve a volume level similar to that of other media sources. You can adjust the gain in 1 dB increments.

- 1 Select an auxiliary source.
- 2 Move the slider left or right to increase or decrease the gain.





**NOTE:** To achieve the best audio quality when using a portable media player with headphone output, it may be necessary to adjust the volume control on the media player, instead of adjusting the gain.

## Speaker Zones

You can group speakers in one area into a speaker zone. This enables you to control the audio level of the zones individually. For example, you could make the audio quieter in the cabin and louder on deck.

You can set the balance, volume limit, tone, subwoofer level, subwoofer frequency, and name for each zone, and configure other zone-specific settings ([Speaker Zone Settings, page 50](#)).

## Adjusting the Audio Settings for a Zone

- 1 Select  >  >  >  > **ZONE**.
- 2 Select a zone.
- 3 Select **MORE**.
- 4 Select one or more options:





**NOTE:** Not all options are available for all zones.

- To limit the maximum volume output of this zone, select **VOLUME LIMIT**, and adjust the level.
- To set the subwoofer level for this zone, select **SUB LEVEL**, and adjust the level.
- To adjust the right and left speaker balance of this zone, select **BALANCE**, and adjust the balance.

## Adjusting the Subwoofer Filter

You can use the subwoofer filter setting to control the subwoofer cutoff frequency for each zone, which can enhance the blend of the sound produced by the speakers and the subwoofer. Audio signals above the selected frequency are not passed to the subwoofer.

**NOTE:** If a DSP setting has been applied to zone, this setting cannot be changed on the stereo. You can view the DSP setting for the optimal cutoff frequency as calculated by the DSP controller, but cannot adjust it.

- 1 Select  >  >  >  > **ZONE**.
- 2 Select a zone.
- 3 Select **SUB FREQ**.
- 4 Select a frequency.

## DSP Settings




This stereo features digital signal processing (DSP). You can select pre-configured DSP settings for Fusion speakers and amplifiers to optimize audio reproduction in their installed locations.

All DSP settings are configured using the Fusion-Link™ remote control app ([Fusion-Link Wireless Remote Control App, page 53](#)).

### Configuring the DSP Settings

You must download and install the Fusion-Link remote control app on your compatible Apple or Android device before you can configure the DSP settings ([Fusion-Link Wireless Remote Control App, page 53](#)).

You can configure the DSP settings to optimize the sound on each zone with the installed speakers, amplifiers, and environment.

- 1 From the settings menu on your Apple or Android device, connect to the stereo using Bluetooth technology, or connect to the same wireless network as the stereo.
- 2 Open the Fusion-Link remote control app on your compatible Apple or Android device.
- 3 If necessary, select the stereo you want to configure.
- 4 Select  > **MUSIC SETTINGS**.
- 5 Select a zone.
- 6 Select **DSP SETTINGS**.
- 7 Configure the DSP settings as needed, depending on the models of Fusion speakers and amplifiers connected to the zone.
- 8 Repeat these steps for each zone.
- 9 After you have finished configuring the DSP settings for all zones, select an option:
  - On an Apple device, select  > **Zone** > **SETTINGS** > **SEND DSP SETTINGS**
  - On an Android device, select  > **Zone** > **SEND DSP SETTINGS**.

## Bluetooth Device Playback

You can pair the stereo to up to eight Bluetooth media devices.


You can control the playback using the stereo controls on all Bluetooth devices, and on some devices you can browse the music collection from the menu on the stereo. On Bluetooth devices that do not support media browsing, you should select the song or playlist on the media device.

The availability of song information such as song title, artist name, track duration, and album art depends on the capability of the media player and music application.

## Connecting a Compatible Bluetooth Device

You can play media from a compatible Bluetooth device using the Bluetooth wireless connection.

You can control the music playback with the media app on a Bluetooth device or using the Fusion-Link remote control app ([Fusion-Link Wireless Remote Control App, page 53](#)).

- 1 Select the **BT** source.
- 2 Select  > **CONNECTIONS** > **DISCOVERABLE** to make the stereo visible to your compatible Bluetooth device.
- 3 Enable Bluetooth on your compatible Bluetooth device.
- 4 Bring the compatible Bluetooth device within 10 m (33 ft.) of the stereo.
- 5 On your compatible Bluetooth device, search for Bluetooth devices.
- 6 On your compatible Bluetooth device, select the stereo from the list of detected devices.
- 7 On your compatible Bluetooth device, follow the on-screen instructions to pair and connect to the discovered stereo.

When pairing, your compatible Bluetooth device may ask you to confirm a code on the stereo. The stereo does not display a code, but it does connect correctly when you confirm the message on the Bluetooth device.

- 8 If your compatible Bluetooth device does not immediately connect to the stereo, repeat steps 1 through 7. The DISCOVERABLE setting is disabled automatically after two minutes.


**NOTE:** On some Bluetooth devices, adjusting the volume on the device affects the volume level on the stereo.

### Bluetooth Range Information


The stereo and Bluetooth wireless devices have a range of 10 m (33 ft.). For optimal performance, the Bluetooth wireless device should also have a clear line of sight to the stereo.

## Selecting a Different Bluetooth Device

When you have more than one Bluetooth device paired to the stereo, you can select a different device when needed. You can pair the stereo with up to eight Bluetooth devices.

- 1 With the **BT** source selected, select  > **CONNECTIONS** > **PAIRED DEVICES**.
- 2 Select a Bluetooth device.

## Bluetooth Source Settings

With the BT source selected, select  > **CONNECTIONS**.

**DISCOVERABLE:** Allows the stereo to be visible to Bluetooth devices. This setting turns off automatically after two minutes to prevent possible interruption to audio after pairing a Bluetooth device to the stereo.

**REMOVE DEVICE:** Removes the Bluetooth device from the stereo. To listen to audio from this Bluetooth device again, you must pair the device again.


## USB Device Playback

You can connect various USB media players, USB flash drives, and smartphones to the stereo. How you access the USB source depends on the type of connected media player or smartphone.

Media Player	Source Selections
Android device	MTP
USB flash drive	USB
MP3 media player (as a mass-storage device)	USB <b>NOTE:</b> If your MP3 media player does not support mass-storage when connected using USB, you must connect it to the stereo as an auxiliary device ( <a href="#">Connecting an Auxiliary Device, page 35</a> ).

**NOTE:** The availability of song information such as song title, artist name, and track duration depends on the capability of the media player and music application.

### Controlling Music Playback on a Connected Android Device, USB Flash Drive, or Media Player

- 1 Connect a compatible Android device, USB flash drive, or media player to the stereo.
- 2 Select the appropriate source on the stereo.
- 3 Select .
- 4 If necessary, select the name of the device or USB drive to view the file structure.
- 5 Select a song to begin music playback.

You can use the stereo controls to select, play, pause, and skip tracks.

### Controlling Music Playback on a Connected Apple Device

- 1 Connect a compatible Apple smartphone or media player to the stereo using USB or Bluetooth (if available).
- 2 Select the appropriate source on the stereo.
- 3 Launch a music application on the connected device, and begin playback.

You can use the music application or the stereo controls to select, play, pause, and skip tracks.

## Radio

To listen to AM or FM radio, you must have a suitable AM/FM antenna properly connected to the stereo and be within range of a broadcasting station. For instructions on connecting an AM/FM antenna, see the stereo installation instructions.

To listen to SiriusXM® radio, you must have the appropriate equipment and subscriptions ([SiriusXM Satellite Radio, page 41](#)). For instructions on connecting a SiriusXM Connect Vehicle Tuner, see the stereo installation instructions.

To listen to DAB stations, you must have the appropriate equipment. For instructions on connecting a DAB adapter and antenna, see the installation instructions provided with your adapter and antenna.



## Setting the Tuner Region

You must select the region you are in to receive AM and FM stations properly.

If you are connected to a compatible SiriusXM tuner and antenna, and have a subscription (USA only), you must select the region you are in to receive SiriusXM stations properly.




**NOTE:** SiriusXM is not available in all regions.

If you are connected to a compatible DAB module and antenna (not included), you must select the region you are in to receive DAB stations properly.

**NOTE:** DAB stations are not available in all regions.

- 1 Select  >  >  >  > **TUNER REGION**.
- 2 Select the region you are in.

## Changing the Radio Station

- 1 Select an applicable source, such as **FM**.
- 2 Select  repeatedly to move through the tuning modes, and select an option:
  - Select **Auto** to scan and stop on the next available station.
  - Select **Manual** to select a station manually.
  - Select **Preset** to select a saved station preset.
- 3 Select  or  to tune to the station.

When in Manual tuning mode, you can hold  or  to quickly advance through the stations.

## SiriusXM Satellite Radio

Only SiriusXM brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Vehicle Tuner and subscription are required. For more information, go to [www.siriusxm.com](http://www.siriusxm.com).

## Enabling the SiriusXM Source


You must enable the SiriusXM source before you can listen to SiriusXM Satellite Radio.

**NOTE:** SiriusXM features are not available in all areas.

Select  >  >  >  > **TUNER REGION > USA**.

## Locating the SiriusXM Radio ID

You must have the radio ID of your SiriusXM Connect Tuner before you can activate your SiriusXM subscription. You can locate the SiriusXM Radio ID on the back of the SiriusXM Connect Tuner or its packaging, or by tuning your stereo to channel 0.

With the SiriusXM source selected, select  > **CHANNELS > ALL CHANNELS > 000 RADIO ID**.


The SiriusXM Radio ID does not include the letters I, O, S, or F.

## Activating a SiriusXM Subscription

- 1 With the SiriusXM source selected, tune to channel 1.  
You should be able to hear the preview channel. If not, check the SiriusXM Connect Tuner and antenna installation and connections, and try again.
- 2 Tune to channel 0 to locate the Radio ID.
- 3 Contact SiriusXM listener care by phone at (866) 635-2349 or go to [www.siriusxm.com/activatenow](http://www.siriusxm.com/activatenow) to subscribe in the United States. Contact SiriusXM by phone at (877) 438-9677 or go to [www.siriusxm.ca/activatexm](http://www.siriusxm.ca/activatexm) to subscribe in Canada.
- 4 Provide the Radio ID.  
The activation process usually takes 10 to 15 minutes, but can take up to an hour. For the SiriusXM Connect Tuner to receive the activation message, it must be turned on and receiving the SiriusXM signal.
- 5 If the service is not activated within the hour, go to <http://care.siriusxm.com/refresh> or contact SiriusXM Listener Care by phone at 1-866-635-2349.

## Selecting a Category









You can control which categories of channels are available when using the CATEGORY tuning method.

- 1 With the SiriusXM source selected, select  > **CATEGORY**.
- 2 Select a category.

## Using Replay Mode

You can use Replay Mode to control playback of a SiriusXM broadcast.

**NOTE:** The device enables Replay Mode automatically when playing saved preset channels.

- 1 If necessary, select  to enable Replay Mode.  
 changes to , and a progress bar appears.
- 2 Select an option:
  - Select  or  to resume or pause playback.
  - Select  to exit Replay Mode.
  - Select  or  to skip backward or forward in increments.

**NOTE:** If you fast-forward or skip forward to the end of the progress bar, the stereo exits Replay Mode automatically and plays the live broadcast.

## Alerts

 
### **WARNING**

Do not read or select alert notifications while driving. Failure to pay attention to the road could result in an accident involving property damage, personal injury, or death.

Alerts such as song alerts or game alerts appear at the top of your screen when using the Music app. Alerts also appear when viewing the Fusion Media map tool. Some alerts, such as SiriusXM alerts, when viewed from the map tool may contain only short descriptions of an alert. You can view full alert details from the Music app.

## Adding an Artist or Song Alert


You can set alerts for artists and songs so that when a particular song or a song from a particular artist begins to play on any music channel, you can quickly tune to that channel.

- 1 While a particular song or a song from a particular artist is playing, select  > **ADD ALERT** > **SAVE ARTIST/SONG**.
- 2 Select the song or the artist.

## Adding Teams for Game Alerts


You can set alerts for sports teams so that when a game featuring a saved team begins to play on any sports channel, you can quickly tune to that channel.

**NOTE:** A Game Alert is different than a SportsFlash™ alert. A Game Alert lets you know when a game begins, while a SportsFlash alert lets you know when an exciting play occurs during a game.

- 1 Select  > **ADD ALERT > GAME ALERT TEAMS**.
- 2 Select a sports league.
- 3 Select a team to fill the check box and add a Game Alert.
- 4 Repeat steps 2 and 3 for each team you want to add to the list of Game Alerts.

## Adding Teams from a Live Game

While listening to a game, you can quickly add a team playing to your list of Game Alert teams.

- 1 While listening to a game on a channel, select  > **ADD ALERT > SAVE TEAM**.  
A list of teams playing in the current game appears.
- 2 Select the team or teams to add to your list of Game Alert teams.


## Viewing Active Alerts

You can review active Artist, Song, and Game Alerts.

- 1 Select  > **ACTIVE ALERTS**.
- 2 Select a category.

## Managing Alerts

You can manage your saved alerts to select which ones you want to receive. You can delete saved alerts you do not want.

- 1 Select  > **SiriusXM SETTINGS > ALERT MANAGEMENT**.
- 2 Select an option:
  - To enable saved alerts for songs only, artists only, or both artists and songs, select **ENABLE BY TYPES**, and select a type.
  - To enable saved alerts for specific artists only, select **ENABLE ARTISTS**, and select the artists.
  - To enable saved alerts for specific songs only, select **ENABLE SONGS**, and select the songs.
  - To enable saved game alerts for specific teams, select **ENABLE TEAMS**, and select the teams.
  - To delete all saved alerts for songs, artists, or teams, select **DELETE BY TYPES**, and select a type.
  - To delete saved alerts for specific artists, select **DELETE ARTISTS**, and select the artists.
  - To delete saved alerts for specific songs, select **DELETE SONGS**, and select the songs.
  - To delete saved Game Alerts for specific teams, select **DELETE TEAMS**, and select the teams.



## TuneMix™ Feature

**NOTE:** The TuneMix feature is compatible with the SXV300 tuner (sold separately). Other tuners are compatible, but may limit the features. Review the user manual supplied with your SiriusXM tuner to learn about features available with your tuner module.

## Starting and Stopping a TuneMix Collection

Before you can start playing a TuneMix collection, you must create one ([Creating and Customizing a TuneMix Collection, page 44](#)).



The TuneMix feature enables you mix your favorite music channels to create a custom listening experience.

- 1 Select  > **TUNEMIX**.
- 2 Select a TuneMix collection.  
The stereo begins playing the TuneMix collection.
- 3 To stop playing a TuneMix collection, select  > **CHANNELS**, and select a channel.  
The stereo stops playing the TuneMix collection and begins playing the selected channel.

## Creating and Customizing a TuneMix Collection

You can create up to 10 unique TuneMix collections on the stereo.

**NOTE:** A TuneMix collection must include at least two of your favorite SiriusXM music channels.

- 1 Select  > **SiriusXM SETTINGS** > **TUNEMIX SETUP**.
- 2 Select a TuneMix collection.
- 3 Select a channel to fill the check box and add it to the TuneMix collection.
- 4 After you are finished customizing the TuneMix collection, select .
- 5 Repeat steps 2 through 4 for each TuneMix collection you want to customize.

## SportsFlash Feature

The SportsFlash feature alerts you to key plays from your favorite teams during a live game. When an exciting play happens, a SportsFlash alert appears, and you can tune to the broadcast and hear the play. When the SportsFlash alert ends, you can choose to return to the previous channel, or remain tuned to the game.


To receive SportsFlash alerts, your subscription package must include play-by-play sports channels for the sports leagues you want to include in the alerts.

You can enable, disable, or delete SportsFlash alerts that you have added ([Managing Alerts, page 43](#)).

**NOTE:** A SportsFlash is different than a Game Alert. A SportsFlash alert lets you know when an exciting play occurs during a game, while a Game Alert lets you know when a game begins.


**NOTE:** The SportsFlash feature is compatible with the SXV300 tuner (sold separately). Other tuners are compatible but may limit the features. Review the user manual supplied with your SiriusXM tuner to learn about features available with your tuner module.

## Adding Teams to Receive SportsFlash Alerts

- 1 Select  > **SPORTSFLASH** > **TEAM SELECT**.
- 2 Select a sports league.
- 3 Select a team to fill the check box and add a SportsFlash alert.
- 4 Repeat steps 2 and 3 for each team you want to add to the list of SportsFlash alerts.

## Changing SportsFlash Team Priority

If more than one team for which you have set up SportsFlash alerts are playing at the same time, you can adjust the team priority to hear SportsFlash alerts from your preferred team first.

- 1 Select  > **SPORTSFLASH** > **TEAM PRIORITIES**.  
A list of your selected SportsFlash teams appears, in order of priority.
- 2 Select a team to move it up one priority level in the list.
- 3 Repeat the previous step with each team you want to reorder until the priority list is ordered the way you prefer.

## Enabling the TuneStart™ Feature

When you enable the TuneStart feature and tune to a preset channel, the stereo starts the current song from the beginning of the song instead of starting it from the point it is at in the live broadcast.

**NOTE:** The TuneStart feature is available when tuning to preset channels only. The TuneStart feature is compatible with the SXV300 tuner (sold separately). Other tuners are compatible but may limit the features. Review the user manual supplied with your SiriusXM tuner to learn about features available with your tuner module.

If necessary, select  > **SiriusXM SETTINGS** > **TUNESTART**.


When the TuneStart feature starts a song from the beginning, a progress bar appears and you can control the track using the same controls as Replay Mode ([Using Replay Mode, page 42](#)).

## Parental Controls

The parental control feature allows you to limit access to any SiriusXM channels, including those with mature content. When the parental control feature is enabled, you must enter a passcode to tune to the locked channels. You can also change the 4-digit passcode.

### Unlocking the Parental Controls


You can unlock the parental controls to access locked channels.

- 1 With the **SiriusXM** source selected, select  > **PARENTAL**.
- 2 Select the **UNLOCK** check box.
- 3 Enter the passcode.

**TIP:** The default passcode is 0000.

The parental controls remain unlocked until you turn off the vehicle or until you lock them again.


### Locking Channels

- 1 With the **SiriusXM** source selected, select  > **PARENTAL**.
- 2 Select the **UNLOCK** check box.
- 3 Enter the passcode.

**TIP:** The default passcode is 0000.



- 4 Select **LOCK/UNLOCK**.

A list of available channels appears.



- 5 Select one or more channels to lock, and select .
- 6 Clear the **UNLOCK** check box to lock the parental controls.

You cannot access the locked channels while the parental controls are locked. You must unlock the parental controls to tune the locked channels.

### Clearing All Locked Channels

- 1 With the **SiriusXM** source selected, select  > **PARENTAL** > **UNLOCK**.
- 2 Enter the passcode.
- 3 Select  > **PARENTAL** > **CLEAR ALL LOCKED**.

### Changing the Parental Control Passcode

- 1 With the **SiriusXM** source selected, select  > **PARENTAL** > **UNLOCK**.
- 2 Enter the passcode.
- 3 Select  > **PARENTAL** > **CHANGE PIN**.
- 4 Follow the on-screen instructions.

## SiriusXM Troubleshooting

Advisory	Description	Resolutions
Check Antenna	The radio has detected a fault with the SiriusXM antenna. The antenna cable may be disconnected or damaged.	<ul style="list-style-type: none"> <li>• Verify the antenna cable is connected to the SiriusXM Connect Vehicle Tuner.</li> <li>• Inspect the antenna cable for damage and kinks. Replace the antenna if the cable is damaged. SiriusXM products are available at your local car audio retailer, or at <a href="http://www.shop.siriusxm.com">www.shop.siriusxm.com</a>.</li> </ul>
Check Tuner	The stereo is having difficulty communicating with the SiriusXM Connect Vehicle Tuner. The tuner may be disconnected or damaged.	Verify the SiriusXM Connect Vehicle Tuner cable is connected securely to the stereo.
No Signal	The SiriusXM Connect Vehicle Tuner is having difficulty receiving the SiriusXM satellite signal.	<ul style="list-style-type: none"> <li>• Verify the SiriusXM antenna is outdoors with a clear view of the sky.</li> <li>• Verify the SiriusXM antenna is mounted securely.</li> <li>• Remove obstructions above or next to the SiriusXM antenna.</li> <li>• Inspect the cable antenna for damage and kinks. Replace the antenna if the cable is damaged. SiriusXM products are available at your local car audio retailer or at <a href="http://www.shop.siriusxm.com">www.shop.siriusxm.com</a>.</li> <li>• Consult the SiriusXM Connect Vehicle Tuner installation instructions for more information on antenna installation.</li> </ul>
Subscription Updated	The radio has detected a change in your SiriusXM subscription status.	<ul style="list-style-type: none"> <li>• Select any button to clear the message.</li> <li>• Go to <a href="http://www.siriusxm.com">www.siriusxm.com</a> or call 866-635-2349 with questions about your subscription.</li> </ul>
Channel Not Available	The channel you requested is not a valid SiriusXM channel, or the channel that you were listening to is no longer available. You may see this message briefly the first time you connect a new SiriusXM Connect Vehicle Tuner.	Go to <a href="http://www.siriusxm.com">www.siriusxm.com</a> for more information about the SiriusXM channel lineup.
Channel Not Subscribed	The channel you requested is not included in your SiriusXM subscription package, or the channel you were listening to is no longer included in your SiriusXM subscription package.	Go to <a href="http://www.siriusxm.com">www.siriusxm.com</a> or call 866-635-2349 for more information about your subscription package or to subscribe to the channel.
Channel Locked	The channel you requested is locked by the parental control feature.	Refer to the parental control section in the owner's manual to unlock channels.

## Clearing SiriusXM Data

You can clear all entered SiriusXM user information, such as favorite teams and alerts.

Use the **FACTORY RESET** option in the settings menu to reset the stereo.

**NOTE:** The factory reset setting resets all data in the stereo, including AM and FM presets, zone settings, etc. in addition to clearing all SiriusXM user information.

## DAB Playback

**NOTE:** This feature is not available for all product models.

DAB broadcasts are not available in all regions. When the stereo is not set to a compatible region, the DAB source is not available.


### Setting the Tuner Region

You must select the region you are in to receive DAB stations properly.


- 1 Select  >  >  >  > **TUNER REGION**.
- 2 Select the region you are in.

### Scanning for DAB Stations




**NOTE:** Because DAB signals are broadcast in select countries only, you must set the tuner region to a location where DAB signals are broadcast.

- 1 Select the **DAB** source.
- 2 Select  to scan for available DAB stations.

When scanning is complete, the first available station in the first ensemble found begins playing.



**NOTE:** After the first scan is complete, you can select  again to re-scan for DAB stations. When the re-scan is complete, the system starts playing the first station in the ensemble you were listening to when you started the re-scan.

### Changing DAB Stations



- 1 Select the **DAB** source.
- 2 If necessary, select  to scan for local DAB stations.
- 3 Select  or  to change the station.

When you reach the end of the current ensemble, the stereo automatically changes to the first available station in the next ensemble.

### Selecting a DAB Station from a List

- 1 Select the **DAB** source.
- 2 If necessary, select  to scan for local DAB stations.
- 3 Select  > **BROWSE** > **STATIONS**.
- 4 Select a station from the list.

### Selecting a DAB Station from a Category

- 1 Select the **DAB** source.
- 2 If necessary, select  to scan for local DAB stations.
- 3 Select  > **BROWSE** > **CATEGORIES**.
- 4 Select a category from the list.
- 5 Select a station from the list.


## Presets

You can save your favorite AM stations and FM stations as presets for easy access.

You can save your favorite SiriusXM channels if you are connected to an optional SiriusXM tuner and antenna.

You can save your favorite DAB stations if you are connected to an optional DAB antenna.

### Saving a Station as a Preset



- 1 With an applicable source selected, tune the stereo to a station or a channel.
- 2 Select the **PRESETS** tab.
- 3 Select .

**TIP:** You can quickly save the selected AM/FM station or DAB channel as a preset by holding  .

## Selecting a Preset from a List

- 1 With an applicable source selected, select the **PRESETS** tab.
- 2 Select a preset from the list.

## Removing Presets


- 1 With an applicable source selected, select the **PRESETS** tab.
- 2 Select .
- 3 Select each preset you want to remove.
- 4 When you are finished removing presets, select .

## Fusion PartyBus™ Networking

The Fusion PartyBus networking feature allows you to connect multiple compatible stereos and zone stereos together on a network, using a combination of wired or wireless connections.

A Fusion PartyBus stereo, such as an Vizio RV 850 stereo, can stream sources to other Fusion PartyBus devices connected to the network. Connected Fusion PartyBus devices can also control media playback on the Fusion PartyBus stereo. A Fusion PartyBus zone stereo, such as an Apollo™ SRX400 zone stereo can stream from a Fusion PartyBus stereo, but cannot stream sources to other Fusion PartyBus devices on the network.

You can connect up to eight Fusion PartyBus devices on a network wirelessly.

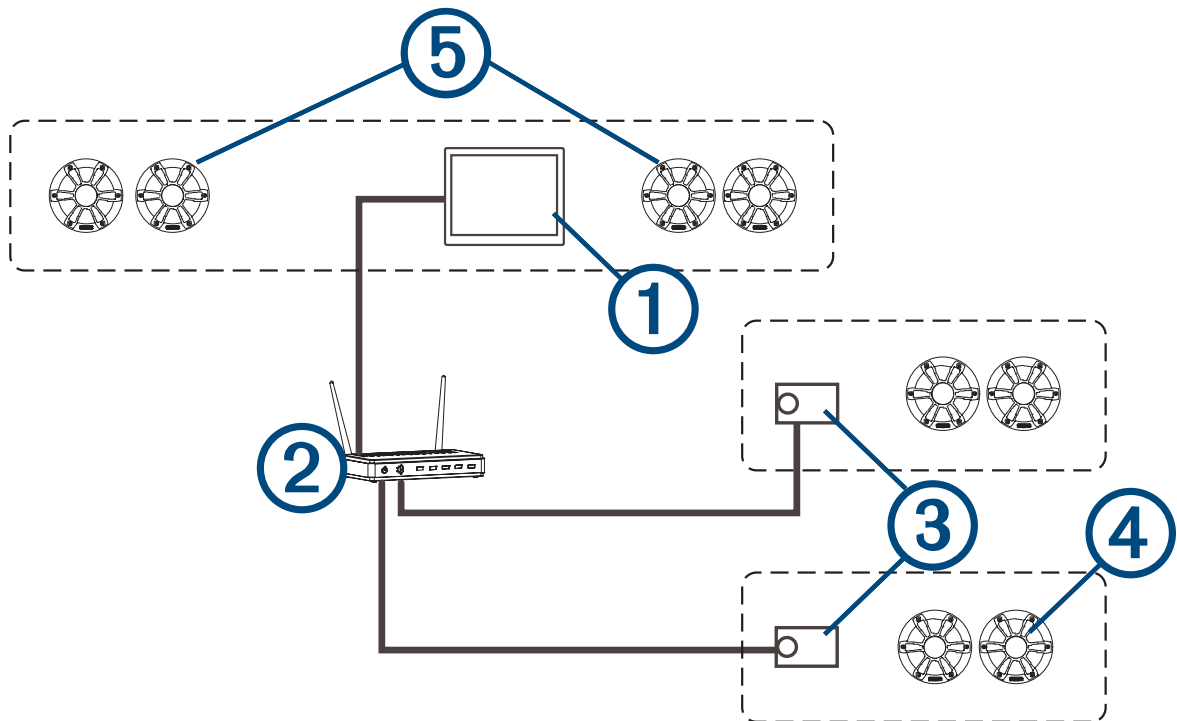

In the image above, one Vizio RV 850 stereo **1** connects to a wireless router **2** and to two Apollo SRX400 zone stereos **3**. The two Fusion PartyBus stereo zone stereos can stream sources from the Fusion PartyBus stereo.

A Fusion PartyBus zone stereo is not the same thing as a speaker zone. It is an independent stereo that can either play media from connected sources or stream from a Fusion PartyBus stereo on the network. You can connect a Fusion PartyBus zone stereo, such as an Apollo SRX400 zone stereo, to a single speaker zone **4**. You can connect a Fusion PartyBus stereo, such as an Vizio RV 850 stereo, to multiple speaker zones **5** to cover a larger area with that stereo. Fusion PartyBus devices cannot control the speaker volume of another stereo. You can adjust the volume of speakers or speaker zones connected directly to the stereo only.



## Streaming from a Fusion PartyBus Device on the Network

Before you can stream from a device on the network, you must set up and configure your Fusion PartyBus devices according to the installation instructions.

**NOTE:** You cannot stream the Apple AirPlay source to other stereos on the network using the Fusion PartyBus feature.

### 1 Select the source icon.

The source icon is in the lower-left corner of the stereo screen, and shows the source that is currently playing.

### 2 Select **PARTYBUS**

**TIP:** You can press and hold the source icon to show available Fusion PartyBus devices.

The device shows a list of available Fusion PartyBus devices on the network.

### 3 Select the device you want to stream from.

The stereo begins streaming the same source as the connected Fusion PartyBus device, and a green border appears around the device screen. All media playback functions affect both devices.

## Stopping Streaming from a Fusion PartyBus Device on the Network

If you are streaming from a Fusion PartyBus device on the network, you must disconnect from the device before you can play local sources on the stereo.

### 1 Select the source icon.

The source icon is in the lower-left corner of the stereo screen, and shows the source that is currently playing.

### 2 Select **PARTYBUS > LEAVE PARTYBUS**.

**TIP:** You can press and hold the source icon to quickly leave the Fusion PartyBus network.

## Network UPnP Playback

This stereo can play content from Universal Plug and Play (UPnP) devices connected to the network, such as computers and media servers. You must connect your UPnP device to the same network as the stereo using a wired or wireless connection, and you must configure the device to share media over the network. See the owner's manual from your UPnP device for more information.

After you have connected your UPnP device to the network and configured it to share media, the UPnP source appears on the source selection screen of each stereo on the network ([Selecting a Source, page 33](#)).

## Audio Settings

Select  >  >  > .

**NOTE:** When an option button is filled, the option is on. When the option button is clear, the option is off.

**ZONE:** Enables you to configure the speaker zones ([Speaker Zone Settings, page 50](#)).

**TUNER REGION:** Sets the region used by the various radio sources.

**DEVICE NAME:** Sets a name for this stereo.

**SEARCHING:** Enables Fusion Alpha Search Technology (FAST), which allows you to quickly search for tracks by letter or number. You can set the minimum number of tracks required to enable the FAST menu. FAST searching is available when your device contains more than this minimum number of tracks.

**AirPlay PASSWORD:** Sets a password that a user must enter when connecting to the stereo using the AirPlay feature.

**SOURCE:** Sets options for audio sources available on the stereo dock. You can enable or disable sources, rename sources, or set which sources the device can stream over the Fusion PartyBus network ([Source Settings, page 51](#)).

**NETWORK:** Enables you to configure the network settings ([Network Configuration, page 51](#)).


**DISPLAY:** Sets the Music app to display day or night colors. You can select AUTO to allow the device to automatically set day or night colors based on the time of day.

**ABOUT:** Shows the software version information for the stereo.

## Speaker Zone Settings

### Setting a Zone Name


You can set a name for a speaker zone to make it easier to identify.

- 1 Select  >  >  >  > **ZONE**.
- 2 Select a zone.
- 3 Select **ZONE NAME**.
- 4 Use the on-screen keyboard to enter a name, and select .

### Linking Zones

You can link zones 1 and 2 to keep the volume levels synchronized. Adjusting the volume of either of the linked zones affects both zones.

Select  >  >  >  > **ZONE** > **ZONE 2** > **LINK TO ZONE 1**.

When zones 1 and 2 are linked,  appears on zones 1 and 2 on the volume screen.

**NOTE:** After zones 1 and 2 are linked, you cannot adjust the volume of each zone individually.

### Enabling Volume Control of Zone 3 or 4 from a Connected Amplifier

By default the volume of zones 3 and 4 are controlled by the stereo. You can control the volume of these zones using the connected amplifier instead.

- 1 Select  >  >  >  > **ZONE**.
- 2 Select zone 3 or zone 4.
- 3 Select **VOLUME CONTROL** to clear the check box.

The audio signal from the zone is provided to the amplifier as a fixed-line-level output.

### Disabling a Zone

You can disable an unused zone and remove it from the audio level pages. When a zone is disabled, you cannot change any of the settings for that zone. You can disable zones 2, 3, and 4 only.


- 1 Select  >  >  >  > **ZONE**.
- 2 Select a zone.
- 3 Select **ZONE ENABLED** to clear the check box.

## Disabling the Internal Amplifiers

If you do not connect speakers directly to zones 1 and 2, you can disable the internal amplifiers to reduce power consumption.

- 1 Select  >  >  >  > **ZONE**.
- 2 Select **INTERNAL AMP ON** to clear the check box.

## Source Settings

Select  >  >  >  > **SOURCE**, and select the name of the source you want to configure.

**NOTE:** This menu contains system-wide source settings. Most sources also have source-specific settings. See the sections of this manual for each source for more information about source-specific settings.

Not all options are available for every source on the stereo.

**SOURCE ENABLED:** Enables and disables the source on this stereo. You may want to disable sources that will never be used on the stereo so they no longer appear on the source-selection screen.

**PARTYBUS ENABLED:** Enables and disables the sharing of the source when connected to other stereos on the network (*Fusion PartyBus™ Networking, page 48*). You may want to disable sharing for some sources, such as AM, because streaming over the Fusion PartyBus network introduces a small audio lag that is not desirable in some situations.








**SOURCE NAME:** Changes the name of the source as it appears on this stereo. This also affects how the source appears to other stereos on the network.

## Network Configuration

**TIP:** You can select the network status icon from any screen to open the network configuration menu.

### Setting the Fusion PartyBus Device as the DHCP Server





If you connected two Fusion PartyBus devices together directly, or connected more than two together using a network switch or wireless access point and did not install a router, you must configure only one Fusion PartyBus stereo to be the DHCP server.

- 1 Select  >  >  >  > **NETWORK** > **ADVANCED** > **ETHERNET IP** > **STATIC IP** > **SAVE**.
- 2 Select  >  >  >  > **NETWORK** > **ADVANCED** > **DHCP SERVER** > **DHCP ENABLED** > **SAVE**.

You can configure the IP address range of the DHCP server (*DHCP Settings, page 52*).

### Setting the Fusion PartyBus Device as a Wireless Access Point

Before you can connect additional Fusion PartyBus devices or smartphones to a Fusion PartyBus device wirelessly, you must configure at least one device as a wireless access point. This is not necessary if you installed a wireless router or other wireless access point on the network.

- 1 Select  >  >  >  > **NETWORK** > **WI-FI ACCESS POINT**.
- 2 Select **SSID**, and change the default SSID, or name, for the wireless access point (optional).
- 3 Select **AP SECURITY**, and change the security type for the access point (optional).

**NOTE:** It is strongly recommended that you use the default WPA2 PERSONAL AP SECURITY setting. It is the most widely-used and secure wireless security protocol.

- 4 Select **PASSWORD**, and change the default password for the access point (optional).
- 5 If necessary, select **COUNTRY**, and select your region.
- 6 Select **CHANNEL**, and select a channel range for the access point (optional).
- 7 Select **SAVE**.

You can adjust the wireless access point configuration at any time (*Wireless Access Point Settings, page 52*).


## Connecting the Fusion PartyBus Device to a Wireless Access Point

- 1 Select  >  >  > **NETWORK > WI-FI CLIENT > SSID.**

A list of wireless access points within range appears.

- 2 Select the Fusion PartyBus wireless access point.

- 3 Select an option:

- To enter the password, select **PASSWORD**, enter the password, and select .
- If you are connecting to the wireless access point using WPS, verify that WPS has been enabled on the access point, and select **WPS**.

**NOTE:** It can take up to two minutes to successfully connect to the access point after you select **WPS**.

- 4 Select **SAVE**.

## Advanced Network Configuration

You can perform advanced networking tasks on a Fusion PartyBus device, such as defining DHCP ranges and setting static IP addresses.

### Wireless Access Point Settings

Select  >  >  > **NETWORK > ADVANCED > WI-FI ACCESS POINT.**

**NOTE:** You must configure the device to be a wireless access point before you can change the settings ([Setting the Fusion PartyBus Device as a Wireless Access Point, page 51](#)).

**SSID:** Sets the SSID, or name, for the network.

**AP SECURITY:** Sets the type of wireless security protocol used by the access point.

**NOTE:** It is strongly recommended that you set the AP SECURITY using WPA2 PERSONAL. It is the most widely-used and secure wireless security protocol.

**PASSWORD:** Sets the password for the access point. This is not available when the AP SECURITY setting is set to NONE.

**COUNTRY:** Sets the region where the stereo is located. Different regions may use different channels on the wireless spectrum, so you should set this to best accommodate local wireless devices.

**CHANNEL:** Sets the access point to use a group of channels in the high, low, or middle range of the available spectrum for your region. You may experience better performance if you set the channel in a range with fewer broadcasting access points.

**DHCP SERVER:** Sets the device to act as a wireless access point and the DHCP server on the network ([DHCP Settings, page 52](#)).

**WPS:** Initiates a Wi-Fi Protected Setup (WPS) connection. Devices with a WPS button or setting can connect to the access point on this stereo when the WPS connection is active.

**NOTE:** It can take up to two minutes to successfully connect to the access point after you select WPS.

### DHCP Settings

Select  >  >  > **NETWORK > ADVANCED > DHCP SERVER.**

**DHCP ENABLED:** Sets the device as the DHCP server on the network.

**START IP:** Sets the first IP address in the IP-address range of the DHCP server.

**END IP:** Sets the final IP address in the IP-address range of the DHCP server.

## Setting a Static IP Address

If the stereo is configured as a DHCP server, it is automatically assigned the IP address of 192.168.0.1. You can change this IP address.

If the stereo is a client on the network and you do not want the DHCP server to automatically assign an IP address to the stereo, you can set a static IP address.

**NOTE:** Every device on the network must have a unique IP address. If you select a static IP address that is the same as the IP address on the network, the devices will not work properly.

1 Select  >  >  >  > **NETWORK** > **ADVANCED** > **WI-FI IP** > **STATIC IP**.

2 Select an option:

- To set the IP address, select **IP**, and enter the IP address.
- To set the subnet mask, select **MASK**, and enter the subnet mask.

**NOTE:** The subnet mask must match all other devices on the network to work properly. A typical subnet mask is 255.255.255.0.





- To set the default gateway IP address, select **GATEWAY**, and enter the gateway IP address.

**NOTE:** The default gateway is typically set as the IP address of the DHCP server on the network.

3 Select **Save**.

## Resetting Network Settings

You can reset all network settings for this stereo to the factory default values.

Select  >  >  >  > **NETWORK** > **RESET** > **YES**.

## Additional Stereo Control Options

### Connecting to a Garmin Watch

For more information about the watch, see the watch manual at [www.garmin.com/manuals](http://www.garmin.com/manuals).

1 Following the instructions in the watch manual, install the Fusion-Link Lite™ app from the Connect IQ™ store onto the watch.

2 On the stereo, select the **BT** source.

3 Select  > **CONNECTIONS** > **DISCOVERABLE**.

The stereo remains discoverable for two minutes.

4 Bring the watch within 3 m (10 ft.) of the stereo.

**NOTE:** Stay 10 m (33 ft.) away from other ANT® devices while pairing.

5 Open the Fusion-Link Lite app on the watch.

The first time you open the app on the watch, the watch automatically pairs with and connects to the stereo.

If you need to pair to another stereo, in the Fusion-Link Lite app, select **Settings** > **Pair new**.

6 Control the audio playback using the Fusion-Link Lite app on the watch.

After the devices are paired, they connect automatically when they are turned on, within range, and the app is open on the watch.

### Fusion-Link Wireless Remote Control App

You can use the Fusion-Link remote control app on your compatible Apple or Android device to adjust the stereo volume, change the source, control playback, select and manage radio presets, and adjust some stereo settings.

The app communicates with the stereo using a wireless connection to the mobile device. You must connect your compatible device to the stereo using Bluetooth or Wi-Fi technology to use the app.

For information about the Fusion-Link remote control app for compatible Apple or Android devices, go to the Apple App Store<sup>SM</sup> or the Google Play<sup>TM</sup> store.

## Resetting the Stereo Settings

You can reset all of the stereo features and settings to the factory default settings.

Select  >  >  > **UPDATE** > **FACTORY RESET**.

## Vehicle Cameras

### **WARNING**

This device is intended to enhance situational awareness when used properly. If used improperly, you could become distracted by the display, which could lead to an accident causing serious personal injury or death. Only access the information displayed on the device with a glance. Always maintain awareness of your surroundings and do not stare at the display or become distracted by the display. Focusing on the display could cause you to miss obstacles or hazards, which could result in an accident leading to personal injury or death.

The stereo can show live video and audio from connected vehicle cameras, such as backup cameras or side-mirror cameras.

If your vehicle cameras and stereo were included with the new vehicle, the cameras are already connected and configured by the manufacturer.

If you are installing your own backup camera kit, you must connect the camera video to a video input on the back of the stereo, and the camera microphone to the Aux2 input (if applicable). To show the camera automatically, you must connect the camera to a camera trigger wire. For more information about the stereo connections, see the *Vieo Series Installation Instructions*.

## Viewing a Vehicle Camera

Before you can view a vehicle camera, a compatible camera must be connected to the stereo.

Before you can view cameras automatically, you must enable camera auto-display options ([Enabling Camera Auto-Display, page 54](#)).

1 Select an option to view a vehicle camera:

- To automatically show the backup camera, place the vehicle into reverse.
- To automatically show a side-mirror camera, activate the vehicle turn signal.

**NOTE:** This option is typically available only as a manufacturer option on select vehicles, and may not be available on your vehicle.


- To manually show the backup camera, select  > **Camera**.

The vehicle camera view appears on the screen.

2 If available, select  to mute or unmute audio from the camera microphone.

**TIP:** If the vehicle camera microphone is connected and this option is not available, verify the microphone is enabled ([Enabling the Vehicle Camera Microphone, page 55](#)).

3 Select an option to resume normal operation:

- Take the vehicle out of reverse.
- Deactivate the vehicle turn signal.
- Select .

## Enabling Camera Auto-Display



You can enable or disable auto-display features for compatible vehicle cameras.

1 Select  > **Camera** >  > **Auto-Display**.

2 Select a camera.

## Flipping the Camera Image

In some installation situations or when performing reverse maneuvers, you can reflect the camera image, similar to the view in a rearview mirror.

- 1 Select  > **Camera** >  > **Mirror Video**.
- 2 Select a camera.

## Enabling the Vehicle Camera Microphone

Before you can enable the vehicle camera microphone, it must be connected to the Aux2 input on the stereo. If the connected vehicle camera includes a microphone, you can enable or disable the microphone in the camera viewer.

Select  > **Camera** >  > **Mic Installed**.

When the microphone is enabled,  appears on the camera screen.

## Traffic

### NOTICE

Garmin is not responsible for the accuracy or timeliness of the traffic information.

Your device can provide information about traffic on the road ahead or on your route. You can set your device to avoid traffic when calculating routes, and to find a new route to your destination if a large traffic delay occurs on your active route ([Traffic Settings, page 60](#)). The traffic map allows you to browse the map for traffic delays in your area.

To provide traffic information, your device must be receiving traffic data.

- All product models can receive subscription-free traffic data using the Garmin Drive app ([Receiving Traffic Data Using Your Smartphone, page 55](#)).

Traffic data is not available in all areas. For information about traffic coverage areas, go to [garmin.com/traffic](http://garmin.com/traffic).




## Receiving Traffic Data Using Your Smartphone

Your device can receive subscription-free traffic data while connected to a smartphone running the Garmin Drive app.

- 1 Connect your device to the Garmin Drive app ([Pairing with Your Smartphone, page 28](#)).
- 2 On your Vicio device, select  >  >  > **Navigation** > **Traffic**, and verify the **Traffic** check box is selected.

## Enabling Traffic

You can enable or disable traffic data. When traffic data is disabled, the device does not receive traffic data, but it still avoids potentially congested areas in routes using the trafficTrends™ feature, if enabled.



- 1 Select  >  >  > **Navigation** > **Traffic**.
- 2 Select the **Traffic** check box.

## Viewing Traffic on the Map

The traffic map shows color-coded traffic flow and delays on nearby roads.

- 1 From the main menu, select  >  > **Traffic**.
- 2 If necessary, select  > **Legend** to view the legend for the traffic map.

## Searching for Traffic Incidents

- 1 From the main menu, select  > **Traffic**.
- 2 Select  > **Incidents**.
- 3 Select an item in the list.
- 4 If there is more than one incident, use the arrows to view additional incidents.

# Voice Command

**NOTE:** Voice command is not available for all languages and regions, and may not be available on all models.

**NOTE:** Voice Activated Navigation may not achieve desired performance when in a noisy environment.

Voice command allows you to use your device by saying words and commands. The voice command menu provides voice prompts and a list of available commands.

## Tips for Speaking to the Device

- Speak in a clear voice directed at the device.
- Start each request with *OK, Garmin*.
- Reduce background noise, such as voices or the radio, to help the device interpret your commands more accurately.
- Respond to voice prompts from the device as needed.
- If you do not receive a useful response, try rephrasing your request.
- If the device does not respond to your requests, verify it is not placed near a speaker or air vent, which can produce noise that interferes with the microphone.

## Launching Garmin Voice-Activated Navigation

Garmin voice-activated navigation allows you to use plain language spoken requests to search for locations and addresses, start routes with turn-by-turn directions, place hands-free phone calls, and more.

- Say *OK, Garmin*, and make a spoken request.  
For example, you can say phrases like these:
  - *OK, Garmin, take me home.*
  - *OK, Garmin, where's the library?*

## Checking Your Arrival Time

While a route is active, you can say a phrases to check your estimated time of arrival at your destination.

Say *OK, Garmin, what time will we arrive?*.

## Changing Device Settings Using Your Voice

You can say phrases like these to set the volume or brightness to a value from 0 to 10.

- *OK, Garmin, increase the volume.*
- *OK, Garmin, set the volume to 0.*
- *OK, Garmin, set the volume to 9.*
- *OK, Garmin, decrease the brightness.*
- *OK, Garmin, set the brightness to 5.*

## Disabling Voice Command

You can disable voice command, which prevents you from accidentally activating voice command while speaking.

- 1 Select  > **Navigation** > **Voice Command**.
- 2 Select  > **Disable**.




# Using the Apps

## Viewing the Owner's Manual on Your Device

You can view the complete owner's manual on the device screen in many languages.

- 1 Select  > **Owner's Manual**.

The owner's manual appears in the same language as the software text (*Setting the Text Language*, page 62).

- 2 Select  to search the owner's manual (optional).


## Trip Planner

You can use the trip planner to create and save a trip, which you can navigate later. This can be useful for planning a delivery route, a vacation, or a road trip. You can edit a saved trip to further customize it, including reordering locations, optimizing the order of stops, adding suggested attractions, and adding shaping points.





You can also use the trip planner to edit and save your active route.

### Planning a Trip

A trip can include many destinations, and it must include at least a starting location and one destination. The starting location is the location from which you plan to start your trip. If you start navigating the trip from a different location, the device gives you the option to route to your starting location first. For a round trip, the starting location and final destination can be the same.

- 1 Select  > **Trip Planner** > **New Trip**.
- 2 Select **Select Start Location**.
- 3 Choose a location for your starting point, and select **Select**.
- 4 Select **Select Destination**.
- 5 Choose a location for a destination, and select **Select**.
- 6 Select **Add Location** to add more locations (optional).
- 7 After you have added all the necessary locations, select **Next** > **Save**.
- 8 Enter a name, and select **Done**.

### Editing and Reordering Locations in a Trip

- 1 Select  > **Trip Planner** > **Saved Trips**.
- 2 Select a saved trip.
- 3 Select a location.
- 4 Select an option:
  - To move the location up or down, select , and drag the location to a new position in the trip.
  - To add a new location after the selected location, select .
  - To remove the location, select .


### Optimizing the Order of Destinations in a Trip

The device can automatically optimize the order of destinations in your trip to create a shorter, more efficient route. The starting location and final destination are not changed when you optimize the order.

While editing a trip, select  > **Optimize Order**.



### Discovering Attractions Along Your Trip

The device can suggest interesting or popular attractions to add to your trip.

- 1 While editing a trip, select  > **Suggest Attractions**.
- 2 Select an attraction to view more information.
- 3 Select **Select** to add the attraction to your trip.


## Changing Routing Options for a Trip

You can customize how the device calculates the route when you start your trip.

- 1 Select  > **Trip Planner** > **Saved Trips**.
- 2 Select a saved trip.
- 3 Select the vehicle profile icon, and select the vehicle you plan to use while navigating the trip (optional).
- 4 Select .
- 5 Select an option:
  - To add shaping points to your trip, select **Shape Route**, and follow the on-screen instructions ([Shaping Your Route, page 12](#)).
  - To change the calculation mode for the trip, select **Route Preference** ([Changing the Route Calculation Mode, page 12](#)).

## Navigating to a Saved Trip


Before you can start navigating a saved trip, the active vehicle profile on the device must match the selected vehicle profile for the trip ([Changing Routing Options for a Trip, page 58](#)). If it does not match, the device prompts you to change the vehicle profile before you can start the trip ([Switching the Vehicle Profile, page 7](#)).

- 1 Select  > **Trip Planner** > **Saved Trips**.
- 2 Select a saved trip.
- 3 Select **Go!**.
- 4 Select the first location to navigate to, and select **Start**.

The device calculates a route from your current location to the selected location, and then it guides you to the remaining trip destinations in order.

## Editing and Saving Your Active Route

If a route is active, you can use the trip planner to edit and save your route as a trip.

- 1 Select  > **Trip Planner** > **Saved Trips** > **My Active Route**.
- 2 Edit your route using any of the trip planner features.

The route recalculates each time you make a change.
- 3 Select **Save** to save your route as a trip, which you can navigate again later (optional).

## Viewing Previous Routes and Destinations


Before you can use this feature, you must enable the travel history feature ([Route Preference Settings, page 60](#)).

You can view your previous routes and places you have stopped on the map.

Select  > **Trip History**.

## Viewing the Weather Forecast


Before you can use this feature, your device must be receiving weather data. You can connect your device to the Garmin Drive app to receive weather data ([Pairing with Your Smartphone, page 28](#)).

- 1 Select  > **Weather**.

The device shows the current weather conditions and a forecast for the next several days.
- 2 Select a day.

The detailed forecast for that day appears.

## Viewing Weather Near a Different City

- 1 Select  > **Weather** > **Current Location**.
- 2 Select an option:
  - To view weather for a favorite city, select a city in the list.
  - To add a favorite city, select **Add City**, and enter a city name.

## Onboard Systems Control and Monitoring





Your Vio device can monitor and control circuits using an EmpirBus™ digital switching system or another compatible digital switching system.

For example, you can control the interior lights in your RV.

### Opening the Digital Switching Controls

For most installations, digital switching modules connect to the Vio dock using a Controller Area Network (CAN) bus. The Vio system also supports EmpirBus Connect 50 Wi-Fi digital switching systems that connect to the Vio dock without a CAN connection.

**NOTE:** Your installation may include a widget to open the system controls from the home screen.

- If your device is connected to modules using a Controller Area Network (CAN) bus, select  >  > **RV Controls**.
- If you are using an EmpirBus Connect 50 Wi-Fi digital switching system, select  >  > **EmpirBus**.

## Settings

### Navigation Settings

Select  >  >  > **Navigation**.

**Vehicle Profile:** Sets the vehicle profile for each vehicle with which you will use your device.

**Map & Vehicle:** Sets the map detail level and the vehicle icon to display on your device.

**Route Preferences:** Sets the route preferences when navigating.

**Driver Assistance:** Sets driver assistance alerts.

**Traffic:** Sets the traffic details the device uses. You can set your device to avoid traffic when calculating routes, and to find a new route to your destination if a traffic delay occurs ([Avoiding Traffic Delays on Your Route](#), page 13).

**Units:** Sets the unit of measure used for distances.

### Map and Vehicle Settings

Select  >  >  > **Navigation** > **Map & Vehicle**.

**Vehicle:** Sets the vehicle icon that represents your position on the map.

**Voice Language:** Sets the language for navigation voice prompts.

**Driving Map View:** Sets the perspective on the map.

**Map Detail:** Sets the level of detail on the map. More detail may cause the map to draw slower.

**Map Theme:** Changes the color of the map data.

**Map Layers:** Sets the data that appears on the map page ([Customizing the Map Layers](#), page 27).



**Auto Zoom:** Automatically selects the zoom level for optimal use of your map. When disabled, you must zoom in or out manually.

**myMaps:** Sets which installed maps the device uses.

## Enabling Maps

You can enable map products installed on your device.

**TIP:** To purchase additional map products, go to <http://buy.garmin.com>.

- 1 Select  >  >  > **Navigation > Map & Vehicle > myMaps.**
- 2 Select a map.

## Route Preference Settings

Select  >  >  > **Navigation > Route Preferences.**

**Calculation Mode:** Sets the route calculation method.

**Avoidances:** Sets road features to avoid on a route.

**Custom Avoidances:** Allows you to avoid specific roads or areas.

**Environmental Zones:** Sets the avoidance preferences for areas with environmental or emissions restrictions that may apply to your vehicle.

**Toll Roads:** Allows your device to avoid routing through North American toll roads.

**NOTE:** This setting is available only in North America.

**Tolls and Fees:** Allows your device to avoid routing through European toll roads or roads requiring toll stickers.

**NOTE:** This setting is available only in Europe.

**Restricted Mode:** Disables all functions that require significant operator attention.

**Travel History:** Allows the device to record information for the myTrends, Trip History, and Trip Log features.

**Clear Travel History:** Clears your travel history for the myTrends, Trip History, and Trip Log features.

## Driver Assistance Settings

Select  >  >  > **Navigation > Driver Assistance.**

**Proximity Alerts:** Alerts you when you approach speed cameras or red light cameras.

**Route Preview:** Shows a preview of the major roads in your route when you start navigation.

## Traffic Settings

From the main menu, select  >  >  > **Navigation > Traffic.**

**Traffic:** Enables traffic.

**Current Provider:** Sets the traffic provider to use for traffic data. The Auto option selects the best available traffic data automatically.

**Subscriptions:** Lists the current traffic subscriptions.

**Optimize Route:** Enables the device to use optimized alternate routes automatically or upon request (*Avoiding Traffic Delays on Your Route, page 13*).




**Traffic Alerts:** Sets the traffic delay severity for which the device displays a traffic alert.

## Enabling Bluetooth Wireless Technology

Select  >  >  > **Bluetooth.**

## Connecting to a Wireless Network

Your Vizio display is connected wirelessly to the dock by default. You can connect to an external wireless network to use external network features, or to download map and software updates ([Updating Maps and Software Using a Wi-Fi Network, page 65](#)).

- 1 Select  >  >  > **Wi-Fi**.
- 2 If necessary, select the toggle switch to turn on wireless network technology.
- 3 Select a wireless network.
- 4 If necessary, enter the encryption key.

The device connects to the wireless network. When you place the device into the dock, it disconnects from the external network and reconnects to the Vizio dock automatically.

## Display Settings

Select  >  >  > **Display**.

**Brightness Level:** Sets the display brightness level on your device.

**Adaptive Brightness:** Automatically adjusts the backlight brightness based on the ambient light when the device is out of the mount.

**Theme:** Allows you to select day or night color mode. If you select the Automatic option, the device automatically switches to day or night colors based on the time of day.

**Wallpaper:** Sets the wallpaper background on your device.

**Sleep:** Allows you to set the amount of idle time before your device enters sleep mode while using battery power.




**Daydream:** Enables or disables the daydream screen saver.

**Font size:** Increases or decreases the font size on your device.

**When device is rotated:** Enables the screen to rotate automatically between portrait and landscape display modes based on the device orientation or remain in the current orientation.

**NOTE:** The navigation map supports landscape mode only.

## Sound and Notification Settings

Select  >  >  > **Sound & notification**.

**Volume Sliders:** Set the volume levels for navigation, media, calls, alarms, and notification alerts.

**Do not disturb:** Sets the rules for the automatic do-not-disturb feature. This feature allows you to disable audible alerts during specific times or events.

**Default notification ringtone:** Sets the default notification ringtone sound on your device.

**Other sounds:** Allows you to enable or disable sounds for other device interactions, such as screen touches, screen locking, or charging.




**When device is locked:** Sets whether notifications appear on the screen while the device is locked.

**App Notifications:** Allows you to enable or disable notifications for each installed app and modify the do not disturb preferences for each app.

**Notification access:** Allows you to select which apps have access to read system and app notifications.

**Do not disturb access:** Allows you to select which apps can override or modify the do not disturb settings.




## Adjusting Sound and Notification Volume

- 1 Select  >  >  > **Sound & notification**.
- 2 Use the slider bars to adjust the sound and notification volume.

## Enabling or Disabling Location Services

The location services feature must be enabled for your device to find your location, calculate routes, and provide navigational assistance. You can disable location services to plan a route when GPS signals are not available. When location services are disabled, the device enables a GPS simulator to calculate and simulate routes.




**TIP:** Disabling location services can help save battery power.

- 1 Select  >  >  > **Location**.
- 2 Select the toggle switch to enable or disable location services.

**NOTE:** For most uses, you should not change the Mode setting from the default option of Device only. The device includes a high-performance GPS antenna that provides the most accurate location data while navigating.

## Setting the Text Language

You can select the language for text in the device software.

- 1 Select  >  >  > **Language & input** > **Language**.
- 2 Select a language.

## Date and Time Settings

Select  >  >  > **Date & Time**.

**Automatic time zone:** Automatically sets the time zone based on information from the connected network.

**Select time zone:** Sets the time zone on your device when Automatic time zone is disabled.

**Use 24-hour format:** Enables or disables the 24-hour time format.

## Device Settings

Select  >  >  > **About device**.

**System updates:** Allows you to update map and device software.

**Status:** Displays the system status and network information.

**Legal Information:** Allows you to view the end-user license agreement (EULA) and software license information.




**Regulatory information:** Displays e-label regulatory and compliance information.

**Garmin device information:** Displays hardware and software version information.

**Device Data Reporting:** Shares anonymous data to improve the device.

## Resetting Data and Settings

The device offers several options for deleting your user data and resetting all settings to the factory default values.

- 1 Select  >  > .
- 2 Select an option:
  - To clear your travel history, select **Navigation > Route Preferences > Clear Travel History**.  
This option deletes all records of the places you have traveled. It does not delete saved locations, accounts, apps, or installed maps.
  - To reset all navigation settings to the factory default values, select **Navigation > ⋮ > Restore**.  
This option does not delete any user data.
  - To remove all saved wireless networks and paired devices, select **Backup & Reset > Network settings reset**.  
This option does not delete any other user data.
  - To delete all user data and reset all settings to the factory default values, select **Backup & Reset > Factory data reset**.  
This option deletes your travel history, apps, accounts, settings, saved networks, paired devices, and all other user data. Installed maps are not deleted. User files in the Garmin folder may not be deleted.

# Device Information

## Viewing E-label Regulatory and Compliance Information

- 1 From the settings menu, swipe to the bottom of the menu.
- 2 Select **About device** > **Regulatory information**.

## Specifications

Display Specifications	
Operating temperature range	From -20 to 55°C (from -4 to 131°F)
Charging temperature range	From 0 to 45°C (from 32 to 113°F)
Radio frequency (Vieo RV 851/852)	2.4 GHz @ 14 dBm maximum
Radio frequency (Vieo RV 1051/1052)	2.4 GHz @ 15 dBm maximum
Power input	Vehicle power using the included vehicle power cable. AC power using an optional accessory (for home and office use only).
Battery type	Rechargeable lithium-ion

Dock Specifications	
Operating temperature range	From -10 to 55°C (from 14 to 131°F)
Storage temperature range	From -20 to 70°C (from -4 to 158°F)
Input voltage	From 10.8 to 16 Vdc
Current (max.)	15 A
Current (standby mode)	Less than 5 mA
Fuse	15 A mini blade type
Wireless frequency/protocol	2.4 GHz @ 7.9 dBm nominal

On-board, Class D Amplifier	
Output music power per channel	4 x 70 W max., 2 ohm
Total output peak power	280 W max.
Output power per channel	4 x 43 W RMS at 14.4 Vdc input, 2 ohm, 10% THD <sup>3</sup> 4 x 26 W RMS at 14.4 Vdc input, 4 ohm, 10% THD <sup>3</sup>
Line output level (max.)	5.5 V (peak to peak)
Aux. input level (typical)	1 V RMS

<sup>3</sup> The stereo may limit the output power to prevent the amplifier from overheating, and to maintain the audio dynamics.

Tuner	Europe and Australasia	USA	Japan
FM radio frequency range	87.5 to 108 MHz	87.5 to 107.9 MHz	76 to 95 MHz
FM frequency step	50 kHz	200 kHz	50 kHz
AM radio frequency range	522 to 1620 kHz	530 to 1710 kHz	522 to 1620 kHz
AM frequency step	9 kHz	10 kHz	9 kHz

## Device Maintenance

### Garmin Support Center

Go to [support.garmin.com](https://support.garmin.com) for help and information, such as product manuals, frequently asked questions, videos, and customer support.

### Map and Software Updates

Map updates provide the newest available changes to roads and locations in the maps used by your device. Keeping maps up to date helps your device find recently added locations and calculate more accurate routes. Map updates are large and may take several hours to complete.

Software updates provide changes and improvements to the device features and operation. Software updates are small and take a few minutes to complete.

The display device downloads software updates for both the display and the stereo dock simultaneously. If you update the display while it is disconnected from the stereo dock, the display prompts you to update the stereo dock software the next time you connect it to the stereo dock.

You can update your device using two methods.

- You can connect the device to a Wi-Fi network to update directly on the device (recommended). This option allows you to update your device conveniently without connecting it to a computer.
- You can connect the device to a computer and update it using the Garmin Express application ([garmin.com/express](https://garmin.com/express)).



## Updating Maps and Software Using a Wi-Fi Network

### NOTICE



Map and software updates may require the device to download large files. Regular data limits or charges from your internet service provider apply. Contact your internet service provider for more information about data limits or charges.

You can update the maps and software by connecting your device to a Wi-Fi network that provides access to the internet. This allows you to keep your device up to date without connecting it to a computer. Verify your vehicle is parked in a safe location and consistent power is supplied to the device during the update process.

- 1 Connect the device to a Wi-Fi network ([Connecting to a Wireless Network, page 61](#)).

While connected to a Wi-Fi network, the device checks for available updates automatically and displays a notification when an update is available.

- 2 Select an option:

- When an update notification appears, swipe down from the top of the screen, and select **An update is available..**
- To manually check for updates, select  >  > **System updates.**

The device displays available map and software updates. When an update is available, **Update Available** appears below Map or Software.

- 3 Select an option:

- To install all available updates, select **Download.**
- To install only map updates, select **Map.**
- To install only software updates, select **Software.**

- 4 Read the license agreements, and select **Accept All** to accept the agreements.



**NOTE:** If you do not agree with the license terms, you can select **Reject**. This stops the update process. You cannot install updates until you accept the license agreements.


- 5 Verify your vehicle is parked in a safe location and consistent power is supplied to the device, and select **Continue.**
- 6 Keep the device connected to power and within range of the Wi-Fi network until the update process is complete.

**TIP:** If a map update is interrupted or canceled before it completes, your device may be missing map data. To repair missing map data, you must update the maps again.


## Updating Maps and Software with Garmin Express

You can use the Garmin Express application to download and install the latest map and software updates for your device.

- 1 If you do not have the Garmin Express application installed on your computer, go to [garmin.com/express](https://garmin.com/express) and follow the on-screen instructions to install it (*Updating Maps and Software with Garmin Express, page 66*).
- 2 Open the  Garmin Express application.
- 3 Connect your device to your computer using a micro-USB cable.  
The small end of the cable connects to the micro-USB port  on your Vioo device, and the large end connects to an available USB port on your computer.

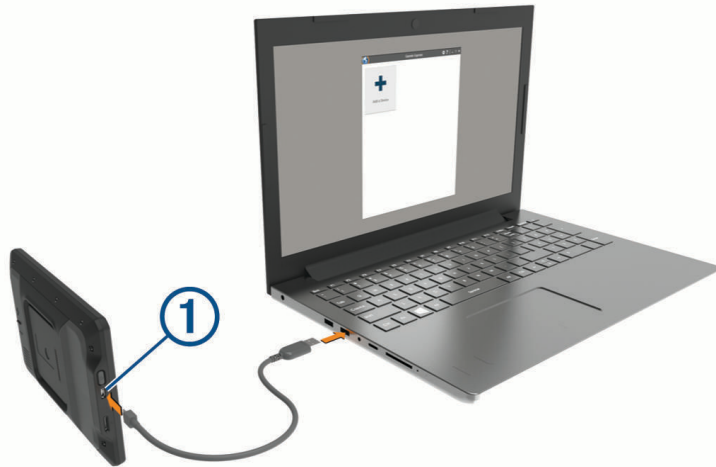

- 4 In the Garmin Express application, click **Add a Device**.  
The Garmin Express application searches for your device and displays the device name and serial number.
- 5 Click **Add Device**, and follow the on-screen instructions to add your device to the Garmin Express application.  
When setup is complete, the Garmin Express application displays the updates available for your device.

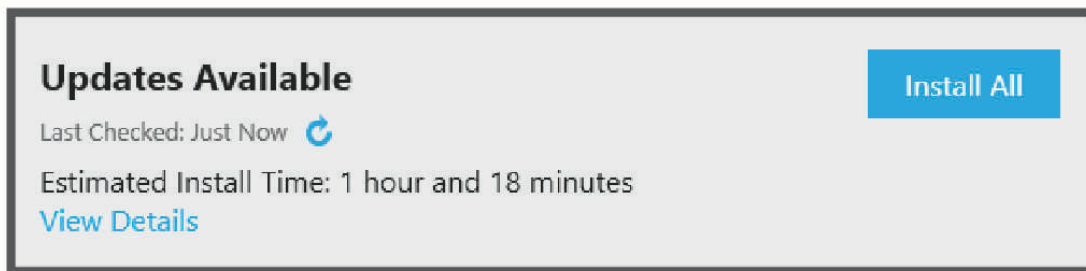

- 6 Select an option:
  - To install all available updates, click **Install All**.
  - To install a specific update, click **View Details**, and click **Install** next to the update you want.

The Garmin Express application downloads and installs the updates onto your device. Map updates are very large, and this process may take a long time on slower internet connections.

**NOTE:** If a map update is too large for the internal storage of the device, the software may prompt you to install a microSD card in your device to add storage space (*Installing a Memory Card for Maps and Data, page 69*).
- 7 Follow the on-screen instructions during the update process to finish installing updates.  
For example, during the update process, the Garmin Express application may instruct you to disconnect and reconnect your device.

## Device Care

### NOTICE

Avoid dropping your device.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Never use a hard or sharp object to operate the touchscreen, or damage may result.

Do not expose the device to water.

### Cleaning the Touchscreen




- 1 Use a soft, clean, lint-free cloth.
- 2 If necessary, lightly dampen the cloth with water.
- 3 If using a dampened cloth, turn off the device and disconnect the device from power.
- 4 Gently wipe the screen with the cloth.

## Troubleshooting

### My device is not acquiring satellite signals

- Verify the location services feature is enabled ([Enabling or Disabling Location Services, page 62](#)).
- Take your device out of parking garages and away from tall buildings and trees.
- Remain stationary for several minutes.

### My device does not connect to my phone

- Select  >  >  > **Bluetooth**.  
The Bluetooth option must be enabled.
- Enable Bluetooth wireless technology on your phone and bring your phone within 10 m (33 ft.) of the device.
- Verify your phone is compatible.  
Go to [www.garmin.com/bluetooth](http://www.garmin.com/bluetooth) for more information.
- Complete the pairing process again.  
To repeat the pairing process, you must unpair your phone and device ([Deleting a Paired Bluetooth Device, page 31](#)), and complete the pairing process ([Pairing with Your Smartphone, page 28](#)).

### My phone is not listed as a Bluetooth audio source

The Bluetooth audio source requires a separate Bluetooth connection with your smartphone. To use your phone as a Bluetooth media source, you must pair it separately in the Music app ([Connecting a Compatible Bluetooth Device, page 39](#)).






### Network Troubleshooting

If you cannot see or connect to Fusion PartyBus devices on the network, check the following:

- Verify that only one device, either a stereo or a router, is configured as a DHCP server.
- Verify that all Fusion PartyBus devices, network switches, routers, and wireless access points are connected to the network and turned on.
- Verify that wireless Fusion PartyBus devices are connected to a wireless router or wireless access point on the network.
- If you configured static IP addresses, verify that every device has a unique IP address, that the first three sets of numbers in the IP addresses match, and that the subnet masks on every device are identical.
- If you have made configuration changes that might be causing networking issues, reset all network settings to factory defaults.

## Network Status Icons

A network-status icon is shown on some screens of the stereo. You can refer to this table to understand the appearance of the icon and help diagnose issues with the Fusion PartyBus network ([Network Troubleshooting, page 67](#)).

	The stereo is configured for a wired network connection and connected correctly to a wired network using an Ethernet cable.
	The stereo is configured for a wired network connection, but cannot detect the wired network. An Ethernet cable may not be connected or there may be other problems with the network.
	The stereo is configured as a wireless access point.
	The stereo is configured as a wireless client and connected to a wireless access point. The number of bars indicates the signal strength.
	The stereo is configured as a wireless client, but is not connected to a wireless access point. There may be a problem with the connection settings or with the wireless access point.

## My steering wheel controls are unresponsive or inaccurate

If your steering wheel controls work inconsistently, you may be able to recalibrate them ([Calibrating Steering Wheel Controls, page 68](#)).




**NOTE:** The steering wheel control calibration options are not available for all vehicle installations.

### Calibrating Steering Wheel Controls

Before you begin calibrating the steering wheel controls, you should allow the Vieo system and the vehicle to warm up to the vehicle's average running temperature.

You can calibrate your steering wheel controls to work consistently with your Vieo system. This can be helpful if some controls are unresponsive or inaccurate.

**NOTE:** You can calibrate steering wheel controls only for vehicle chassis that use analog technology.

- 1 Place the display in the stereo dock.
- 2 On the Vieo display, select  >  >  > **Vehicle Integration** > **Steering Wheel Controls**.
- 3 Select an option:
  - To begin calibrating the vehicle controls, select **Calibrate**.
  - To update a previous calibration, select **Recalibrate**.
  - To delete a previous calibration, select **Delete Calibration**.
- 4 Follow the on-screen instructions on your display to complete the calibration process.

**NOTE:** While you are calibrating the steering wheel controls, you can select **RESET** to begin calibrating the current button again. If a button does not exist on your steering wheel, you can select **Skip** to begin calibrating the next button.

## Appendix

### Data Management

You can store files on your device. The device has a memory card slot for additional data storage.

**NOTE:** The device is not compatible with Windows® 95, 98, Me, Windows NT®, and Mac® OS 10.3 and earlier.

### About Memory Cards

You can purchase memory cards from an electronics supplier, or purchase pre-loaded Garmin mapping software ([www.garmin.com](http://www.garmin.com)). In addition to map and data storage, the memory card can be used to store files such as maps, images, geocaches, routes, waypoints, and custom POIs.

## Installing a Memory Card for Maps and Data

You can install a memory card to increase the storage space for maps and other data on your device. You can purchase memory cards from an electronics supplier, or go to [www.garmin.com/maps](http://www.garmin.com/maps) to purchase a memory card with pre-loaded Garmin mapping software. The device supports microSD memory cards from 4 to 32 GB. Memory cards must use the FAT32 file system format. Memory cards greater than 32 GB must be formatted using the device (*Formatting the Memory Card, page 69*).





- 1 Locate the map and data memory card slot on your device (*Display Overview, page 1*).
- 2 Insert a memory card into the slot.
- 3 Press it in until it clicks.

## Formatting the Memory Card

The device requires a memory card formatted using the FAT32 file system. You can use the device to format your card using this file system.

You must format a brand new memory card if it is not formatted using the FAT32 file system.

**NOTE:** Formatting the memory card deletes all data on the card.

- 1 Select  >  >  > **Storage & USB**.
- 2 Select your memory card.
- 3 Select  > **Settings** > **Format** > **ERASE & FORMAT**.
- 4 Select **Done**.

## Purchasing Additional Maps

- 1 Go to your device product page at [garmin.com](http://garmin.com).
- 2 Click the **Maps** tab.
- 3 Follow the on-screen instructions.

## Purchasing Accessories

Go to [garmin.com/accessories](http://garmin.com/accessories).

