

# ECHOMAP PLUS

## E-Card Instructions

\* Check that the unit is updated with the latest software version, 7.50 - 7.90. Go to

[www8.garmin.com/support/software/marine.html](http://www8.garmin.com/support/software/marine.html)


Power ON Unit, before Inserting the E-Card

Accept warning and press the **HOME** Button

Under **Charts** select **Fishing Charts**

Now, insert the E-Card into the Unit

A window will show the E-Card is loading

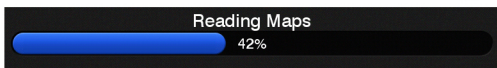

After loading, press the **BACK** button

From Fishing Chart, press the **MENU** button

In **Fishing Chart Menu**, select **Chart Setup**

Selecting **Chart Setup**, displays the following



Select **Satellite Photos** setting (see above)

Change **Satellite Photos** to **Land Only**

The Unit screen will appear WHITE

Until Satellite Photos is turned ON

~Access the **Chart Appearance**

**Orientation** set to **Head Up**

**Detail** set to **Normal** (default)

The E-Card should be displayed on the Unit

For more information, call (985) 898-0025

Or check out [www.standardmap.com](http://www.standardmap.com)