


GARMIN®

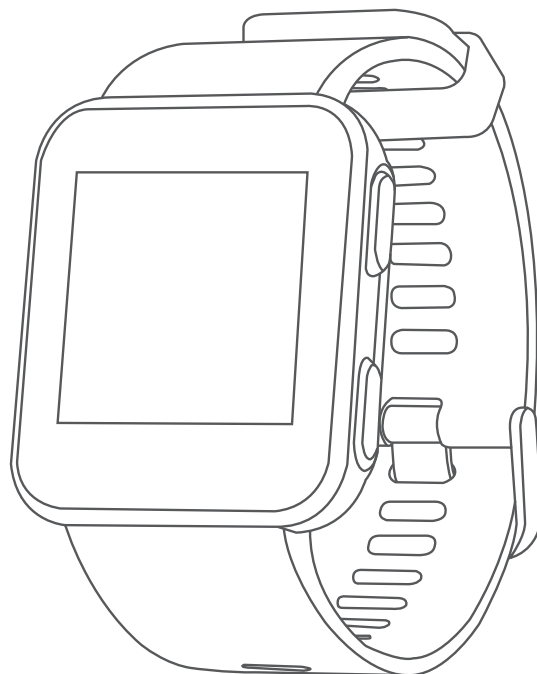

APPROACH® S10

Owner's Manual

© 2018 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Garmin®, the Garmin logo, and Approach® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Connect™, Garmin Express™, and Garmin Golf™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Other trademarks and trade names are those of their respective owners.

Table of Contents

| | |
|--|----------|
| Getting Started | 1 |
| Keys..... | 1 |
| Turning On the Device..... | 1 |
| Turning Off the Device..... | 1 |
| Status Icons..... | 2 |
| Product Updates..... | 2 |
| Playing Golf | 2 |
| Hole View..... | 3 |
| Measuring a Shot..... | 3 |
| Viewing Course Features..... | 4 |
| Keeping Score..... | 4 |
| Changing Holes..... | 4 |
| Changing the Green..... | 5 |
| Changing the Course..... | 5 |
| Ending a Round..... | 5 |
| Uploading Your Scorecard Using Garmin Express | 5 |
| Garmin Golf App | 5 |
| Customizing Your Device | 5 |
| System Settings..... | 5 |
| Troubleshooting | 6 |
| My device is in the wrong language..... | 6 |
| My device does not display the correct time or date..... | 6 |
| Appendix | 7 |
| Charging the Device..... | 7 |
| Device Care..... | 7 |
| Cleaning the Device..... | 8 |
| Specifications..... | 8 |
| Viewing E-label Regulatory and Compliance Information..... | 8 |

Getting Started

⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Keys



| | | |
|---|------|---|
| ① | UP | Hold to turn the device on and off. Select to scroll through menus and settings. During play, select to scroll through hazards, layups, and doglegs. |
| ② | DOWN | Select to scroll through menus, and settings. While viewing the clock, select to view sunrise and sunset times. During play, select to scroll through hazards, layups, and doglegs. |
| ③ | OK | Select to choose menu options and acknowledge messages. During play, select to access in-round features. |
| ④ | BACK | Select to return to the previous menu. |

Turning On the Device





The first time you turn on the device, you are prompted to configure system settings.

- 1 Hold ①.
- 2 Follow the on-screen instructions.

Turning Off the Device

- 1 Hold ①.
- 2 Select **Yes**.

Status Icons

| | |
|---|------------------|
|  | Battery status |
|  | Battery charging |
|  | Sunrise |
|  | Sunset |

Product Updates

On your computer, install Garmin Express™ (www.garmin.com/express). On your smartphone, install the Garmin Golf™ app.

This provides easy access to these services for Garmin® devices:

- Software updates
- Course updates
- Data uploads to Garmin Golf
- Product registration

Setting Up Garmin Express

- 1 Connect the device to your computer using a USB cable.
- 2 Go to www.garmin.com/express.
- 3 Follow the on-screen instructions.

Playing Golf


Before you can play golf, you must wait until the device acquires satellite signals, which may take 30 to 60 seconds.

- 1 Select **OK**.
- 2 Select **Start Round**.
The device locates satellites, calculates your location, and selects a course if there is only one course nearby.
- 3 If the course list appears, select a course from the list.
- 4 Follow the on-screen instructions to complete the setup and start a round.

Hole View

The device shows the current hole you are playing, and automatically transitions when you move to a new hole.

NOTE: Because pin locations change, the device calculates the distance to the front, middle, and back of the green, but not the actual pin location.

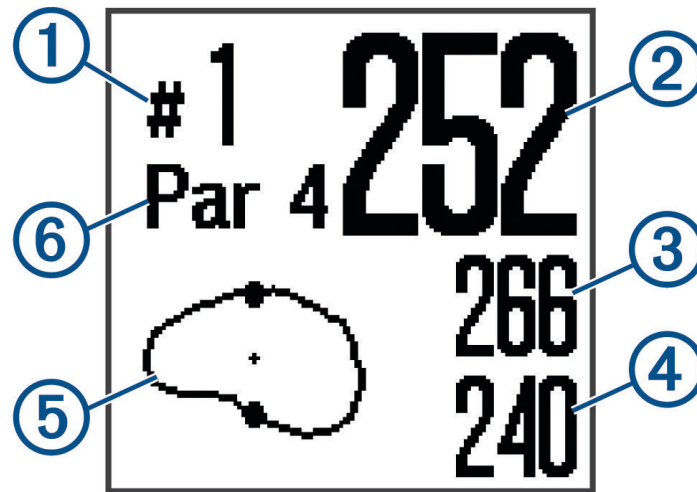

| | |
|---|---|
| ① | Current hole number. |
| ② | Distance to the middle of the green. |
| ③ | Distance to the back of the green. |
| ④ | Distance to the front of the green. |
| ⑤ | Approximate view of the green. The middle of the green is indicated with +. |
| ⑥ | Par for the hole. |


Measuring a Shot

- 1 While playing golf, hold **OK**.
The Measuring Shot screen appears.
- 2 Walk to your ball.
TIP: You can select **DOWN** to reset the measurement.

Viewing Course Features

You can view distances to course features, such as hazards, layups, and doglegs, for par 4 and 5 holes.

- 1 While playing golf, select **UP** or **DOWN**.
- 2 Select a feature.

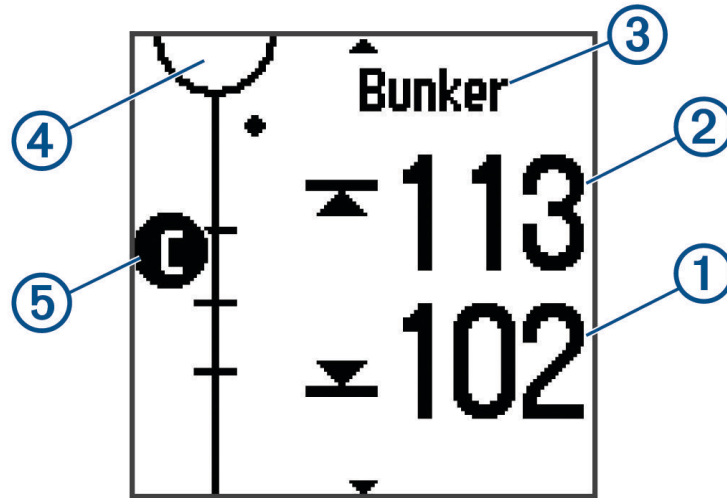

- The distances to the feature appear on the screen:
 - For large hazards, the distances to the front ① and back ② of the hazard are listed. For small hazards, only the distance to the front of the hazard is listed.
 - For layups and doglegs, the distance to the feature is listed.
 - The feature type ③ is listed at the top of the page.
 - The green is represented as a half circle ④ at the top of the screen. The line below the green represents the center of the fairway.
 - Features for the current hole ⑤ are shown below the green in approximate locations relative to the fairway. Hazards are identified using sequential letters according to the distance from the tee box.
- 3 Select **UP** or **DOWN** to view other features for the current hole.

Keeping Score

When scoring is enabled, you are prompted to enter your score when you are on the green. You can adjust the score manually at any time during a game.

- 1 While playing golf, select **OK**.
- 2 Select an option:
 - If scoring is not enabled, select **Start Scoring**.
 - If scoring is enabled, select **Scorecard**.
- 3 If necessary, select **UP** or **DOWN** to select a hole, and select **OK**.
- 4 Select **UP** or **DOWN** to set the score, and select **OK**.

Changing Holes

You can change the hole manually from the hole view screen.

- 1 Select **OK**.
- 2 Select **Change Hole**.
- 3 Select a hole.

Changing the Green

If you are playing a hole with more than one green, you can change the green.

- 1 Select **OK**.
- 2 Select **Change Green**.
- 3 Select a green.

Changing the Course

You can change the course manually from the hole view screen.

- 1 Select **OK**.
- 2 Select **Change Course**.
- 3 Select a course.

Ending a Round

- 1 Select **OK**.
- 2 Select **End Round**.

Uploading Your Scorecard Using Garmin Express

You can upload your scorecard to Garmin Connect™ using the Garmin Express application.

- 1 Connect the device to your computer using a USB cable.
- 2 Go to www.garmin.com/express.
- 3 Follow the on-screen instructions.

Garmin Golf App

The Garmin Golf app allows golfers to compete with each other at different courses. More than 41,000 courses have a weekly leaderboard that anyone can join. You can set up a tournament event and invite players to compete. You can use Garmin Express to upload scorecards from your compatible Garmin device to view detailed statistics and shot analyses.

The Garmin Golf app syncs your data with your Garmin Connect account. You can download the Garmin Golf app from the app store on your smartphone.

Customizing Your Device

System Settings

From the main menu, select Settings.

Color Theme: Sets the color theme for the screen (*Setting the Color Theme, page 6*).

Scoring: Enables and disables scoring. Select Always Ask to be prompted to enable or disable scoring when you start playing golf.

Time: Sets the time and time format.

Language: Sets the device language.

NOTE: Changing the text language does not change the language of user-entered data or map data.

Units: Sets the unit of measure for distance.

Gender: Sets the user gender.

Software Update: Updates the device software when updates are available.

NOTE: You must connect to Garmin Express to receive software updates.

Restore Defaults: Clears user data and restores the device to factory default settings.

Setting the Color Theme

- 1 From the main menu, select **Settings** > **Color Theme**.
- 2 Select an option:
 - To show a dark background with light text, select **Dark**.
 - To show a light background with dark text, select **Light**.

Time Settings

From the main menu, select **Settings** > **Time**.

Time Format: Sets the device to show time in a 12-hour or a 24-hour format.

Set Time: Sets the time manually or automatically based on your GPS location.

Troubleshooting

My device is in the wrong language

- 1 From the clock screen, select **OK**.
- 2 Select **DOWN** one time, and select **OK**.
- 3 Select **DOWN** three times, and select **OK**.
- 4 Select your language.

My device does not display the correct time or date

The device updates the time and date when your device acquires GPS signals. You should start a round of golf to receive the correct time when you change time zones, and to update for daylight saving time.

NOTE: The time does not update automatically if it is set manually ([Time Settings, page 6](#)).

- 1 Select **OK**.
- 2 Select **Start Round**.
- 3 Go outside, and wait while the device locates satellites.

The time and date update automatically.

Appendix

Charging the Device

⚠ WARNING

This device contains a lithium-ion battery. See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

NOTICE

To prevent corrosion, thoroughly clean and dry the contacts and the surrounding area before charging or connecting to a computer. Refer to the cleaning instructions in the appendix.

- 1 Plug the small end of the USB cable into the charging port on your device.



- 2 Plug the large end of the USB cable into a USB charging port.
- 3 Charge the device completely.

Device Care

NOTICE

Avoid extreme shock and harsh treatment, because it can degrade the life of the product.

Avoid pressing the keys under water.

Do not use a sharp object to clean the device.

Avoid chemical cleaners, solvents, and insect repellents that can damage plastic components and finishes.

Thoroughly rinse the device with fresh water after exposure to chlorine, salt water, sunscreen, cosmetics, alcohol, or other harsh chemicals. Prolonged exposure to these substances can damage the case.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Do not remove the bands.

Cleaning the Device

NOTICE

Even small amounts of sweat or moisture can cause corrosion of the electrical contacts when connected to a charger. Corrosion can prevent charging and data transfer.

- 1 Wipe the device using a cloth dampened with a mild detergent solution.
- 2 Wipe it dry.

After cleaning, allow the device to dry completely.

TIP: For more information, go to garmin.com/fitandcare.

Specifications

| | |
|-----------------------------|--|
| Battery type | Rechargeable lithium-ion |
| Battery life | Watch only: up to 14 wk. Playing golf: up to 12 hr. NOTE: The actual battery life of a fully charged battery depends on how much time you use GPS. Exposure to extremely cold temperatures also reduces battery life. |
| Operating temperature range | From -20° to 60°C (from -4° to 140°F) |
| Charging temperature range | From 0° to 40°C (from 32° to 113°F) |
| Water rating | 5 ATM ¹ |

Viewing E-label Regulatory and Compliance Information

The label for this device is provided electronically. The e-label may provide regulatory information, such as identification numbers provided by the FCC or regional compliance markings, as well as applicable product and licensing information.

- 1 Select **OK**.
- 2 Select **About**.

¹ The device withstands pressure equivalent to a depth of 50 m. For more information, go to www.garmin.com/waterrating.

