


GARMIN®

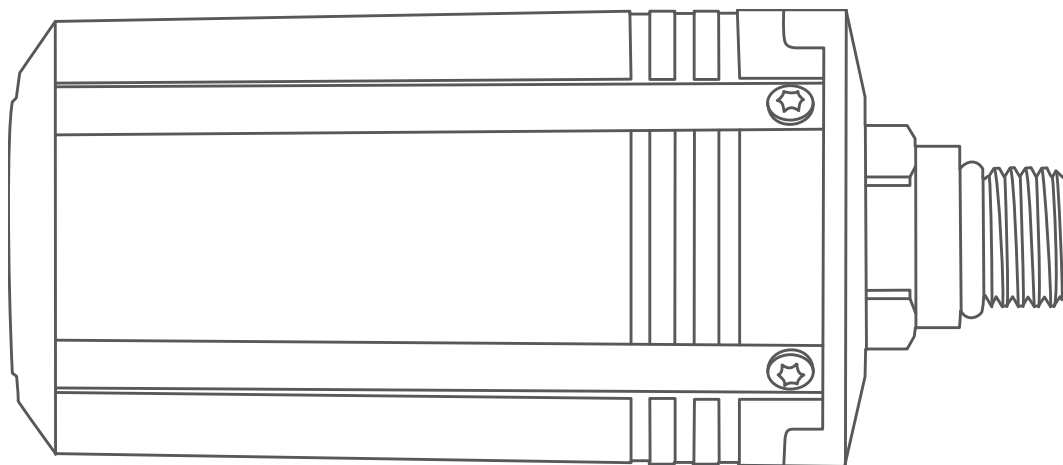

DESCENT™ T2

Owner's Manual

© 2023 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Garmin®, the Garmin logo, and ANT® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Descent™, Garmin Dive™, Garmin Express™, and SubWave™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Other trademarks and trade names are those of their respective owners.

M/N: A04770

Table of Contents

Introduction.....	1	
Installation and Setup.....	1	
Transceiver Position Tips.....	1	
Installing the Transceiver on Your Tank Regulator.....	4	
Installing the Transceiver on a High Pressure Hose Extension.....	5	
Diving.....	7	
Dive Warnings.....	8	
Dive Cautions.....	8	
Waking the Transceiver from Low Power Mode.....	8	
Pairing a Transceiver with a Descent Dive Computer.....	9	
Dive Network and Air Integration Settings.....	9	
Viewing Transceiver Data During a Dive.....	12	
Sending Diver Messages.....	13	
Receiving Diver Messages.....	13	
Requesting Diver Assistance.....	13	
Updating the Transceiver Software Using Your Dive Computer.....	14	
Pairing the Transceiver with the Garmin Dive App.....	14	
Device Information.....	15	
Replacing the Descent T2 Transceiver Battery.....	15	
Descent T2 Device Care.....	15	
Cleaning the Transceiver.....	15	
Replacement Parts.....	16	
Specifications.....	16	
Troubleshooting.....	16	
Getting More Information.....	16	
Dive Product and Feature Compatibility.....	17	
About SubWave Technology.....	18	
Dive Terminology.....	18	
Transceiver Alerts.....	18	
Enabling Lost Dive Accessory Alerts.....	19	
		My transceiver and watch lose connection underwater..... 19
		Adjusting the Transceiver Power Setting..... 19
		My transceiver battery is draining rapidly..... 19
		My transceiver makes an audible noise while diving..... 19

Introduction

⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Installation and Setup


⚠ CAUTION

To ensure proper setup and best performance, it is strongly recommended that you complete the first time installation and setup at a dive shop. You should fully test the transceiver installation above and below water before using it during a dive.


Transceiver Position Tips

The transceiver communicates wirelessly with your compatible watch. On the surface, it uses ANT[®] technology. Underwater, it uses the SubWave[™] sonar network. Your body, drysuit, and dive equipment can obstruct the signal, particularly while underwater. For the best reception, all transceivers in your group should have clear lines of sight to the watch. To help prevent blocking the signal with your body or equipment, you should follow these tips.


- You should install the transceiver on the same side of the tank as the wrist wearing your watch. For example, if you wear your watch on your left wrist, you should install the transceiver on the left side of the tank regulator.

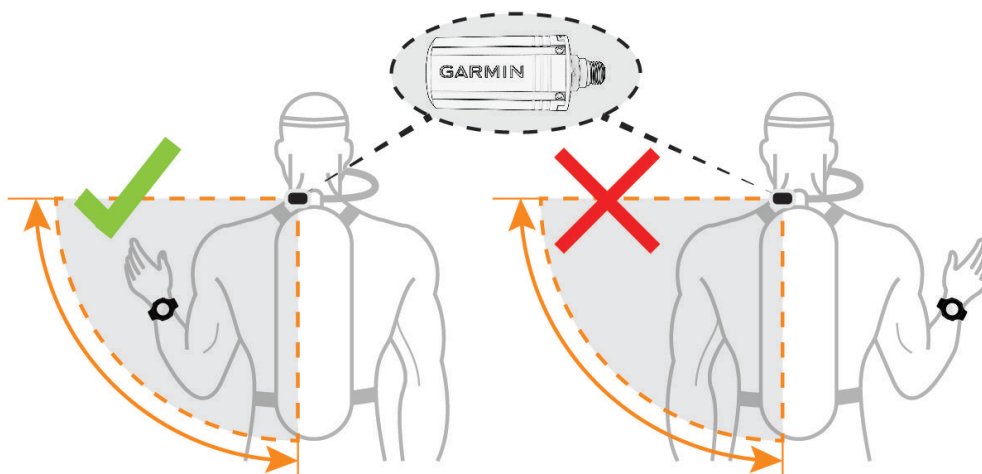


- For the best reception, you should wear the tank high on your back. This allows the transceiver to have a clear line of sight over your shoulders.

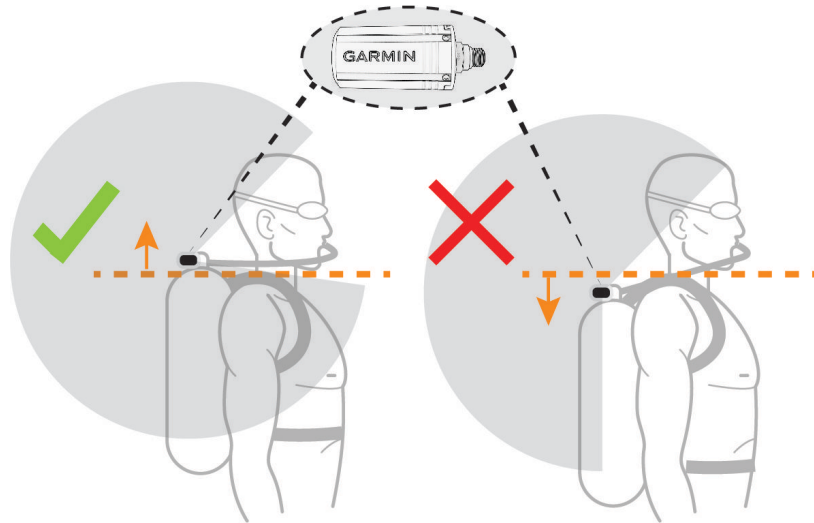

- You should install the transceiver at least 7 cm (3 in.) from your body.

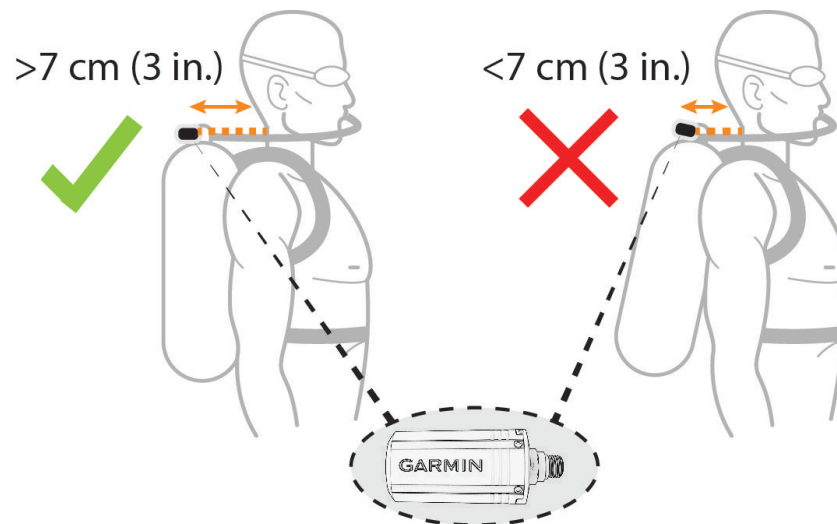

- If you wear your tank inverted with the regulator at the bottom, you can use a high-pressure hose to relocate the transceiver to have a clear line of sight over your shoulders.
- If you lose the signal from your transceiver, you should move your arm until the signal is restored.
- If you lose the signal from another diver, you should change your body position until the signal is restored. If your body is between the transceiver and another diver, it may obstruct the signal from that diver's transceiver.

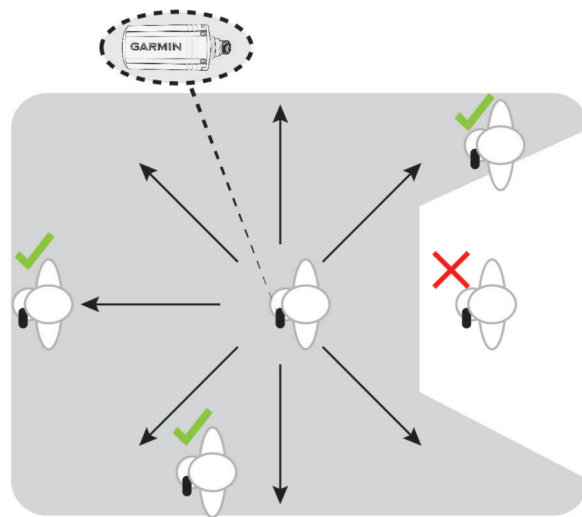


Installing the Transceiver on Your Tank Regulator

⚠ WARNING


Always use the pre-installed flow restrictor when using the transceiver directly attached to your regulator. Always use the included air spool when connecting the transceiver to a high pressure hose extension ([Installing the Transceiver on a High Pressure Hose Extension, page 5](#)). Using the transceiver without either the flow restrictor or air spool could result in serious injury or death from an air pressurization failure.

Before you install the transceiver on your tank regulator, you should read the transceiver position tips and choose the port position that provides the best line of sight to the watch ([Transceiver Position Tips, page 1](#)).

- 1 Detach the first-stage regulator from the scuba cylinder and second-stage regulator.

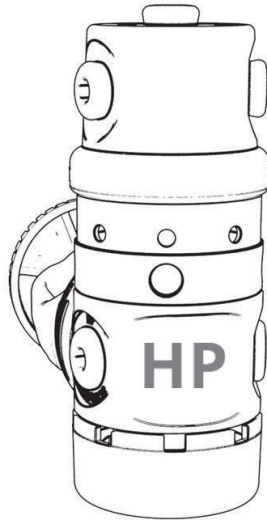

- 2 Remove the port plug from the high-pressure output port.
- 3 Confirm the flow restrictor is installed in the transceiver, and screw it into the high-pressure output port until it is secure.

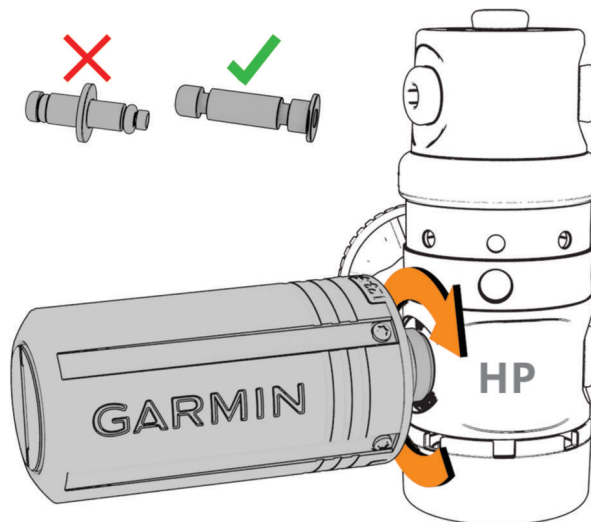

⚠ WARNING

Verify the installed transceiver does not physically interfere with any hoses or other tank assemblies.

NOTICE

To prevent damage to the transceiver and possible loss of function, do not overtighten. Do not grip the regulator or the transceiver to move, carry, or adjust the tank.

Installing the Transceiver on a High Pressure Hose Extension


⚠ WARNING

Always use the pre-installed flow restrictor when using the transceiver directly attached to your regulator (*Installing the Transceiver on Your Tank Regulator*, page 4). Always use the included air spool when connecting the transceiver to a high pressure hose extension. Using the transceiver without either the flow restrictor or air spool could result in serious injury or death from an air pressurization failure.

Before you install the transceiver on a high pressure hose extension certified to the EN 250:2014 standard, you should read the transceiver position tips and choose a position that provides the best line of sight to the watch (*Transceiver Position Tips*, page 1).

To install the transceiver, you need an open-ended wrench and a small flat screwdriver or flat-nose pliers.


- 1 Use a screwdriver or pliers to carefully remove the flow restrictor from the transceiver.

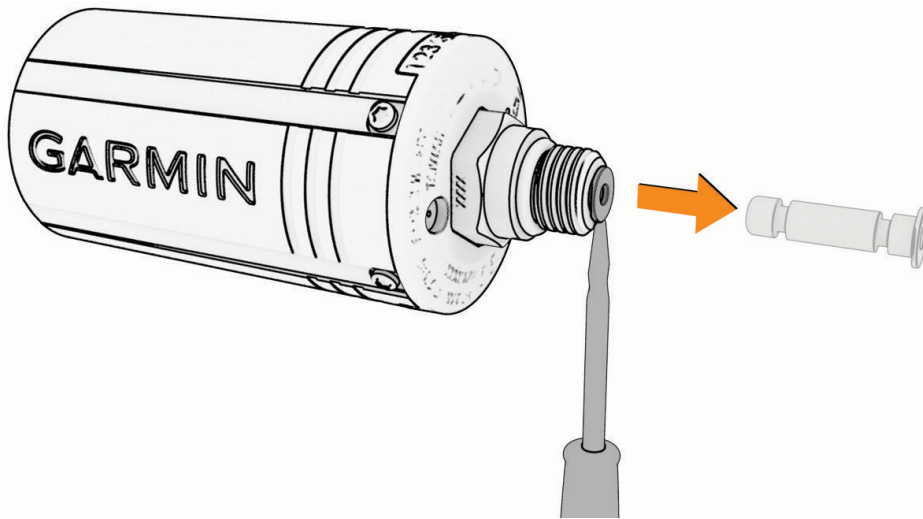


NOTICE

Use care when removing the flow restrictor to avoid damaging the device.

- 2 Insert the large end of the air spool into the transceiver.

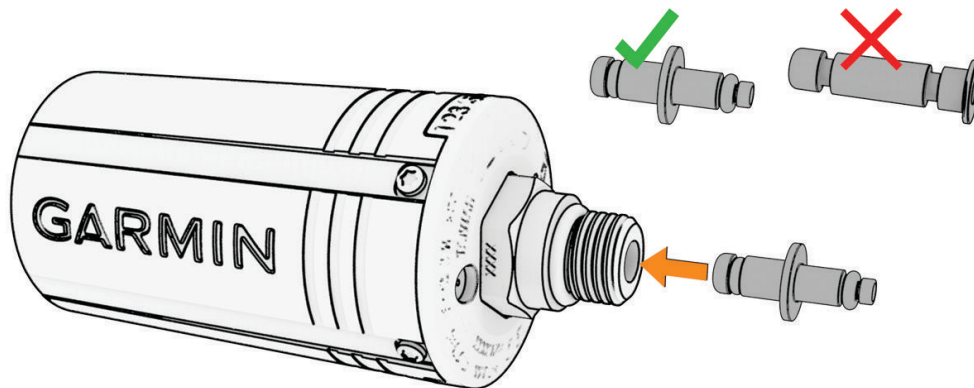


- 3 Detach the first-stage regulator from the scuba cylinder and second-stage regulator.

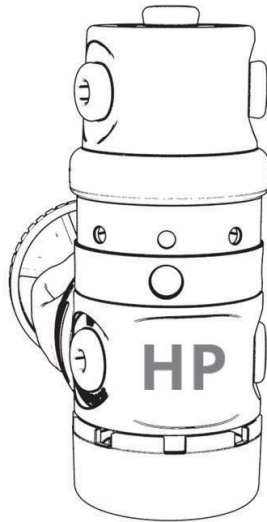

- 4 Remove the port plug from the high-pressure output port.
- 5 Connect a high-pressure hose extension to the high-pressure output port.


- 6 Screw the transceiver onto the high pressure hose extension until you feel resistance.

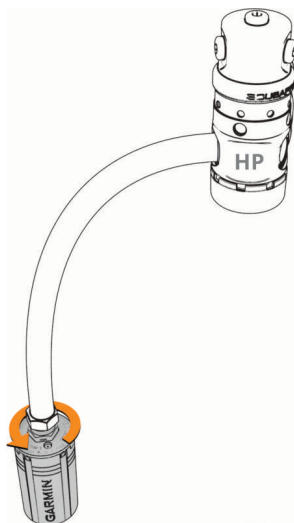

⚠ WARNING

Verify the installed transceiver does not physically interfere with any hoses or other tank assemblies.

- 7 Use an open-ended wrench to tighten the transceiver until it is secure.

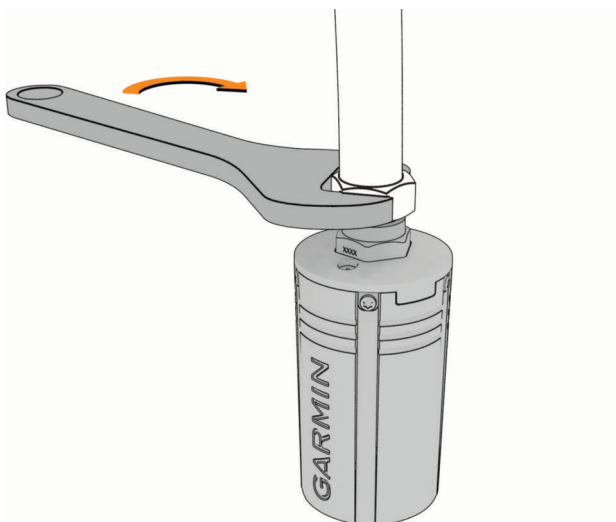

NOTICE

To prevent damage to the transceiver and possible loss of function, do not overtighten. Do not grip the regulator or the transceiver to move, carry, or adjust the tank.

You must remove the air spool and reinstall the flow restrictor before installing the transceiver on your tank regulator.

Diving

You can use a compatible Descent watch paired with your Descent T2 transceiver to start a diving activity. See your Descent watch owner's manual for more information.

Dive Warnings

WARNING

- This device is for use by certified divers only.
- This device should not be used as the only source of pressure information. Always use backup instruments, including a depth gauge, submersible pressure gauge, and timer or watch.
- Do not exceed the maximum dive depth rating for the device ([Specifications, page 16](#)).
- Make sure that you fully understand the use, displays, and limitations of your device. If you have questions about this manual or the device, always resolve any discrepancies or confusion before diving with the device. Always remember that you are responsible for your own safety.
- The dive computer can calculate your surface air consumption rate (SAC) and air time remaining (ATR). These calculations are an estimate and should not be relied on as the only source of information.
- Perform pre-dive safety checks, such as checking proper device function and settings, display function, battery level, tank pressure, and bubble checks to check hoses and connections for leaks.
- If a tank pressure warning or battery warning appears on the dive computer, terminate the dive immediately and safely return to the surface. Disregarding the alarm may result in serious injury or death.
- For safety reasons, you should never dive alone. Dive with a designated buddy, even if you have someone monitoring your dive from the surface. You should also stay with others for an extended time after a dive, because the potential onset of decompression illness (DCI) may be delayed or triggered by surface activities.
- This device is not intended for commercial or professional dive activities. It is for recreational purposes only. Commercial or professional dive activities can expose the user to extreme depths or conditions that increase the risk of DCI.
- The transceiver is not an oxygen cleaned product. Do not use the transceiver with anything greater than 40% oxygen.

Dive Cautions

CAUTION

- Dive messaging and navigation requires line of sight between two compatible receivers with the latest compatible software versions. Obstructions and other environmental factors may affect receiver connectivity and may delay or prevent the sending and receiving of messages. With good connectivity, data can be successfully sent between divers in under 20 seconds. If connectivity is poor, devices will attempt to send data for up to two minutes. This is a supplemental feature that should not be relied upon as a method to receive emergency assistance and should not replace traditional dive safety tools and procedures.
- The device range and availability of messaging and/or location tracking depends on the type of compatible devices to which this device is communicating ([Dive Product and Feature Compatibility, page 17](#)).

Waking the Transceiver from Low Power Mode

Out of the box, the transceiver is in low power mode. You must wake the transceiver from low power mode to pair and connect to it.

Select an option:

- Install the transceiver on the first-stage regulator, and gradually open the tank valve to pressurize the regulator ([Installing the Transceiver on Your Tank Regulator, page 4](#)).

NOTE: This option is not available for Bluetooth® pairing. Bluetooth technology is disabled when the transceiver is pressurized.

- Twist the battery cover counter-clockwise 270 degrees, wait 30 seconds, then twist the battery cover clockwise until it is secure.

NOTE: The transceiver remains awake for two minutes before returning to low power mode.

The transceiver plays a tone when it wakes from low power mode and is ready to connect to your Descent dive computer ([Pairing a Transceiver with a Descent Dive Computer, page 9](#)) or phone ([Pairing the Transceiver with the Garmin Dive App, page 14](#)).

Pairing a Transceiver with a Descent Dive Computer

Before you use the transceiver for the first time, you must pair it with a compatible Descent dive computer using ANT technology.

For more information about compatible dive computer models, go to the Descent T2 transceiver product page on garmin.com.

- 1 Wake the transceiver from low power mode ([Waking the Transceiver from Low Power Mode, page 8](#)).
- 2 On your Descent dive computer, from the **Dive Setup** menu, select **Dive Network & Air Integration > Transmitters**.
- 3 Select an option:
 - To add your own transceiver, select **Add Your Tank**, select your transceiver from the list, enter your transceiver ID, and select an option for gas consumption calculations.
NOTE: The transceiver ID is printed on the housing.
 - To add another diver's transceiver, select **Add Other Divers**, select at least one transceiver from the list, and select **Add**.

When the pairing process is complete, the transceiver begins sending data, and it is ready to use on a dive. The next time the transceiver and dive computer are turned on and within wireless range, they connect automatically when you start a dive.

If you are diving with a group, you can pair up to 8 transceivers with the dive computer.

Dive Network and Air Integration Settings

On the paired Descent dive computer, from the **Dive Setup** menu, select **Dive Network & Air Integration**.

NOTE: Some settings are available only for your own transceiver or another diver's transceiver. Not all settings are available for all dive computers.

Transmitters: Customizes the settings for paired transceivers ([Transceiver Settings, page 10](#)).

Buoys: Pairs the dive computer with a Descent S1 buoy. After pairing, you can manually sync the buoy with your dive computer, and view information about the buoy, such as its connection status and software version.

SubWave Features: Enables SubWave features, such as messaging ([Sending Diver Messages, page 13](#)) and location tracking.

NOTE: SubWave features are only available when you are paired to a Descent T2 transceiver ([Dive Product and Feature Compatibility, page 17](#)). Location tracking is only available when you are paired to a Descent S1 buoy.

Quick Access Messages: Customizes which preset diver messages appear at the top of the message list ([Sending Diver Messages, page 13](#)).

Display Setup: Customizes which paired transceivers appear on the primary dive data screen during a dive ([Selecting Transceivers to View During a Dive, page 10](#)), and changes the gas consumption rate for your transceiver ([Selecting the Gas Consumption Rate Metric, page 11](#)).

Gas Consumption Rate: Changes the gas consumption rate for your transceiver ([Selecting the Gas Consumption Rate Metric, page 11](#)).

Connection Alert: Enables alerts when paired transceivers connect and disconnect.

Transceiver Settings

You can customize the settings for paired transceivers prior to a dive.

On the paired Descent dive computer, from the **Dive Setup** menu, select **Dive Network & Air Integration > Transmitters**, and select a transceiver.

NOTE: Some settings are available only for your own transceiver or another diver's transceiver.

Status: Enables a connection to the transceiver, and shows the current connection status. Connected transceivers show data during a dive and can send or receive messages.

Placement: Sets the transceiver location as either your own tank or that of another diver.

Public Tank Name: Associates a name with your transceiver, which will be visible to your dive network the next time you connect to your transceiver.

NOTE: If you customize this name, another option appears in the list to clear the name.

SubWave Status: Displays what SubWave features are currently available based on the devices present, along with the current software version, hardware version, or configuration settings. For help troubleshooting issues with the status of your SubWave features, go to garmin.com/SubWaveSupport.

Nickname: Associates a nickname with another diver's transceiver, which will be visible on your dive data screens. This setting does not change the name that appears for other divers.

NOTE: If you customize this name, another option appears in the list to clear the name.

Identify: Plays a tone on the selected paired transceiver. This helps you to identify the transceiver without needing to look at the transceiver ID printed on the transceiver housing.

Working Pressure: Sets how much pressure the tank has when full. This value is used to determine the upper end of the pressure gauge, and to calculate respiratory minute volume (RMV) for tanks using psi units.

Reserve Pressure: Sets the threshold values for reserve pressure and critical pressure alerts. The critical pressure threshold value is the greater of half of the reserve pressure or 21 bar (300 PSI).

Volume: Sets the air volume of the tank. You can use the Reset Volume option if you move the transceiver to a different size tank.

NOTE: This value is required to calculate volumetric surface air consumption (SAC) and respiratory minute volume (RMV) ([Selecting the Gas Consumption Rate Metric, page 11](#)).

SAC/RMV/ATR: Enables calculations for volumetric surface air consumption (SAC), respiratory minute volume (RMV), and air time remaining (ATR) estimates for your transceiver.

Set Transmit Power: Adjusts the power setting if your transceiver is losing connection with the paired dive computer underwater.

About: Displays the transceiver ID, software version, and battery status.

Remove: Removes a paired transceiver.

Software Update: If an update is available, updates the transceiver software using your dive computer ([Updating the Transceiver Software Using Your Dive Computer, page 14](#)).

Selecting Transceivers to View During a Dive

You can view two paired transceivers at-a-glance on the primary dive data screen. You can customize which paired transceivers appear on the screen. By default, the first and second transceivers that you pair appear ([Viewing Transceiver Data During a Dive, page 12](#)).

- 1 On the paired Descent watch, hold **MENU**.
- 2 Select **Dive Setup > Dive Network & Air Integration > Display Setup**.
- 3 Select a field to customize.
- 4 Select a paired transceiver.

Selecting the Gas Consumption Rate Metric

- 1 On the paired Descent dive computer, from the **Dive Setup** menu, select **Dive Setup > Dive Network & Air Integration > Display Setup > Gas Consumption Rate**.


NOTE: Some dive computers do not have the Display Setup menu option.

- 2 Select an option.

NOTE: The dive computer can estimate volumetric surface air consumption (SAC) or respiratory minute volume (RMV) only if the air volume of the tank is entered in the dive computer ([Transceiver Settings, page 10](#)). The dive computer can estimate pressure-based surface air consumption (PSAC) with or without the air volume of the tank.

Viewing Transceiver Data During a Dive

- 1 During a dive, press **DOWN** on your paired Descent watch to view the data screen.
- TIP:** You can customize the dive data screens to view the transceiver and diver dashboard data on dedicated data screens.

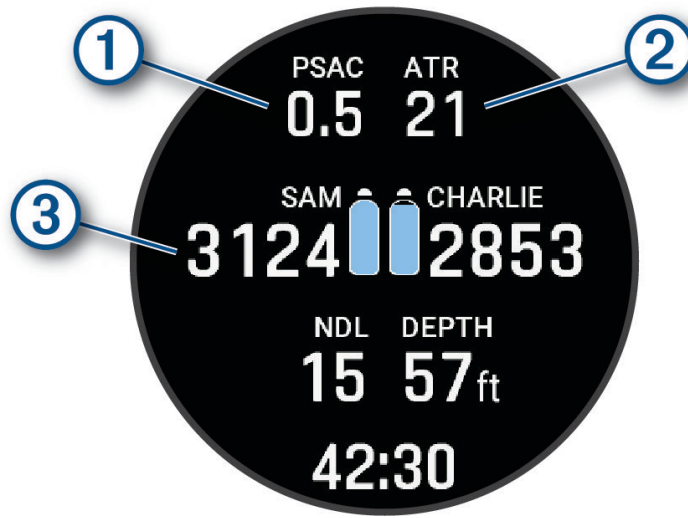

1	The gas consumption estimate for your transceiver (Selecting the Gas Consumption Rate Metric, page 11).
2	The air time remaining (ATR) estimate for your transceiver.
3	Your primary, secondary, or pinned transceivers and their tank pressure values. NOTE: You can customize which transceivers are displayed (Selecting Transceivers to View During a Dive, page 10).

- 2 Press **START**, and select **Divers** to view the tank pressure values, approximate depths, and approximate distances of the paired Descent transceivers in the network.



NOTE: Not all features are available for older devices ([Dive Product and Feature Compatibility, page 17](#)).

Sending Diver Messages

CAUTION

Dive messaging and navigation requires line of sight between two compatible receivers with the latest compatible software versions. Obstructions and other environmental factors may affect receiver connectivity and may delay or prevent the sending and receiving of messages. With good connectivity, data can be successfully sent between divers in under 20 seconds. If connectivity is poor, devices will attempt to send data for up to two minutes. This is a supplemental feature that should not be relied upon as a method to receive emergency assistance and should not replace traditional dive safety tools and procedures.

When paired to your compatible Descent dive computer, you can send preset messages to other members of your dive network up to 30 m (98 ft.) away. When also paired to a Descent S1 buoy and within 100 m (328 ft.) of it, you can send preset messages to members of your dive network on the surface.

- 1 On the paired Descent watch, press **START**.
- 2 Select **Messages**.
- 3 Press **DOWN**.

TIP: You can press UP to scroll through your recent messages.

- 4 Select a message.
- 5 If necessary, select a recipient.

NOTE: You can select the Dive Group option to send the message to every member of your dive network.

Receiving Diver Messages

CAUTION

Dive messaging and navigation requires line of sight between two compatible receivers with the latest compatible software versions. Obstructions and other environmental factors may affect receiver connectivity and may delay or prevent the sending and receiving of messages. With good connectivity, data can be successfully sent between divers in under 20 seconds. If connectivity is poor, devices will attempt to send data for up to two minutes. This is a supplemental feature that should not be relied upon as a method to receive emergency assistance and should not replace traditional dive safety tools and procedures.

When paired to your compatible Descent watch, you can receive and reply to preset messages from other members of your dive network who are up to 30 m (98 ft.) away. The messages appear as a pop-up notification on your watch.

- 1 When the message appears on the paired Descent watch, press **START**.
- 2 Select an option:
 - To reply to the message sender, select **Reply**.
 - To reply to every member of your dive network, select **Group Reply**.
 - To view the transceiver data of the message sender, select **View Diver**.

Requesting Diver Assistance

WARNING

Assistance is a supplemental feature and should not be relied upon as a primary method to obtain emergency assistance. Your device cannot contact emergency services on your behalf.

If you are in distress during a dive, you can send a message requesting help to the other members of your dive network.

- 1 On the paired Descent dive computer, hold **LIGHT** until you are prompted to release it for assistance.

NOTE: If you do not release LIGHT soon after the prompt, the dive computer will restart.

After a brief countdown, a request for help will be sent every two minutes. On dive computer models with an LED flashlight, the flashlight will also flash in a distress pattern.

- 2 If necessary, hold **LIGHT** to cancel the request for help.

A message indicating you are okay is sent to the other members of your dive network.

Updating the Transceiver Software Using Your Dive Computer

Before you can update the software, you must pair your Descent T2 transceiver with a compatible Descent dive computer.

1 Select an option to sync your dive computer:

- Sync your dive computer with the Garmin Dive™ app.
- Connect the dive computer to your computer using the USB cable, and sync with the Garmin Express™ application.

The Garmin Dive app and Garmin Express application automatically look for software updates. When you sync with the Garmin Dive app, you will be prompted to apply the update at a later time. When you sync with the Garmin Express application, the update is applied immediately to your dive computer.

2 Wake the transceiver from low power mode ([Waking the Transceiver from Low Power Mode, page 8](#)).

3 On the paired Descent dive computer, from the **Dive Setup** menu, select **Dive Network & Air Integration > Transmitters**, and select your transceiver.

4 Wait for the transceiver to connect to your dive computer.

Connected appears on the dive computer screen.

5 Select **Software Update**, press **START**, and select **Install Now**.

NOTE: The Software Update option may take up to a minute to appear while the dive computer determines the transceiver's software version and battery status. If the battery status is low or critically low, you must replace the battery before you can install the update.

6 Keep the dive computer near the transceiver until the software update is complete.

Pairing the Transceiver with the Garmin Dive App

You can pair the transceiver with the Garmin Dive app to receive software updates using Bluetooth technology.

1 Wake the transceiver from low power mode ([Waking the Transceiver from Low Power Mode, page 8](#)).

2 Scan the QR code on the transceiver with the camera on your phone, and follow the on-screen instructions to complete the pairing and setup process.

The transceiver is in pairing mode for two minutes, then it goes back into low power mode.

Device Information

Replacing the Descent T2 Transceiver Battery


NOTICE

You should purchase a replacement battery only from a high-quality manufacturer and a reputable vendor. Using a low-quality battery could result in poor product performance and reduced battery life, especially at low temperatures. Do not use rechargeable batteries. Rechargeable batteries may have a higher voltage specification and can cause permanent damage to the device.

To replace the battery, you need a coin or flat screwdriver, a new 3 V CR123A lithium battery, and waterproof silicone grease. You may also need a replacement battery cap accessory.

The transceiver is powered by a 3 V CR123A lithium battery. A battery is pre-installed at the factory. You must carefully follow the battery replacement instructions to preserve the transceiver's waterproofing.

- 1 Insert a coin or flat screwdriver into the slot ①, and rotate counter-clockwise to unscrew the battery cap.

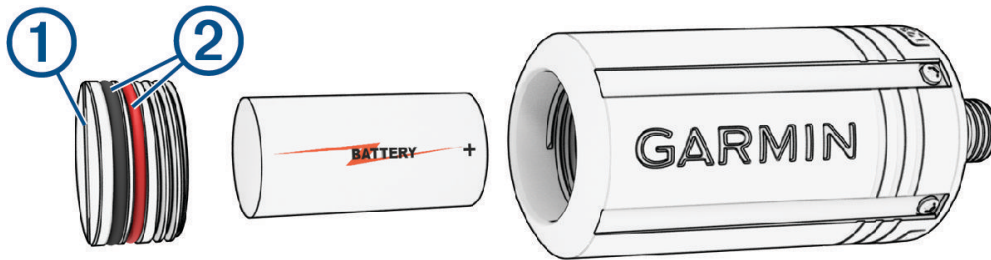

- 2 Remove the battery cap and battery.
- 3 Insert the new battery in the transceiver, with the positive pole facing into the transceiver and the negative pole facing the battery door.
- 4 Inspect both gaskets ② to verify they are clean, undamaged, and fully seated in the grooves.
If the gaskets appear worn or damaged, you can purchase a replacement battery cap kit, including a cap, gaskets, and silicone grease. Go to the Descent T2 product page on garmin.com to purchase accessories.
- 5 Apply a thin layer of waterproof silicone grease to both gaskets.
- 6 Replace the battery cap into the transceiver, and fully tighten it.

Descent T2 Device Care

NOTICE

Do not grip the regulator or the device to move, carry, or adjust the air tank.

Do not remove the safety plug from the base of the device.

Do not use a sharp object to clean the device.

Avoid chemical cleaners, solvents, and insect repellents that can damage plastic components and finishes.

Thoroughly rinse the device with fresh water after exposure to chlorine, salt water, sunscreen, cosmetics, alcohol, or other harsh chemicals. Prolonged exposure to these substances can damage the case.

Avoid extreme shock and harsh treatment, because it can degrade the life of the product.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Discontinue use if the device is damaged or if it is stored at a temperature outside the specified storage temperature range.

Discontinue use if there is water ingress into the battery compartment. Even small amounts of water can cause corrosion of the electrical contacts.

Cleaning the Transceiver

- 1 After each dive, rinse the transceiver with fresh water to remove salt and debris.
- 2 If necessary, clean the transceiver with a soft cloth.

Replacement Parts

Replacement parts are available for this device. Contact your Garmin® dealer or go to garmin.com for more information.

Specifications

Battery	3 V CR123A lithium
Battery life	Up to 100 hr.
Thread type	7/16 in. (20 UNF)
Operating temperature range	From -20 to 60°C (from -4 to 140°F)
Underwater operating temperature range	From 0 to 40°C (from 32 to 104°F)
Storage temperature range	From -30 to 70°C (from -22 to 158°F)
Wireless frequency	2.4 GHz @ 5.22 dBm maximum
Surface transmission range (ANT and Bluetooth technology)	Up to 10 m (33 ft.)
Underwater transmission range (SubWave sonar network)	Pressure and depth data: up to 10 m (33 ft.) Diver messaging: up to 30 m (98 ft.)
Water rating	20 ATM ¹
Pressure rating	300 bar (4351 psi)
Inspection interval	Inspect parts before each use for damage. Replace parts as needed. ²

Troubleshooting

Getting More Information

You can find more information about this product on the Garmin website.

- Go to support.garmin.com for additional manuals, articles, and software updates.
- Go to buy.garmin.com, or contact your Garmin dealer for information about optional accessories and replacement parts.

¹ The device withstands pressure equivalent to a depth of 200 m. For more information, go to www.garmin.com/waterrating.






² Aside from normal wear and tear, performance is not affected by aging.


Dive Product and Feature Compatibility


You can pair multiple Descent devices to form a dive network for you and your fellow divers. Not all features are available for older devices. See your Descent device owner's manual for more information.


NOTICE

You should update your devices to the latest software versions to access all features and improvements. If the software versions are incompatible, the following alert appears on the dive computer: **Transmitter %1 failed to connect..** "%1" is replaced with the transceiver name.

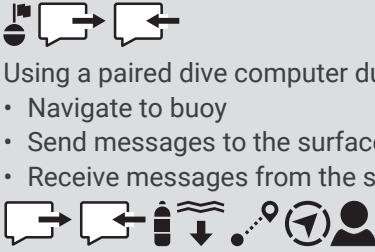	Descent T1	Descent T2
Descent Mk2i	 <ul style="list-style-type: none"> • View tank pressure • View diver depth • View diver distance 	 <ul style="list-style-type: none"> • Receive messages • View tank pressure • View diver depth • View diver distance • View public tank name
Descent Mk3i Descent X50i	 <ul style="list-style-type: none"> • View tank pressure • View diver depth • View diver distance 	 <ul style="list-style-type: none"> • Send messages • Receive messages • View tank pressure • View diver depth • View diver distance • View public tank name
Descent S1	Not compatible	 <p>Using a paired dive computer during a dive:</p> <ul style="list-style-type: none"> • Navigate to buoy • Send messages to the surface • Receive messages from the surface <p>Using the Garmin Dive app from the surface:</p> <ul style="list-style-type: none"> • Send messages to underwater divers • Receive messages from underwater divers • View tank pressure • View diver depth • View diver distance • View diver direction • View public tank name


: View tank pressure for yourself and connected divers.


: View diver depth for connected divers.

: View diver distance for connected divers.

: View the direction to connected divers.

: View the public transceiver names for yourself and connected divers.

: Send pre-defined in-dive messages to divers with a Descent T2 transceiver, or to users on the surface with a Descent S1 buoy.

: Receive in-dive messages from divers with a paired Descent T2 transceiver, or from users on the surface with a Descent S1 buoy.

 View distance and direction information to navigate back to the Descent S1 buoy.

About SubWave Technology

Compatible Descent devices use SubWave sonar technology to communicate with other compatible Descent devices. There are many factors that can affect device-to-device communication. For more information, go to garmin.com/subwave.

Dive Terminology

Air time remaining (ATR): The time you may remain at the current depth until an ascent at 9 m/min. (30 ft./min.) would result in surfacing with reserve pressure remaining.

NOTE: If multiple tanks are included in gas consumption calculations, air time remaining is calculated using the combined pressure and reserve pressure of all tanks.

CAUTION

Decompression stops are included in the calculations, but safety stops are not.

Pressure-based surface air consumption (PSAC): The change in pressure over time, normalized to 1 ATM.

Respiratory minute volume (RMV): The change in gas volume at ambient pressure over time.

Volumetric surface air consumption (SAC): The change in gas volume over time, normalized to 1 ATM.

Transceiver Alerts

Alert Message	Cause	Device Action
None	Your paired dive computer has lost communication with the transceiver for 30 seconds.	The tank pressure value flashes yellow.
%1 is below reserve pressure.	Your tank pressure is below the reserve pressure level. "%1" is replaced with the transceiver name.	The tank pressure value turns yellow. The paired dive computer vibrates and plays a warning tone.
%1 pressure is critically low.	Your tank pressure is below the critical pressure level. "%1" is replaced with the transceiver name.	The tank pressure value flashes red. The paired dive computer vibrates and plays a warning tone.
%1 has a low battery.	Fewer than 20 hours of dive time remain. "%1" is replaced with the transceiver name.	The transceiver name flashes BATT. LOW when the battery is critically low. The paired dive computer vibrates and plays a warning tone.
NO COMMS	Your paired dive computer has lost communication with the transceiver for 60 seconds.	The transceiver name flashes NO COMMS, dashed lines replace the tank pressure value, and the tank pressure value flashes red. The paired dive computer vibrates and plays a warning tone if connection alerts are enabled.
Transmitter %1 failed to connect.	Your paired dive computer cannot connect to the transceiver. You should update both devices to the latest software version. "%1" is replaced with the transceiver name.	The paired dive computer vibrates and plays a warning tone.

Enabling Lost Dive Accessory Alerts

Your paired dive computer can lose communication with the transceiver or buoy when it is out of range, when its signal is blocked by your body or that of another diver, and when it loses battery power. You can enable an alert that notifies you when your paired dive computer has lost communication with the transceiver or buoy for 60 seconds.

On the paired dive computer, from the **Dive Setup** menu, select **Dive Network & Air Integration > Connection Alert**.

My transceiver and watch lose connection underwater

If your watch and transceiver communicate on the surface but lose communication underwater, you can try these tips.

- Increase the transceiver power setting ([Adjusting the Transceiver Power Setting, page 19](#)).
- Install the transceiver on a high pressure hose extension to improve the line of sight between the transceiver and the watch ([Installing the Transceiver on a High Pressure Hose Extension, page 5](#)).
- Follow the transceiver position tips to achieve the best line of sight between the watch and the transceiver ([Transceiver Position Tips, page 1](#)).

Adjusting the Transceiver Power Setting

NOTE: Increasing the power setting increases the audible noise and transmission range of the transceiver and decreases its battery life.

- 1 Hold **MENU**.
- 2 Select **Dive Setup > Dive Network & Air Integration > Transmitters**.
- 3 Select a paired transceiver.
- 4 Select **Set Transmit Power**.
- 5 Enter the transceiver ID.
NOTE: The transceiver ID is printed on the housing.
- 6 Select an option.

My transceiver battery is draining rapidly

If your transceiver battery is draining faster than the expected battery life ([Specifications, page 16](#)), you should make sure the transceiver is returning to low power mode after a dive.

When you return to the surface after a dive, depressurize your regulator.

The installed transceiver enters low power mode after two minutes have elapsed.

My transceiver makes an audible noise while diving

The transceiver makes an audible noise when transmitting data over the SubWave sonar network during normal operation. Sonar signals are noticeable while diving, and because sound travels better through water than radio waves, the SubWave sonar network has longer range than traditional radio-based products. The SubWave sonar network uses a lower power signal (1 W to 10 W) than traditional marine sonar systems (around 1000 W). Testing has not indicated any disturbance to sea life.

You can decrease the power setting to reduce the audible noise from the transceiver ([Adjusting the Transceiver Power Setting, page 19](#)).

