

# StreetPilot® c550™



*navigation and communication*

© 2006 Garmin Ltd. or its subsidiaries

Garmin International, Inc.  
1200 East 151st Street,  
Olathe, Kansas 66062, U.S.A.  
Tel. 913/397.8200 or  
800/800.1020  
Fax 913/397.8282

Garmin (Europe) Ltd.  
Unit 5, The Quadrangle,  
Abbey Park Industrial Estate,  
Romsey, SO51 9DL, U.K.  
Tel. 44/0870.8501241  
Fax 44/0870.8501251

Garmin Corporation  
No. 68, Jangshu 2nd Road,  
Shijr, Taipei County, Taiwan  
Tel. 886/2.2642.9199  
Fax 886/2.2642.9099

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site ([www.garmin.com](http://www.garmin.com)) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin®, MapSource®, and StreetPilot® are registered trademarks and c550™ and Garmin Lock™ are trademarks of Garmin Ltd. or its subsidiaries and may not be used without the express permission of Garmin.



SiRF, SiRFstar and the SiRF logo are registered trademarks of SiRF Technology, Inc. SiRFstarIII and SiRF Powered are trademarks of SiRF Technology, Inc.



The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Other trademarks and trade names are those of their respective owners.

Windows® is a registered trademark of Microsoft Corporation in the United States and/or other countries.

April 2006

Part Number 190-00642-00 Rev. A

Printed in Taiwan

## PREFACE



Thank you for purchasing the Garmin® StreetPilot® c550™.

### Manual Conventions

When you are instructed to “touch” something, use your finger to touch an item on the screen.

You will see small arrows (>) used in the text. They indicate that you should touch a series of items. For example, if you see “touch **Where to?** > **Favorites**” you should touch the **Where to?** button, and then touch **Favorites**.

### c550 Tips and Shortcuts

- To quickly return to the Menu page, touch and hold **Back**.
- Touch  and  to see more choices.

Tell us how you like this manual! Fill out the Product Documentation Survey. Go to [www.garmin.com/contactUs/](http://www.garmin.com/contactUs/), and click **Product Documentation Survey**.

### Quick Links

- Finding an address: [page 7](#)
- Viewing the Map page: [page 12](#)
- Using hands-free cellular phone features: [page 14](#)
- Using the Garmin Lock™ anti-theft feature: [page 6](#)
- Listening to MP3 files: [page 24](#)
- Transferring files to your c550: [pages 22–23](#)
- Adjusting the volume: [page 6](#)
- Adjusting the brightness: [page 6](#)
- Cleaning and storing your unit: [page 31](#)

<b>Preface</b> .....	<b>i</b>	<b>Where To?</b> .....	<b>7</b>
Manual Conventions .....	i	Finding an Address .....	7
c550 Tips and Shortcuts .....	i	Go! Page Options .....	7
Quick Links .....	i	Go Home .....	8
Warning .....	iv	Finding Points of Interest .....	8
Caution .....	v	Finding Recently Found Places .....	9
Important Information .....	v	Favorites .....	10
Product Registration .....	vi	Finding a Place Using the Map .....	11
Contact Garmin .....	vi	Expanding Your Search .....	11
Software License Agreement .....	vi		
<b>Getting Started</b> .....	<b>1</b>	<b>Using the Main Pages</b> .....	<b>12</b>
What's in the Box? .....	1	Map Page .....	12
Looking at Your c550 .....	1	Trip Information Page .....	13
Step 1: Mounting the c550 .....	2	Turn List Page .....	13
Step 2: Configuring the c550 .....	3	Next Turn Page .....	13
Step 3: Acquiring Satellites .....	3		
Step 4: Using the c550 .....	3	<b>Using Hands-free Features</b> .....	<b>14</b>
Finding Your Destination .....	4	Understanding Bluetooth	
Following Your Route .....	5	Technology .....	14
Adding a Stop to Your Route .....	5	Pairing Your Phone .....	14
Adding a Detour .....	6	Getting a Call .....	15
Stopping the Route .....	6	In a Call .....	16
Taking a Better Route .....	6	Phone Menu .....	17
Adjusting the Volume .....	6		
Adjusting the Brightness .....	6		
Locking Your c550 .....	6		


<b>Using FM Traffic.....</b>	<b>20</b>	<b>Appendix .....</b>	<b>30</b>
Viewing Traffic Incidents.....	20	Resetting Your c550 .....	30
Avoiding Traffic.....	21	Caring for Your c550 .....	31
Purchasing an Additional Traffic Subscription.....	21	Changing the Fuse .....	32
<b>Managing Files on Your c550 .....</b>	<b>22</b>	Changing the c550 .....	32
Supported File Types .....	22	Calibrating the Screen .....	32
Step 1: Insert an SD Card (Optional).....	22	Using a Remote Antenna .....	32
Step 2: Connect the USB Cable.....	22	Updating the c550 Software .....	33
Step 3: Transfer Files to Your c550 .....	23	Purchasing and Loading Additional MapSource Maps .....	33
Step 4: Eject and Unplug the USB Cable .....	23	Loading MapSource Waypoints on Your c550 .....	34
Deleting Files from Your c550 .....	23	Using the Garmin Travel Guide™ .....	34
<b>Listening to MP3 files .....</b>	<b>24</b>	Custom POIs (Points of Interest)....	35
<b>Customizing the c550 .....</b>	<b>25</b>	Battery Information .....	36
Changing the Map Settings .....	25	About Satellite Signals .....	36
Changing the System Settings .....	26	Technical Specifications .....	37
Localizing Your c550 .....	26	Troubleshooting.....	38
Customizing the Display .....	27	FCC Compliance .....	40
Changing the Navigation Settings .....	28	Declaration of Conformity.....	40
Bluetooth Technology Settings .....	28	<b>Index .....</b>	<b>41</b>
Restoring All Settings .....	29		
Clearing User Data.....	29		



## Warning

**Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.**

When installing the unit in a vehicle, place the unit securely so that it does not interfere with vehicle operating controls or obstruct the driver's view of the road (see diagram).

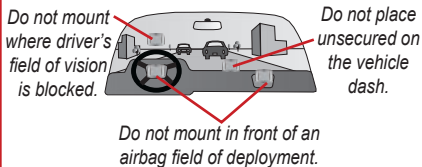

When navigating, carefully compare information displayed on the unit to all available navigation sources, including information from street signs, visual sightings, and maps. For safety, always resolve any discrepancies or questions before continuing navigation.

Always operate the vehicle in a safe manner. Do not become distracted by the unit while driving, and always be fully aware of all driving conditions. Minimize the amount of time spent viewing the screen of the unit while driving and use voice prompts when possible. Do not input destinations, change settings, or access any functions requiring prolonged use of the unit's controls while driving. Pull over in a safe and legal manner before attempting such operations.

The unit contains a non-user-replaceable, rechargeable lithium-ion battery. The battery may present a risk of fire or chemical burn if mistreated.

- Do not remove from the unit, heat unit above 140°F (60°C), or incinerate.
- Dispose of unit properly. Contact your local waste disposal department for information on properly disposing of lithium-ion batteries.

**WARNING:** This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This Notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our Web site at <http://www.garmin.com/prop65>.



## Caution

**Failure to avoid the following potentially hazardous situations may result in injury or property damage.**

The unit is designed to provide you with route suggestions. It does not reflect road closures or road conditions, traffic congestion, weather conditions, or other factors that may affect safety or timing while driving.

Use the unit only as a navigational aid. Do not attempt to use the unit for any purpose requiring precise measurement of direction, distance, location, or topography. This product should

not be used to determine ground proximity for aircraft navigation.

The Global Positioning System (GPS) is operated by the United States government, which is solely responsible for its accuracy and maintenance. The government's system is subject to changes which could affect the accuracy and performance of all GPS equipment, including the unit. Although the unit is a precision navigation device, any navigation device can be misused or misinterpreted and, therefore, become unsafe.

## Important Information

**MAP DATA INFORMATION:** One of the goals of Garmin is to provide customers with the most complete and accurate cartography that is available to us at a reasonable cost. We use a combination of governmental and private data sources, which we identify in product literature and copyright messages displayed to the consumer. Virtually all data sources contain inaccurate or incomplete data to some degree. This is particularly true outside the United States, where complete and accurate digital data is either not available or prohibitively expensive.

**NOTICE TO DRIVERS IN CALIFORNIA AND MINNESOTA:** State law prohibits drivers in California and Minnesota from using suction mounts on their windshields while operating motor vehicles. Other Garmin dashboard or friction mounting options should be used. For available accessories, refer to the Garmin Web site at [www.garmin.com](http://www.garmin.com). Also, refer to the Owner's Manual for instructions on using the included mounting disk with the suction cup mount. Garmin does not take any responsibility for any fines, penalties, or damages that may be incurred as a result of disregarding this notice. (See California Vehicle Code Section 26708(a); Minnesota Statutes 2005, Section 169.71)

**NOTICE:** This Category II radiocommunication device complies with Industry Canada Standard RSS-310.

## Product Registration

Help us better support you by completing our online registration today! Connect to our Web site at [www.garmin.com/registration/](http://www.garmin.com/registration/).

Use this area to record the serial number (8-digit number located on the back of the c550) in case your c550 needs service. Keep the original sales receipt, or a photocopy, in a safe place.

Serial Number:    \_\_\_ \_\_\_ \_\_\_ \_\_\_  
                          \_\_\_ \_\_\_ \_\_\_ \_\_\_

## Contact Garmin

Contact Garmin if you have any questions while using your c550. In the U.S.A. contact Garmin Product Support by phone: 913/397.8200 or 800/800.1020, Monday–Friday, 8 AM–5 PM Central Time; or go to [www.garmin.com/support/](http://www.garmin.com/support/), and click **Product Support**.

In Europe, contact Garmin (Europe) Ltd. at 44/0870.8501241.

## Software License Agreement

BY USING THE c550, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

Garmin grants you a limited license to use the software embedded in this device (the “Software”) in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin.

You acknowledge that the Software is the property of Garmin and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of Garmin and that the Software in source code form remains a valuable trade secret of Garmin. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.

## GETTING STARTED

### What's in the Box?

**c550 unit** and vehicle suction cup mount.

**FM TMC traffic receiver/12-Volt adapter** to provide external power and traffic information.

**USB cable** to connect the c550 to your computer. Your c550 connects to your computer as a Mass Storage Device (see [page 22](#)).

**Dashboard Disk** to mount the suction cup mount on your dashboard (see [page 30](#)).

**Yellow Sheet** that contains your unit's serial number, registration number for registering on Garmin's Web site, and unlock code for future reference.

### Looking at Your c550



## Step 1: Mounting the c550

Select a suitable location to mount the c550 on your windshield. Clean and dry the selected area of your windshield.



1. Plug the power cable into the back of the c550.
2. Place the suction cup on the windshield. Flip the lever back, toward the windshield.
3. Snap the socket on the back of the c550 onto the ball on the end of the suction cup mount.
4. Plug the power cable into a power receptacle in your vehicle. Your unit should turn on automatically if it is plugged in and your vehicle is running.

To remove the c550 from the mount, turn the c550 as far as you can to the right or left. Apply pressure in that direction until the c550 snaps off the mount.


To remove the suction cup from the windshield, flip the lever toward you. Pull the tab on the suction cup toward you.

## Step 2: Configuring the c550

To turn on your c550, press and hold the  **Power** button on the side of the unit. Follow the on-screen instructions to configure your c550.

## Step 3: Acquiring Satellites

Go outdoors to an open area, away from tall buildings and trees. Turn on the c550. Acquiring satellite signals may take 30–60 seconds.

The  bars in the upper-left corner indicate satellite strength. When the bars are green, your c550 has acquired satellite signals; you can find your destination and go to it.

## Step 4: Using the c550


- A** Touch to find a destination.
- B** Touch to view the map.
- C** Touch to make a call (when connected to a cellular phone with Bluetooth® wireless technology).
- D** Touch to view traffic incidents, when an FM traffic receiver is connected.
- E** Touch to listen to MP3 files loaded on the SD card or “Garmin” drive.
- F** Touch to adjust the c550’s settings.
- G** Touch to adjust the brightness of the screen.



## Finding Your Destination

The Where to? menu provides several different categories for you to use when you search for locations.

1

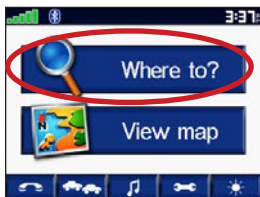


Touch **Where to?**.

2



Select a category.

3

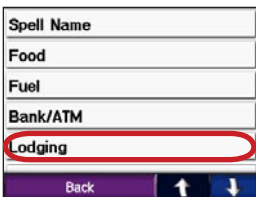

Select a sub-category.

4



Select a destination.


Touch the arrows to see more places.

5



Touch **Go!**.

6

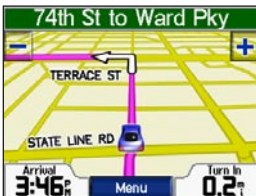


Enjoy the route!


**TIP:** Touch  and  to see more choices.

## Following Your Route

As you travel, your c550 guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, your c550 recalculates the route and provides new directions.

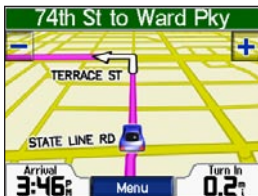

Your route is marked with a magenta line.

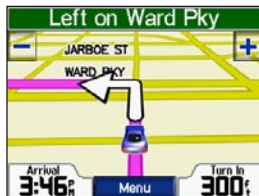

Follow the arrows as you take turns.




A checkered flag marks your destination.

## Adding a Stop to Your Route

You can add a stop to your route. The c550 gives you directions to the stop and then to your final destination.

1. With a route active, touch **Menu** on the Map page, and touch **Where to?**
2. Search for the extra stop.
3. Touch **Go!**
4. Touch **Yes** to add this stop before your destination. Or, touch **No** to make this your final destination.

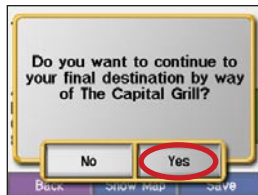

**NOTE:** You can add only one stop to your route.

## Adding a Detour





If a road on your route is closed, you can take a detour.

1. With a route active, touch **Menu**.
2. Touch **Detour**.

## Stopping the Route

1. With a route active, touch **Menu**.
2. Touch **Stop**.


## Taking a Better Route

As you approach your destination, the c550 evaluates road options, which may result in a better route. When the c550 finds a better route,  or  is displayed in the right corner of the map. Touch  or  to take the better route.

## Adjusting the Volume



Turn the volume knob on the right side of the unit to adjust the volume.

## Adjusting the Brightness

On the Menu page, touch . Touch **-** to lower the brightness and **+** to raise

it. Touch **OK** when you are done.

## Locking Your c550

1. On the Menu page, touch  **>**  
 **System**.
2. Touch the button next to **Garmin Lock**. Touch **OK**.
3. Enter a 4-digit PIN. Touch **Yes** to accept the PIN.
4. Touch **OK**. Drive to a security location, and touch **Set**.

Each time you turn on the c550, enter the 4-digit PIN or drive to the security location.

## What is a Security Location?

You can select any location, such as your home or office, for your security location. If you are at your security location, you do not need to enter a PIN. If you forget your PIN, drive to your security location to unlock the c550.




---



**NOTE:** To unlock your c550 at your security location, the c550 must have acquired satellite signals.

---

## WHERE TO?

The Where to? menu provides several different categories you can use to search for locations. To learn how to perform a simple search, see [page 4](#).


### Finding an Address

1. From the Menu page, touch  **Where to?** >  **Address**.
2. Select a state and city, if necessary.
3. Type the address number. Touch **Done**.
4. Type the street name until a list of streets appears, or touch **Done**.
5. Select the street.
6. Select a city, if necessary.
7. Select the address, if necessary. The Go! page opens.
8. Touch **Go!** to create a route to this address.



**TIP:** You can search for a postal code. Enter the postal code instead of the city name. (Not all map data provides postal code searching.)



**TIP:** Finding an intersection is very similar to finding an address. Touch  **Intersection**, and enter the two street names.

### Go! Page Options


Touch an item in the search results list to view the Go! page.



Touch **Go!** to create a turn-by-turn route to this location.


Touch **Show Map** to view this location on the map. If the GPS is off, touch **Set Loc.** to select this place as your current location.

Touch **Save** to save this location as one of your Favorites. See [page 10](#).

If a cellular phone with Bluetooth wireless technology is connected, touch  to call this location.

### Go Home

You can set a home location for the place you return to most often.

1. From the Menu page, touch  **Where to?** >  **Go Home**.
2. Select an option.



### Going Home

After you set your home location, you can route to it at any time by touching

 **Where to?** >  **Go Home**.



### Changing Your Home Location

To change your home location, you must first delete it from **Favorites**:

1. From the Menu page, touch  **Where to?** >  **Favorites**.
2. Touch **HOME** > **Edit** > **Delete** > **Yes**.



After you delete your home location, reset it by following the steps in the “Go Home” section above.

### Finding Points of Interest

1. From the Menu page, touch  **Where to?** >  **Food, Hotels...**
2. Select a category and a sub-category, if necessary. (Touch the arrows to see more categories.)
3. Select a destination.
4. Touch **Go!**

### Finding a Place by Spelling the Name

If you know the name of the location you are looking for, you can spell it using the on-screen keyboard. You can also enter letters contained in the name to narrow the search.



1. From the Menu page, touch  **Where to?** >  **Food, Hotels...**
2. Touch **Spell Name**.
3. Using the on-screen keyboard, enter letters in the name. Touch **Done**.
4. Touch the place you are looking for, and touch **Go!**


## Using the On-Screen Keyboard

When an on-screen keyboard appears, touch a number or letter to enter it. Use the keyboard to spell words just like computer keyboard.





Touch  to enter numbers.

Touch  to delete the last character entered; touch and hold  to delete the entire entry.

Touch  to change the keyboard mode to use diacritical characters or special characters.

## Finding Recently Found Places

Your c550 stores the last 50 of your recent finds in the Recently Found list. The most recently viewed places appear at the top of the list. From the Menu page, touch  **Where to?** >  **Recently Found** to view your recently found items.

## Deleting Recently Found Places

To remove all places from the Recently Found list, touch **Clear**. Then touch **Yes**.




---


**NOTE:** When you touch **Clear**, all items from the list are removed. It does not delete the actual place from your unit.

---



## Favorites

You can save places in your Favorites, so you can quickly find them and create routes to them. Your home location is also stored in Favorites.


### *Saving Places You Find*

1. After you have found a place you want to save, touch **Save**.
2. Touch **OK**. The place is saved in  **Favorites**.



### *Finding Saved Places*

1. From the Menu page, touch  **Where to?**
2. Touch  **Favorites**. Your saved locations are listed.

### *Saving Your Current Location*

From the Map page, touch the  vehicle icon. Touch **Yes** to save your current location.

## *Editing Saved Places*

1. From the Menu page, touch  **Where to?** >  **Favorites**.
2. Touch the location you want to edit.
3. Touch **Edit**.



4. Touch a button to edit the location:  
Touch **Change Name**. Enter a new name, and touch **Done**.  
Touch **Change Map Symbol**. Touch a new symbol.  
Touch **Change Phone Number**. Enter a phone number, and touch **Done**.  
Touch **Delete** to remove this item from the Favorites list. Touch **Yes**.



## Finding a Place Using the Map

Use the Browse Map page to view different parts of the map. Touch


 **Where to?** >  >

 **Browse Map.**

### Tips for Browsing the Map

- Touch the map and drag to view different parts of the map.
- Touch  and  to zoom in and out.
- Touch any object on the map. An arrow appears pointing at the object you selected.
- Touch **Back** to return to the previous screen.
- Touch **Save** to save this location to your **Favorites**.
- Touch **Go!** to navigate to the selected location.
- If the GPS is off, touch **Set Loc.** to set your location to the selected location.

## Expanding Your Search

1. From the Menu page, touch  **Where to?** > **Near...**
2. Select an option:
  - Where I Am Now**—searches for places near your current location.
  - A Different City**—searches for places near the city you enter.
  - My Current Route**—searches for places along the route you are currently navigating.
  - My Destination**—searches for places near your current route destination.
3. Touch **OK**.




---

**NOTE:** Your c550 automatically searches for places near your current location.

---

## USING THE MAIN PAGES

### Map Page

On the Menu page, touch  **View map** to open the Map page. The  vehicle icon shows your current location.

To save your current location, touch the vehicle icon, and touch **Yes**.

Touch the text bar to open the Turn List page.


Touch  to zoom out.

Touch  to zoom in.

Touch **Menu** to return to the Menu page.

Touch **Arrival** or **Speed** to open the Trip Information page.


Touch **Turn In** to open the Next Turn page.

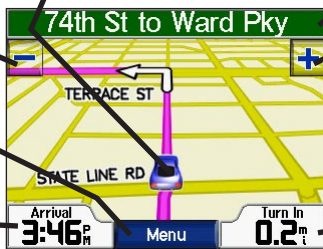

Map Page while Navigating a Route



Trip Information Page

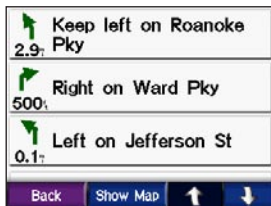

Turn List Page



Next Turn Page

## Trip Information Page

The Trip Information page displays your current speed and provides helpful statistics about your trip. To view the Trip Information page, touch **Speed** or **Arrival** on the Map page.

### **Resetting Trip Information**

If you want accurate trip information, reset the trip information before beginning a trip. If you make frequent stops, leave the c550 turned on so it can accurately measure elapsed time during the trip.



Touch **Reset Trip** to reset the information on the Trip Information page. Touch **Reset Max** to reset the maximum speed.

## Turn List Page

When you are navigating a route, the Turn List page displays turn-by-turn instructions for your entire route and the distance between turns. Touch the green text bar on the top of the Map page to open the Turn List page. Touch a turn on the list to view the Next Turn page for that turn. Touch **Show Map** to view the entire route on the Browse Map.

## Next Turn Page

When you are navigating a route, the Next Turn page shows the turn on the map and the distance and time left before you reach the turn. To view an upcoming turn on the map, touch **Turn In** on the Map page, or touch any turn from the Turn List page.

Touch  and  to view other turns in the route. When you are finished viewing the Next Turn page, touch **Back**.

## USING HANDS-FREE FEATURES

Using Bluetooth® wireless technology, your c550 can connect to your cellular phone and become a hands-free device. To see if your phone with Bluetooth technology is compatible with the c550, visit [www.garmin.com/bluetooth/](http://www.garmin.com/bluetooth/).

## Understanding Bluetooth Technology

Bluetooth® wireless technology establishes a wireless link between two devices, such as your phone and the c550. The first time you use two devices together you must “pair” them by establishing a relationship using a PIN/passkey. After the initial pairing, the two devices can connect automatically each time you turn them on.



---

**NOTE:** You might have to set your phone to connect automatically when the c550 is turned on.

---

## Pairing Your Phone


To pair and connect, your phone and the c550 must be turned on and be within 10 meters of each other.

Initiate pairing from your c550 or from your phone. Refer to your phone’s documentation.


### To pair using the phone settings:

1. Enable the phone’s Bluetooth component. This might be in a menu called Settings, Bluetooth, Connections, or Hands-free.
2. Initiate a search for Bluetooth devices. This might be located in a menu called Bluetooth, Connections, or Hands-free.
3. Select the StreetPilot c550 from the list of devices.
4. Enter the c550’s Bluetooth PIN (**1234**) into your phone.
5. On the c550, touch and hold **Back** to return to the Menu page.

## To pair using the c550 settings:

1. On the c550's Menu page, touch  > **Bluetooth**.
2. Touch the **Add** button next to the "Connections" heading.
3. Enable your phone's Bluetooth component and enable Find Me/ Discoverable/Visible mode. These settings might be in a Bluetooth, Connections, or Hands-free menu.
4. Touch **OK** on the c550.
5. Select your phone, and touch **OK**.
6. Enter the c550's Bluetooth PIN (**1234**) in your phone.
7. On the c550, touch and hold **Back** to return to the Menu page.

When your phone is connected to your c550, you are ready to make phone calls.

Touch  to access the Phone menu.

When you turn on the c550, it tries to connect to the last phone with which it was connected.

## Getting a Call



When you get a call, the Incoming Call window opens.




Touch **Answer** to answer the call. Touch **Ignore** to ignore the call and stop the phone from ringing.

The internal microphone is in the front of the c550; speak normally when on a call. Adjust the volume using the volume knob.

## In a Call

After you have made or answered a call, the  **In Call** icon floats in the upper-right corner of the screen. Touch .

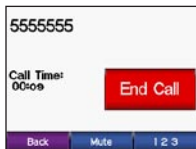

Touch **Mute** to mute the microphone.

To use automated systems, such as voice mail, touch **1 2 3**. Enter the required information. Touch **Back**.

Touch **End Call** to hang up.

## Using Call Waiting




**NOTE:** If your phone does not support call waiting through Bluetooth, this feature will not work.

If you get a call waiting call, the c550 displays the Incoming Call window. Touch **Answer** to answer the call. The first call is placed on hold.


### To switch between calls:

1. Touch  to open the In Call menu.

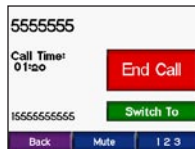

2. Touch **Switch To**.
3. Touch **End Call** to hang up; this does not disconnect the call on hold.

## Phone Menu

On the Menu page, touch  to open the Phone menu. Press **Status** to view the connected phone's signal strength, battery level, and name.



**NOTE:** Not all phones support all features of the c550 Phone Menu. For example, your phone might not support voice dialing or phone book transfer.

## Using Your Phone Book



**NOTE:** The Phone Book feature is only available if your phone supports phone book transfer.



Each time your cellular phone connects with the c550, the phone book is automatically loaded into the c550. It may take a few minutes for the phone book to be available.

1. On the Menu page, touch .
2. Touch  **Phone Book**.

Ann Smith	5551212
Home	5553147
Larry	5556056
Mom	5558363
Sharon	5555614
Book	
	↑ ↓

3. Touch the phone book entry you want to call.



## Dialing a Point of Interest

1. On the Menu page, touch .
2. Touch  **Food, Hotels...**
3. Search for the point of interest you want to call. Open the Go! page.



4. Touch **Dial** or .

## Dialing a Number

1. On the Menu page, touch .
2. Touch  **Dial**.





3. Enter the number, and touch **Dial**.

## Viewing Your Call History



**NOTE:** Call History is only available if your phone supports call history transfer.



Each time your phone connects to the c550, your call history is automatically transferred to the c550. It may take a few minutes to transfer this data to the c550.

1. On the Menu page, touch .
2. Touch  **Call History**.
3. Touch **Missed**, **Dialed**, or **Received** to view those calls. The calls are listed in chronological order; the most recent calls are at the top of the list.
4. Touch an entry to place a call to it.



## Calling Home

Enter a phone number for your home location, so you can quickly call home.

### Entering Your Home Location and Phone Number

1. On the Menu page, touch .
2. Touch  **Call Home**.
3. If you have not set your home location (page 8), follow the prompts to set your home location. Touch **Save**.
4. Touch **Yes** to enter a phone number.
5. Enter the phone number, and then touch **Done**. The c550 dials your home phone number.

### Calling Your Home



1. On the Menu page, touch .
2. Touch  **Call Home**.
3. The c550 dials your home phone number.

## Placing Calls Using Voice Dial



**NOTE:** Voice Dial is only available if your phone supports voice dialing.

You can place calls by speaking the contact's name.

1. On the Menu page, touch .
2. Touch  **Voice Dial**.
3. Speak the contact name.



**NOTE:** You may need to “train” your cellular phone to recognize your voice commands. Refer to your phone's documentation.

## USING FM TRAFFIC

Use an FM TMC traffic receiver to receive traffic information broadcast over the FM Radio Data System. When a traffic message is received, your c550 displays the incident on the map and can change your route to avoid the traffic incident. For coverage areas, refer to the Garmin Web site at [www.garmin.com/fmtraffic](http://www.garmin.com/fmtraffic).



**NOTE:** The FM traffic receiver and c550 must be in data range of an FM station transmitting TMC (Traffic Message Channel) data to receive traffic information.




**NOTE:** Garmin is not responsible for the accuracy of the traffic information. The FM traffic receiver simply receives signals from the traffic service provider and shows that information on your c550.



**NOTE:** You can only access the traffic information if the c550 is connected to an FM traffic receiver.

## Viewing Traffic Incidents




1. On the Menu page, touch  to display a list of traffic incidents.
2. Select an item to view details.
3. Select an option.

### Traffic Symbols


North American	Meaning	International
	Road Condition	
	Road Construction	
	Congestion	
	Accident	
	Incident	
	Information	

### Severity Color Code


The bars to the left of the traffic symbols indicate the traffic incident's severity:

-  Green = Low severity; traffic is flowing normally.
-  Yellow = Medium severity; traffic is a bit congested.
-  Red = High severity; traffic is heavily congested or stopped.

## Avoiding Traffic

The Map page displays  when there is a traffic incident on your current route or on the road on which you are traveling.



1. From the Map page, touch .
2. Select an item to view details.
3. Touch **Avoid**.




## Purchasing an Additional Traffic Subscription

If your subscription expires, you can renew it at Garmin's FM Traffic Web site at [www.garmin.com/fmtraffic](http://www.garmin.com/fmtraffic). You can purchase additional subscriptions at [www.garmin.com/fmtraffic](http://www.garmin.com/fmtraffic).



**NOTE:** You do not need to activate the subscription included with your FM traffic receiver (if it came with one). The subscription activates automatically after your c550 acquires satellite signals while receiving traffic signals from the pay service provider.

## Adding a Subscription

1. On the Menu page, touch .
2. Touch  >  **Traffic**.
3. Touch **Add**.
4. Write down the FM traffic receiver's unit ID. Go to [www.garmin.com/fmtraffic](http://www.garmin.com/fmtraffic) to purchase a subscription and get a code.
5. After you receive the 25-character code, touch **Next** on the c550, and enter the code.
6. Touch **Done**.

The traffic subscription code cannot be reused. You must obtain a new code each time you renew your service. If you own multiple FM traffic receivers, you must obtain a new code for each receiver.

## MANAGING FILES ON YOUR c550

You can store files, such as MP3s and JPEG image files, in the c550's internal memory or on an optional SD card.



**NOTE:** The c550 is not compatible with Windows® 95, Windows 98, or Windows Me operating systems. This is a common limitation of most USB Mass Storage devices.

### Supported File Types

- MP3 music files (see [page 24](#))
- JPEG and JPG image files for splash screen (see [page 27](#))
- GPI custom POI files from Garmin's POI Loader (see [page 35](#))
- GPX waypoint files from MapSource (see [page 34](#))
- Maps from MapSource®



**NOTE:** The c550 does not support M4A/M4P files.

### Step 1: Insert an SD Card (Optional)

To insert or remove the card, press it in until it clicks.



### Step 2: Connect the USB Cable

1. Plug the small end of the USB cable into the mini-USB connector.



2. Connect the larger end of the USB cable to an available USB port on your computer.

Two additional drives appear in your computer's list of drives. "Garmin" is the available storage in the c550's internal memory. The other removable disk drive is the SD card.





---


**NOTE:** On some operating systems, the c550 drives may not be named automatically. See your operating system's Help file or [page 39](#) to learn how to rename the drives.

---


## Step 3: Transfer Files to Your c550

1. Connect the c550 to your computer.
2. Double-click  **My Computer**.
3. Browse your computer for the file you want to copy.
4. Highlight the file, and select **Edit** > **Copy**.
5. Open the "Garmin" drive or the SD card drive.
6. Select **Edit** > **Paste**. The file appears in the list of files on the c550 memory or SD card.

## Step 4: Eject and Unplug the USB Cable

When you are finished transferring files, double-click the  **Unplug or Eject** icon in your Windows system tray. Select **USB Mass Storage Device**, and click **Stop**. Select the c550 drives, and click **OK**. You can unplug the USB cable from your c550 now.

## Deleting Files from Your c550

With the c550 connected to your computer, open  **My Computer**. Open the "Garmin" or SD card drive. Highlight the file that you want to delete, and press the **Delete** key on your computer's keyboard.





---

**CAUTION:** If you are not sure about a file's purpose, do **NOT** delete it. Your c550 memory contains important system files that should **NOT** be deleted. Be especially cautious of files located in folders entitled "Garmin."


---


## LISTENING TO MP3 FILES

Load MP3 files to the internal memory or SD card using USB Mass Storage. See [pages 22–23](#) for more information.

1. On the Menu page, touch .
2. Touch **Browse**.
3. Touch a category.
4. To play the entire category from the beginning of the list, touch **Play All**. To play starting with a specific song, touch the title.
5. Touch **Back** to exit the music page to view other pages, such as the map.





Tap  to go to the beginning of the song; touch and hold to skip back.

Tap  to skip to the next song; touch and hold to skip ahead.

Touch  to stop the song.

Touch  to pause the song.

Touch  to repeat. Touch  to shuffle.

Touch the album art to view details about the MP3 file.





---

**NOTE:** The c550 plays MP3 files only; it does not support M4A/M4P files.

---



## CUSTOMIZING THE c550


1. From the Menu page, touch .
2. Touch the setting you want to change.



3. Touch the button next to the setting name to change it.

## Changing the Map Settings

From the Menu page, touch  >  **Map**.

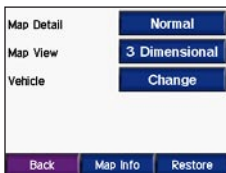

**Map Detail**—adjust the amount of detail shown on the map. Showing more detail may cause the map to redraw slower.

**Map View**—change the perspective of the map.



- **Track Up**—display the map in 2 dimensions (2D) with your direction of travel at the top.
- **North Up**—display the map in 2D with North at the top.
- **3D**—display the map in 3 dimensions (3D) in Track Up.


**Vehicle**—touch **Change** to change the icon used to display your position on the map. Touch the icon you want to use, and then touch **OK**. Download additional vehicle icons at [www.garmin.com/vehicles](http://www.garmin.com/vehicles).

**Map Info**—view the maps loaded on your c550 and their version. Touch a map to enable (check mark) or disable (no check mark) that map.

**Restore**—restore the original map settings.

## Changing the System Settings

From the Menu page, touch  >  
 **System.**

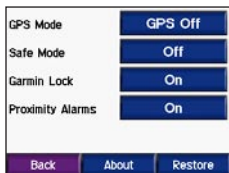

**GPS Mode**—enable and disable GPS and WAAS/EGNOS. See [www.garmin.com/aboutGPS/waas.html](http://www.garmin.com/aboutGPS/waas.html) for information about WAAS/EGNOS.

**Safe Mode**—turn on or off Safe Mode. When your vehicle is moving, Safe Mode disables all functions that require significant operator attention and could become a distraction while driving.

**Garmin Lock**—turn on Garmin Lock™ to lock your c550. Enter a 4-digit PIN, and set a security location. For more information, see [page 6](#).



**Proximity Alarms**—turn on or off the

alerts when you approach Custom POIs. This option is only visible if you have loaded Custom POIs. See [page 35](#) for more information about Custom POIs.

**About**—display your c550's software version number, unit ID number, and audio version number. You need this information when you update the system software (see [page 33](#)) or purchase additional map data (see [page 33](#)).

**Restore**—restore the system settings.

## Localizing Your c550


From the Menu page, touch  >  
 **Locale.**





To change a setting, touch the button next to the icon.

To change all settings, touch **Change All**. In each screen, touch the button next to the setting you want, and then touch **Next**.

**Locale**—select your location.

 **Text Language**—change all on-screen text to the selected language. Changing the text language does not change the language of user-entered data or map data, such as street names.

 **Voice Language**—change the language for voice prompts. Languages noted with a person's name are text-to-speech (TTS) voices, which have an extensive vocabulary and pronounce the street names as you approach turns. The pre-recorded voices (those without a person's name) have a limited vocabulary and do not speak names of locations or streets.

 **Time Format**—choose a 12-hour, 24-hour, or UTC time format.

**Time Zone**—select a time zone or nearby city from the list.


**Daylight Saving**—set to **On**, **Off**, or **Auto**, if it is available.

 **Units**—change units of measure to **Kilometers** or **Miles**.

## Customizing the Display


From the Menu page, touch  >

 **Display**.

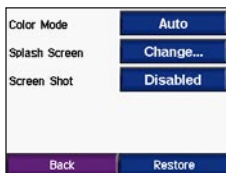

**Color Mode**—select **Daytime** for a light background, **Nighttime** for a dark background, or **Auto** to automatically switch between the two.


**Splash Screen**—select an image to be shown when you turn on the c550. First, load JPEG images. See [pages 22–23](#).

**Screen Shot**—enable Screen Shot mode. Touch the  camera icon to take a picture of the screen. The picture bitmap file is saved in the **Garmin\scrn** folder on the “Garmin” drive.

## Changing the Navigation Settings

From the Menu page, touch  >

 **Navigation.**

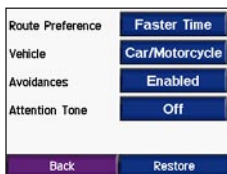

**Route Preference**—select a preference for calculating your route. Select **Faster Time** to calculate routes that are faster to drive but can be longer in distance. Select **Shorter Distance** to calculate routes that are shorter in distance but can take more time to drive.

**Vehicle Type**—specify your vehicle type to optimize routes.

**Avoidances**—select the road types you want to avoid on your routes. The c550 uses these road types only if alternative routes take you too far out of your way or if no other roads are available. If you have an FM traffic receiver, you can also avoid traffic incidents.

**Attention Tone**—turn on or off the attention tone.

**Restore**—restore the original navigation settings.

## Bluetooth Technology Settings

From the Menu page, touch  >

 **Bluetooth.**

**Connections**—select a device to connect to. Select **Add Device** to pair with a cellular phone that has Bluetooth® wireless technology. See [pages 14–17](#).


Touch **Change** if you want to connect to a different phone in the list. Select your phone, and touch **OK**.




**NOTE:** The c550's PIN code (or passkey) is **1234**.

**Drop**—select the phone you want to disconnect, and touch **Yes**.

**Remove**—select the phone you want to delete from the c550's memory, and touch **Yes**.

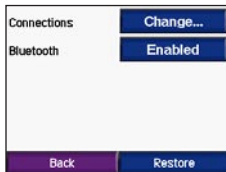


**Bluetooth**—enable and disable the Bluetooth component. The  **Bluetooth** icon appears on the Menu page if the Bluetooth component is enabled. To prevent a phone from automatically connecting, select **Disabled**.

**Friendly Name**—touch **Edit** to enter a friendly name that identifies your c550 on cellular phones with Bluetooth technology. Touch **Done**.

**Restore**—restore the original Bluetooth settings. Restoring the Bluetooth settings does not clear the pairing information.

## Restoring All Settings

1. From the Menu page, touch .
2. Touch **Restore**.

## Clearing User Data



**CAUTION:** This deletes all user-entered information.

1. Hold your finger on the lower-right corner of the c550's screen while turning on the c550.
2. Keep your finger pressed until the pop-up window appears.
3. Touch **Yes** to clear all user data.

All original settings are restored. Any items that you have saved are erased.

## APPENDIX

### Mounting on Your Dashboard

Use the enclosed mounting disk to mount your unit to the dashboard and to comply with certain state regulations.

**Important:** The **permanent** mounting adhesive is extremely difficult to remove after it is installed.

#### To install the mounting disk:

1. Clean and dry the dashboard where you are placing the disk.
2. Remove the backing from the permanent mounting adhesive on the bottom of the disk.
3. Place the disk on the dashboard.
4. Place the suction cup mount on top of the disk. Flip the lever down (toward the disk).



### Resetting Your c550

If your unit locks up (freezes up), press and hold the **Power** button to turn off the unit. Then turn the unit back on. If this does not help, reset your c550.

#### To reset the c550:

1. Place your thumb nail in the groove located under the Garmin logo on the faceplate. *Reset button*
2. Gently pull off the faceplate.
3. Press the **Reset** button.
4. Connect the c550 to a *Faceplate Power button* power source using the power cable. The c550 should automatically turn back on and operate normally.



**NOTE:** If you need to reset your unit often, update the system software. See [page 33](#) for information about updating the software.

## **Caring for Your c550**

Your c550 contains sensitive electronic components that can be permanently damaged if exposed to excessive shock or vibration. To minimize the risk of damage to your c550, avoid dropping your unit and operating it in high-shock and high-vibration environments.

### ***Cleaning the Unit***

The c550 is constructed of high-quality materials and does not require user maintenance other than cleaning. Clean the unit's outer casing (not the touch screen) using a cloth dampened with a mild detergent solution, and then wipe dry. Avoid chemical cleaners and solvents that can damage plastic components.

### ***Cleaning the Touch Screen***

Clean the touch screen with a soft, clean, lint-free cloth. Use water, isopropyl alcohol, or eyeglass cleaner, if needed. Apply the liquid to the cloth, and then gently wipe the touch screen.

## **Protecting Your c550**

- Carry and store your c550 in the included carry case.
- Do not store the c550 where prolonged exposure to extreme temperatures can occur (such as in the trunk of a car), because it can cause permanent damage.
- Do not expose the c550 to water. Contact with water can cause this unit to malfunction.
- Though a PDA stylus can also be used to operate the touch screen, never attempt this while operating a vehicle. Never use a hard or sharp object to operate the touch screen or damage may result.

## Avoiding Theft

- To avoid theft, remove the c550 and mount from sight when not in use. Remove the mark on the windshield left by the suction cup.
- Do not keep your unit in the glove compartment; thieves know where to look.
- Register your product at [www.garmin.com/registration](http://www.garmin.com/registration). This may help if your unit is stolen.
- Use the Garmin Lock™ feature. See [page 6](#).

## Changing the Fuse

An AGC/3AG 2-Amp, high-breaking capacity, 1500 A-rated fuse is located at the tip of the vehicle adapter. Periodically, you may need to change the fuse. Unscrew the black, round end piece, and replace the fuse.




## Charging the c550

To charge the c550, connect the power cable to the c550 and a power source.

## Calibrating the Screen

If the touch screen is not responding properly, calibrate the touch screen.

Turn the unit off. Press and hold the  **Power** button for about one minute until the Calibration screen appears. Follow the on-screen instructions.

## Using a Remote Antenna

You can use an optional external remote antenna (Garmin GA 25MCX). To purchase, go to the Garmin Web site at [www.garmin.com/products/sp550](http://www.garmin.com/products/sp550), and click the **Accessories** link.

Remove the weather cap from the antenna connector located on the left side of the c550, and connect the antenna.

## Updating the c550 Software



Use WebUpdater to update your c550 software. Go to [www.garmin.com/products/webupdater/](http://www.garmin.com/products/webupdater/) to download the WebUpdater program.

After downloading WebUpdater to your computer, connect your c550 to your computer, run WebUpdater, and follow the screen prompts. After confirming that you want to perform an update, WebUpdater automatically downloads the update and installs it on your c550.

If you register your c550, you will receive notification of software and map updates. To register your c550, go to [www.garmin.com/registration/](http://www.garmin.com/registration/).

You can also download software updates from [www.garmin.com/products/sp550](http://www.garmin.com/products/sp550). Click **Software Updates**. Click **Download** next to the unit software. Read and agree to the terms. Click **Download**. Select **Run** (or **Open**). Your software is updated.

## Purchasing and Loading Additional MapSource Maps

To find out the version of the maps that are loaded on your c550, open the Menu page. Touch  >  **Map** > **Map Info**. To enable additional maps, you need your unit ID (see [page 26](#)) and serial number (see [page vi](#)).

Check [www.garmin.com/unlock/update.jsp](http://www.garmin.com/unlock/update.jsp) to see if an update for your map software is available.



You can also purchase additional MapSource map data from Garmin and load the maps on your c550's internal memory or on an optional SD card.

To load maps to your c550 memory or SD card, select the name for your “Garmin” drive or SD card drive. Refer to the MapSource Help file for more information about using MapSource and loading maps on your c550.

## Loading MapSource Waypoints on Your c550

Using MapSource, you can save locations (also called waypoints) and transfer them to your c550. For more information about creating waypoints in MapSource, see the Help file (press F1 to open the Help file).

After you have created the waypoints, select **File > Save**. Select **GPS eXchange Format (\*.gpx)** for the **Save as Type**. Click the **Save** button.

With your c550 connected to your computer, copy the \*.gpx file into the **Garmin\gpx** folder in the “Garmin” drive. The waypoints you created in MapSource are now in  **Where to?** >  **Favorites**.

### Viewing Your Saved Locations in MapSource



You can also view the locations you have saved in your c550 using MapSource.

In MapSource, select **File > Open**. Select **GPS eXchange Format (\*.gpx)** for **Files of Type**. Browse to find the **Garmin\gpx** folder on your “Garmin” drive. Select **Current.gpx**, and click **Open**.

## Using the Garmin Travel Guide™

Much like a paper travel guide, the Garmin Travel Guide provides detailed information about places, such as restaurants and hotels. To purchase the Travel Guide accessory, go to the Garmin Web site at [www.garmin.com/extras](http://www.garmin.com/extras). You can also contact your Garmin dealer to purchase accessories.

### To use the Travel Guide:

1. Insert the SD card into your c550.
2. Touch  **Where to?** >  **Extras**.
3. Touch the Travel Guide.
4. Touch a category. Touch a sub-category, if necessary.
5. Touch a location in the list.

6. Do one of the following:

Touch **Go** to go to the location.

Touch **Map** to display this item on a map.

Touch **Save** to save this location in your Favorites.

Touch **More** to view more information about the location.

## Custom POIs (Points of Interest)

Load custom points of interest (POIs) onto your c550. POI databases are available from various companies on the Internet. Some custom databases contain alert information for points, such as safety cameras and school zones. You will receive a warning if you are traveling too fast near these custom POIs.

Use the Garmin POI Loader to load POIs into your unit. Download the POI Loader from [www.garmin.com/extras](http://www.garmin.com/extras).

Using the POI Loader program, you can store the Custom POIs on your “Garmin” drive or your SD card. You can also customize the proximity alert settings for each POI using the POI Loader. Refer to the POI Loader Help file for more information; press F1 to open the Help file.

To view your Custom POIs, touch  **Where to?** >  **Extras** > **Custom POIs**.

To delete the Custom POIs from your c550, connect your c550 to your computer. Open the **Garmin\poi** folder in the “Garmin” drive or the SD card drive. Delete the file entitled **poi.gpi**.





---

**CAUTION:** Garmin is not responsible for the consequences of using a custom POI database or the accuracy of the safety camera or other custom POI database.

---




## Battery Information

Your unit contains an internal (non-removable) lithium-ion battery. The battery should last up to 8 hours, depending on usage.

The  battery icon in the corner of the Menu page indicates the status of the internal battery. If the icon is not present, the c550 is connected to external power.

Contact your local waste disposal department for information on properly disposing of the unit.



### Maximizing the Battery Life

- Turn off GPS ( >  **System** > **GPS Mode** > **GPS Off**) when you do not need to receive GPS signals, or use **Normal** mode when you do not need to use WAAS or EGNOS.
- Turn the backlight brightness down (on the Menu page, touch .
- Do not leave your c550 in direct sunlight. Avoid prolonged exposure to excessive heat.

## About Satellite Signals

Your c550 must acquire satellite signals to operate. If you are indoors, near tall buildings or trees, or in a parking garage, the c550 cannot acquire satellites.

Go outside to an area free from tall obstructions to use your c550.

When the c550 has acquired satellite signals, the signal strength bars on the Menu page are green . When it loses satellite signals, the bars turn red or disappear .

For more information about GPS, visit [www.garmin.com/aboutGPS](http://www.garmin.com/aboutGPS).

## Technical Specifications

**Physical size:** 4.4" W x 3.2" H x 2.2" D  
(11.2 x 8.2 x 5.6 cm)

**Weight:** 0.59 pounds (269 g)

**Display:** 2.8" W x 2.1" H (7.2 x 5.4 cm);  
320 x 240 pixels; bright, 16-bit LCD,  
with white backlight and touch screen

**Case:** Not waterproof

**Temperature range:** 32°F to 140°F  
(0°C to 60°C)

**Data storage:** Internal memory and  
optional removable SD card. Data stored  
indefinitely.

**Computer interface:** USB mass storage,  
plug-and-play

**Charge time:** Approximately 4 hours

**Power input:** 12/24 VDC

**Usage:** 15 W max. @ 13.8 VDC

**Battery life:** up to 8 hours depending on  
usage



**CAUTION:** The c550 is not  
waterproof.

---

## GPS Performance Specifications

**Receiver:** WAAS enabled

**Acquisition times\*:**

Warm: <1 sec

Cold: <38 sec

Factory Reset: <45 sec

\*On average for a stationary receiver  
with a clear view of the sky

**Update rate:** 1/sec, continuous

**GPS accuracy:**

Position: <10 meters, typical

Velocity: 0.05 meter/sec RMS

**GPS (WAAS) accuracy:**


Position: <5 meters, typical

Velocity: 0.05 meter/sec RMS

For a complete list of specifications, see  
[www.garmin.com/products/sp550/spec.html](http://www.garmin.com/products/sp550/spec.html).

## Troubleshooting

Problem/Question	Solution/Answer
My c550 never gets satellite signals.	Take your c550 outside, away from tall buildings and trees.
My phone will not connect to the c550.	Verify that the Bluetooth field is set to <b>Enabled</b> . Make sure your phone is turned on and is less than 10 meters (about 33 feet) away from your c550. See <a href="http://www.garmin.com/bluetooth">www.garmin.com/bluetooth</a> for more help.
How do I know my c550 is in USB Mass Storage Mode?	When your c550 is in USB Mass Storage Mode, a picture of a c550 connected to a computer is shown. Also, you should see two new removable disk drives listed in <b>My Computer</b> .
My computer never senses that the c550 is connected.	<ol style="list-style-type: none"> <li>1. Unplug the USB cable from your computer.</li> <li>2. Turn the c550 off.</li> <li>3. Plug the USB cable into your computer and your c550. The c550 automatically turns on and goes into USB Mass Storage Mode.</li> </ol>
I cannot find any drives named "Garmin" in my list of drives.	If you have several network drives mapped on your computer, Windows may have trouble assigning drive letters to your c550 drives. Follow the steps on the next page to assign (map) your drive letters.

Problem/Question	Solution/Answer
<p>I get a message saying “Unsafe Removal of Device” when I unplug the USB cable.</p>	<p>When you are ready to disconnect your c550 from your computer, double-click the  <b>Unplug or Eject</b> icon in your system tray. Select <b>USB Mass Storage Device</b>, and click <b>Stop</b>. Select the c550 drives, and click <b>OK</b>. You can disconnect your c550 from your computer now.</p>
<p>How can I rename my c550 drives?</p>	<ol style="list-style-type: none"> <li>1. Open <b>My Computer</b>.</li> <li>2. Select the drive you want to rename.</li> <li>3. Right-click your mouse, and select <b>Rename</b>.</li> <li>4. Type the new name, and press the <b>Enter</b> key on your computer’s keyboard.</li> </ol>
<p>How do I assign (map) my c550 drives in Windows?</p>	<ol style="list-style-type: none"> <li>1. Turn off your c550.</li> <li>2. Plug in the USB cable to the c550 and your computer. Your c550 automatically turns on.</li> <li>3. Click <b>Start &gt; Settings &gt; Control Panel &gt; Administrative Tools &gt; Computer Management &gt; Storage &gt; Disk Management</b>.</li> <li>4. Click a c550 removable disk drive (either the internal memory or your SD card drive). Right-click your mouse, and select <b>Change Drive Letter and Path...</b></li> <li>5. Select <b>Edit...</b>, select a drive letter from the drop-down list, and click <b>OK</b>.</li> </ol>

## FCC Compliance

The unit complies with Part 15 of the FCC interference limits for Class B digital devices FOR HOME OR OFFICE USE. These limits are designed to provide more reasonable protection against harmful interference in a residential installation, and are more stringent than “outdoor” requirements.

Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult an experienced radio/TV technician for help.




---

**NOTE:** The Garmin c550 has no user-serviceable parts. Repairs should only be made by an authorized Garmin service center.

---




---

**NOTE:** Unauthorized repairs or modifications could result in permanent damage to the equipment, and void your warranty and your authority to operated this device under Part 15 regulations.

---




---

**NOTE:** The c550 is fastened shut with screws. Any attempt to open the case to change or modify the unit in any way voids your warranty and may result in permanent damage to the equipment.

---

## Declaration of Conformity

Hereby, Garmin declares that this StreetPilot c-series product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

To view the full Declaration of Conformity, see the Garmin Web site for your Garmin product: [www.garmin.com/products/sp550/](http://www.garmin.com/products/sp550/). Click **Manuals**, and then select the **Declaration of Conformity**.

# INDEX

## Symbols

2-D, 3-D map view 25

## A

About button 26  
 acquiring satellites 3  
 adding a Bluetooth device 28  
 aligning the touch screen 32  
 answering a call 15  
 antenna, external 32  
 anti-theft feature 6, 26  
 audio version 26  
 automated systems 16  
 avoiding road types 28  
 avoiding traffic 20, 28

## B

battery 36  
 better route 6  
 Bluetooth technology 14–19  
 settings 28–29  
 brightness 6  
 browsing the map 11, 34, 35

## C

calibrating the touch screen 32  
 calling home 19  
 call history 18  
 call waiting 16

caring for your c550 31  
 changing the paired device 29  
 charging the c550 32  
 clearing user data 29  
 computer connection 22  
 configuring the c550 3  
 contact Garmin vi  
 current location, saving 10  
 customizing your c550 25–29  
 Custom POIs 35

## D

daylight saving 27  
 Declaration of Conformity 40  
 deleting all user data 29  
 character 9  
 custom POIs 35  
 Favorites 10  
 files 23  
 recent finds list 9  
 detail maps 25  
 diacritical characters 9  
 disconnecting USB cable 39  
 driving directions 13

## E

editing saved places 10  
 EGNOS 26  
 ejecting the USB 23

enabling detailed maps 25  
 ending a call 16  
 expanding your search 11  
 Extras 34, 35

## F

Favorites 10  
 editing 10  
 finding 10  
 saving 10  
 FCC compliance 40  
 files

deleting 23  
 managing 22  
 supported types 23  
 transferring 22–23  
 finding places by name 8  
 by postal code 7  
 intersection 7  
 item on the map 11  
 near another location 11  
 recent selections 9  
 saved places (Favorites) 10

FM traffic receiver 20–21  
 fuse, changing 32

## G

Garmin Lock™ 6, 26, 32

Garmin Travel Guide™ 34  
 getting a phone call 15  
 Go! page options 7  
 going home 8–11  
 GPS 36

## H

hands-free features 14–19  
 hang up 16  
 home location 8

## I

in a call 16

## K

keyboard 9  
 kilometers 27

## L

license agreement vi  
 loading additional maps 33  
 locked up, c550 is 30  
 locking your c550 6

## M

managing files 22–23  
 map browse 11  
 customize 25  
 Map Info button 25  
 moving 11  
 update maps 33  
 version 25  
 view 25  
 zoom 11

- MapSource 33
  - waypoints 34
- menu page 3
- miles 27
- mounting the c550 2, 30
- MP3 music files
  - loading 22
  - playing 24
- mute a call 16
- N**
- navigation settings 28
- Next Turn page 13
- O**
- on-screen keyboard 9
- P**
- pairing a cellular phone 15
- phone book 17
- PIN
  - Bluetooth 29
  - Garmin Lock 6
- playing music 24
- POIs, custom 35
- position icon 12–13, 25
- postal code 7
- proximity alarms 26
- R**
- recently found
  - locations 9
    - deleting 9
    - finding 9
- registering your c550 32, 33
- remote antenna 32
- removable disk drive 23
- removing/deleting a phone 29
- removing the mount 2
- resetting
  - the max speed 13
  - the trip data 13
  - your c550 30
- restoring settings 29
- routing preferences 28
- S**
- safety camera
  - database 35
- Safe Mode 26
- satellite signals 36
- saving
  - places you find 7, 10
  - your current location 10, 11
- school zone database 35
- SD card 22, 37
- security location 6
- serial number vi
- settings, adjusting 25–29
- setting your location 7, 11
- show map 7
- software license
  - agreement vi
- software version 26
- special characters 9
- specifications 37
- spelling the name of a place 8
- stopping the USB 23
- storing your c550 31
- supported file types 22
- switch to call waiting 16
- system settings 26
- T**
- technical specifications 37
- text language 27
- time zone 27
- tones 28
- touch screen
  - aligning 32
  - calibrating 32
  - cleaning 31
- Track Up 25
- traffic 20
  - avoid 21, 28
  - incidents 20
  - subscription 21
- transferring files 22–23
- Trip Information
  - page 13
- troubleshooting 38
- turn-by-turn directions 13
- U**
- unit ID 26
- unit locked up 30
- updating the c550 software 33
- USB 1, 23
- mass storage
  - mode 22–23
- troubleshooting 38
- using automated systems 16
- V**
- vehicle icon 12–13, 25
- vehicle type 28
- voice dial 19
- voice language 27
- volume 6
- W**
- WAAS 26
- warranty 43
- WebUpdater 33
- Z**
- zoom 11

## Limited Warranty

This Garmin product is warranted to be free from defects in materials or workmanship for one year from the date of purchase. Within this period, Garmin will at its sole option repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost. This warranty does not cover failures due to abuse, misuse, accident, or unauthorized alteration or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Garmin retains the exclusive right to repair or replace the unit or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY

SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Garmin authorized dealer or call Garmin Product Support for shipping instructions and an RMA tracking number. The unit should be securely packed with the tracking number clearly written on the outside of the package. The unit should then be sent, freight charges prepaid, to any Garmin warranty service station. A copy of the original sales receipt is required as the proof of purchase for warranty repairs.

Garmin International, Inc.  
Tel. 913/397.8200 Fax. 913/397.8282

Garmin (Europe) Ltd.  
Tel. 44/0870.8501241 Fax 44/0870.8501251

**Online Auction Purchases:** Products sold through online auctions are not eligible for rebates or other special offers from Garmin. Online auction confirmations are not accepted for warranty verification. To obtain warranty service, an original or copy of the sales receipt from the original retailer is required. Garmin will not replace missing components from any package purchased through an online auction.

**International Purchases:** A separate warranty is provided by international distributors for units purchased outside the United States. This warranty is provided by the local in-country distributor and this distributor provides local service for your unit. Distributor warranties are only valid in the area of intended distribution. Units purchased in the United States or Canada must be returned to the Garmin service center in the United Kingdom, the United States, Canada, or Taiwan for service.

**For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at [www.garmin.com](http://www.garmin.com).**



© 2006 Garmin Ltd. or its subsidiaries

Garmin International, Inc.

1200 East 151<sup>st</sup> Street, Olathe, Kansas 66062, U.S.A.

Garmin (Europe) Ltd.

Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, SO51 9DL, U.K.

Garmin Corporation

No. 68, Jangshu 2<sup>nd</sup> Road, Shijr, Taipei County, Taiwan

[www.garmin.com](http://www.garmin.com)

Part Number 190-00642-00 Rev. A