

**GARMIN**<sup>®</sup>

**tactix**<sup>™</sup>



Owner's Manual

© 2016 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to [www.garmin.com](http://www.garmin.com) for current updates and supplemental information concerning the use of this product.

Garmin®, the Garmin logo, and TracBack® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. ANT+™, BaseCamp™, chirp™, Garmin Connect™, GSC™, HomePort™, tactix™, and tempe™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Mac® is a registered trademark of Apple Computer, Inc. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Other trademarks and trade names are those of their respective owners. This product is ANT+ certified. Visit [www.thisisant.com/directory](http://www.thisisant.com/directory) for a list of compatible products and apps.

# Table of Contents

<b>Introduction</b> .....	<b>1</b>	Entering Jump Information.....	7
Getting Started.....	1	Entering Wind Information for HAHO and HALO Jumps.....	7
Charging the Device.....	1	Entering Wind Information for a Static Jump.....	7
Keys.....	1	Constant Settings.....	7
Sensors.....	1	Viewing Tide Information.....	7
Viewing the Sensor Data.....	1	Clock.....	7
Turning on a Sensor Mode.....	2	Setting the Alarm.....	7
Acquiring Satellite Signals and Recording a Track.....	2	Starting the Countdown Timer.....	8
Stopping GPS.....	2	Using the Stopwatch.....	8
Sending a Track to BaseCamp™.....	2	Adding a Custom Time Zone.....	8
Profiles.....	2	Editing a Custom Time Zone.....	8
Changing Profiles.....	2	Alerts.....	8
Creating a Custom Profile.....	2	Setting a Proximity Alarm.....	8
Deleting a Profile.....	2	Calculating the Size of an Area.....	8
<b>Waypoints, Routes, and Tracks</b> .....	<b>3</b>	Viewing the Almanacs.....	8
Waypoints.....	3	Viewing Satellite Information.....	8
Creating a Waypoint.....	3	Simulating a Location.....	8
Finding a Waypoint by Name.....	3	<b>Customizing Your Device</b> .....	<b>9</b>
Finding Nearby Locations.....	3	Setup Overview.....	9
Navigating to a Waypoint.....	3	Customizing the Main Menu.....	9
Editing a Waypoint.....	3	Customizing the Arrow Keys.....	9
Increasing the Accuracy of a Waypoint Location.....	3	Customizing the Data Pages.....	9
Projecting a Waypoint.....	3	System Settings.....	9
Deleting a Waypoint.....	3	About UltraTrac.....	9
Deleting All Waypoints.....	3	Compass Settings.....	9
Routes.....	3	Setting the North Reference.....	10
Creating a Route.....	3	Altimeter Settings.....	10
Editing the Name of a Route.....	3	Setting the Device Tones.....	10
Editing a Route.....	4	Display Settings.....	10
Viewing a Route on the Map.....	4	Map Settings.....	10
Deleting a Route.....	4	Track Settings.....	10
Reversing a Route.....	4	Time Settings.....	10
Tracks.....	4	Changing the Units of Measure.....	10
Recording a Track.....	4	Position Format Settings.....	10
Saving the Current Track.....	4	Fitness Settings.....	10
Viewing Details about the Track.....	4	Setting Your Fitness User Profile.....	11
Clearing the Current Track.....	4	About Lifetime Athletes.....	11
Deleting a Track.....	4	Geocache Settings.....	11
Sending and Receiving Data Wirelessly.....	4	<b>Fitness</b> .....	<b>11</b>
Garmin Adventures.....	4	Customizing Your Running or Cycling Profile.....	11
<b>Navigation</b> .....	<b>4</b>	Going for a Run.....	11
Navigating to a Destination.....	4	History.....	11
Navigating with Sight 'N Go.....	5	Viewing an Activity.....	11
Compass.....	5	Saving an Activity as a Track.....	11
Calibrating the Compass.....	5	Deleting an Activity.....	11
Map.....	5	Using Garmin Connect.....	11
Browsing the Map.....	5	<b>ANT+ Sensors</b> .....	<b>11</b>
Navigating Using TracBack®.....	5	Pairing Your ANT+ Sensors.....	11
Altimeter and Barometer.....	5	tempe.....	12
Calibrating the Barometric Altimeter.....	5	Putting On the Heart Rate Monitor.....	12
Tracking Weather Changes Overnight.....	6	About Heart Rate Zones.....	12
Marking and Starting Navigation to a Man Overboard Location.....	6	Fitness Goals.....	12
<b>Geocaches</b> .....	<b>6</b>	Setting Your Heart Rate Zones.....	12
Downloading Geocaches.....	6	Tips for Erratic Heart Rate Data.....	12
Navigating to a Geocache.....	6	Foot Pod.....	12
Logging the Attempt.....	6	Setting the Foot Pod Mode.....	12
chirp™.....	6	Going for a Run Using a Foot Pod.....	12
Finding a Geocache with a chirp.....	6	Foot Pod Calibration.....	13
<b>Applications</b> .....	<b>6</b>	Calibrating Your Foot Pod by Distance.....	13
Jumpmaster.....	6	Calibrating Your Foot Pod by GPS.....	13
Planning a Jump.....	6	Calibrating Your Foot Pod Manually.....	13
Jump Types.....	6	Using an Optional Bike Cadence Sensor.....	13
Entering Jump Information.....	7	<b>Device Information</b> .....	<b>13</b>
Entering Wind Information for HAHO and HALO Jumps.....	7	Viewing Device Information.....	13
Entering Wind Information for a Static Jump.....	7	Updating the Software.....	13
Constant Settings.....	7		
Viewing Tide Information.....	7		
Clock.....	7		
Setting the Alarm.....	7		
Starting the Countdown Timer.....	8		
Using the Stopwatch.....	8		
Adding a Custom Time Zone.....	8		
Editing a Custom Time Zone.....	8		
Alerts.....	8		
Setting a Proximity Alarm.....	8		
Calculating the Size of an Area.....	8		
Viewing the Almanacs.....	8		
Viewing Satellite Information.....	8		
Simulating a Location.....	8		

Device Care .....	13
Cleaning the Device .....	13
Specifications .....	13
Heart Rate Monitor Specifications .....	13
Battery Information .....	13
Heart Rate Monitor Battery .....	14
Replacing the Heart Rate Monitor Battery .....	14
Caring for the Heart Rate Monitor .....	14
Data Management .....	14
File Types .....	14
Disconnecting the USB Cable .....	14
Deleting Files .....	14
Troubleshooting .....	14
Locking the Keys .....	14
Resetting Your Device .....	14
Resetting the Device to Factory Settings .....	14
Clearing All Sensor Plot Data .....	14
Getting More Information .....	14
<b>Appendix .....</b>	<b>15</b>
Data Fields .....	15
Registering Your Device .....	16
Software License Agreement .....	16
Altimeter and Barometric Readings .....	16
Heart Rate Zone Calculations .....	17
<b>Index .....</b>	<b>18</b>

# Introduction

## ⚠ WARNING

Always consult your physician before you begin or modify any exercise program.

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

## Getting Started

When using your device the first time, you should complete these tasks to set up the device and get to know the basic features.

- 1 Charge the device (*Charging the Device*, page 1).
- 2 Register the device (*Registering Your Device*, page 16).
- 3 Learn about the sensor data and modes (*Viewing the Sensor Data*, page 1).
- 4 Acquire satellites (*Recording a Track*, page 4).
- 5 Create a waypoint (*Creating a Waypoint*, page 3).

## Charging the Device

### NOTICE

To prevent corrosion, thoroughly dry the contacts and the surrounding area before charging or connecting to a computer.

The device is powered by a built-in lithium-ion battery that you can charge using a standard wall outlet or a USB port on your computer.

- 1 Plug the USB end of the cable into the AC adapter or a computer USB port.
- 2 Plug the AC adapter into a standard wall outlet.
- 3 Align the left side of the charging cradle ① with the groove on the left side of the device.



- 4 Align the hinged side of the charger ② with the contacts on the back of the device.  
When you connect the device to a power source, the device turns on.
- 5 Charge the device completely.

## Keys



① 💡	Select to turn the backlight on and off. Hold to turn the device on and off.
② △	Select to scroll through the data pages, options, and settings.
③ ▽	Select to scroll through the data pages, options, and settings.
④ ↶	Select to return to the previous screen. Hold to view the status page.
⑤ Action key	Select to open the menu for the current screen. Select to choose an option and to acknowledge a message. Hold to mark a waypoint.

## Viewing the Status Page

You can quickly switch to this page to view the time of day, battery life, and GPS status information from any other page.

Hold ↶.



## Sensors

### Viewing the Sensor Data

You can quickly access real-time data for the compass, altimeter, barometer, temperature sensors, and Zulu time.

**NOTE:** These data pages automatically time out to low-power mode.

**NOTE:** This data is not recorded to the device (*Acquiring Satellite Signals and Recording a Track*, page 2).

- 1 From the time of day page, select △ or ▽.




- 2 Select ▽.



3 Select ▾.



4 Select ▾.

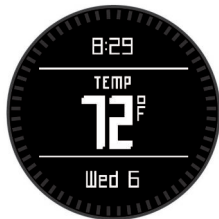

**NOTE:** Your body temperature affects the temperature sensor. To get the most accurate temperature reading, remove the device from your wrist and wait 20–30 minutes.

**TIP:** To purchase a *temp<sup>™</sup>* wireless temperature sensor, go to [www.garmin.com](http://www.garmin.com).

5 Select ▾.



### Turning on a Sensor Mode

The default sensor mode is on demand mode, which offers you quick access to compass, altimeter, barometer, or temperature data. You can also put the device in always on mode to display continuous sensor data.

**NOTE:** If you have an optional heart rate monitor or speed and cadence sensor paired with the device, your device can display continuous heart rate or speed and cadence data.

- 1 Select the action key.
- 2 Select **Setup > Sensors > Mode > Always On**.

### Acquiring Satellite Signals and Recording a Track

Before you can use the GPS navigation features, such as recording a track, you must acquire satellite signals.

The time and date are set automatically based on the GPS position.

- 1 Select the action key.
- 2 Select **Start GPS**.
- 3 Go to an area with a clear view of the sky and remain stationary while the device acquires satellite signals.

- 4 Walk around or travel to record a track.  
Your distance and time appear.
- 5 Select ▾ to view the loop of data pages.
- 6 Hold ↶.
- 7 Select an option:
  - Select **Pause Track** to pause tracking.
  - Select **Save Track** to save your track.
  - Select **Clear Track** to erase the track without saving.
  - Select **Stop GPS** to turn off GPS without deleting your track.

### Stopping GPS

- 1 Select the action key.
- 2 Select **Stop GPS**.

### Sending a Track to BaseCamp™

Before you can send data to BaseCamp, you must download BaseCamp to your computer ([www.garmin.com/basecamp](http://www.garmin.com/basecamp)).

You can view your tracks and waypoints on your computer.

- 1 Connect your device to your computer using the USB cable.  
Your device appears as a removable drive in My Computer on Windows® computers and as a mounted volume on Mac® computers.
- 2 Start BaseCamp.
- 3 Follow the on-screen instructions.

### Profiles

Profiles are a collection of settings that optimize your device based on how you are using it. For example, the settings and views are different when you are using the device when hiking than when mountain biking.

When you are using a profile and you change settings such as data fields or units of measurement, the changes are saved automatically as part of the profile.

### Changing Profiles

When you change activities, you can quickly change the setup of the device to suit the activity by changing the profile.

- 1 Select the action key.
- 2 Select **Profiles**.
- 3 Select a profile.

The profile you selected is now the active profile. Any changes you make are saved to the active profile.

### Creating a Custom Profile

You can customize your settings and data fields for a particular activity or trip.

- 1 Select the action key.
- 2 Select **Setup > Profiles**.
- 3 Select an option:
  - Select a profile.
  - Select **Create New**, and select the new profile.

The profile you selected is now the active profile. The previous profile was saved.

- 4 If necessary, select **Edit**, and edit the name of the profile.
- 5 Customize your settings (*Customizing Your Device*, page 9) and data fields for the active profile.  
Any changes you make are saved to the active profile.

### Deleting a Profile

- 1 Select the action key.
- 2 Select **Setup > Profiles**.

- 3 Select a profile.
- 4 Select **Delete** > **Yes**.

## Waypoints, Routes, and Tracks

### Waypoints

Waypoints are locations you record and store in the device.

#### Creating a Waypoint

You can save your current location as a waypoint.

- 1 Hold the action key.
- 2 Select an option:
  - To save the waypoint without changes, select **Save**.
  - To make changes to the waypoint, select **Edit**, make changes to the waypoint, and select **Save**.

#### Finding a Waypoint by Name

- 1 Select the action key.
- 2 Select **Waypoints** > **Spell Search**.
- 3 Select the action key,  $\Delta$ , and  $\nabla$  to enter characters.
- 4 Select **\_** > **Done**.
- 5 Select the waypoint.

#### Finding Nearby Locations

- 1 Select the action key.
- 2 Select **Waypoints** > **Search Near**.
- 3 Select an option:
  - Select **Waypoints** to search near a waypoint.
  - Select **Cities** to search near a city.
  - Select **Current Loc** to search near your current location.

#### Navigating to a Waypoint

- 1 Select the action key.
- 2 Select **Start GPS**.
- 3 Wait while the device locates satellites.
- 4 Select the action key.
- 5 Select **Waypoints**, and select a waypoint from the list.
- 6 Select **Go**.



The device displays time to destination ①, distance to destination ②, and estimated time of arrival ③.

- 7 Select  $\nabla$  to view the compass page.



The two pointer marks ④ serve as a bearing pointer. The top mark on the device points in the direction you are facing.

- 8 Align the pointer marks with the top mark on the device.
- 9 Continue in that direction until you reach the destination.

### Editing a Waypoint

Before you can edit a waypoint, you must create a waypoint.

- 1 Select the action key.
- 2 Select **Waypoints**.
- 3 Select a waypoint.
- 4 Select **Edit**.
- 5 Select an item to edit, such as the name.
- 6 Select the action key,  $\Delta$ , and  $\nabla$  to enter characters.
- 7 Select **\_** > **Done**.

### Increasing the Accuracy of a Waypoint Location

You can refine a waypoint location for more accuracy. When averaging, the device takes several readings at the same location and uses the average value to provide more accuracy.

- 1 Select the action key.
- 2 Select **Waypoints**.
- 3 Select a waypoint.
- 4 Select **Average**.
- 5 Move to the waypoint location.
- 6 Select **Start**.
- 7 Follow the on-screen instructions.
- 8 When the confidence reaches 100%, select **Save**.

For best results, collect four to eight samples for the waypoint, waiting at least 90 minutes between samples.

### Projecting a Waypoint

You can create a new location by projecting the distance and bearing from a marked location to a new location.

- 1 Select the action key.
- 2 Select **Waypoints**.
- 3 Select a waypoint.
- 4 Select **Project**.
- 5 Follow the on-screen instructions.

The projected waypoint is saved with a default name.

### Deleting a Waypoint

- 1 Select the action key.
- 2 Select **Waypoints**.
- 3 Select a waypoint.
- 4 Select **Delete** > **Yes**.

### Deleting All Waypoints

- 1 Select the action key.
- 2 Select **Setup** > **Reset** > **Waypoints** > **Yes**.

### Routes

A route is a sequence of waypoints or locations that leads you to your final destination.

#### Creating a Route

- 1 Select the action key.
- 2 Select **Routes** > **Create New**.
- 3 Select **First Point**.
- 4 Select a category.
- 5 Select the first point on the route.
- 6 Select **Next Point**.
- 7 Repeat steps 4–6 until the route is complete.
- 8 Select **Done** to save the route.

#### Editing the Name of a Route

- 1 Select the action key.

- 2 Select **Routes**.
- 3 Select a route.
- 4 Select **Rename**.
- 5 Select the action key,  $\Delta$ , and  $\nabla$  to enter characters.
- 6 Select **\_ > Done**.

### Editing a Route

- 1 Select the action key.
- 2 Select **Routes**.
- 3 Select a route.
- 4 Select **Edit**.
- 5 Select a point.
- 6 Select an option:
  - To view the point on the map, select **Map**.
  - To change the order of the point on the route, select **Move Up** or **Move Down**.
  - To insert an additional point on the route, select **Insert**.  
The additional point is inserted before the point you are editing.
  - To add a point to the end of the route, select **Next Point**.
  - To remove the point from the route, select **Remove**.

### Viewing a Route on the Map

- 1 Select the action key.
- 2 Select **Routes**.
- 3 Select a route.
- 4 Select **View Map**.

### Deleting a Route

- 1 Select the action key.
- 2 Select **Routes**.
- 3 Select a route.
- 4 Select **Delete > Yes**.

### Reversing a Route

- 1 Select the action key.
- 2 Select **Routes**.
- 3 Select a route.
- 4 Select **Reverse**.

## Tracks

A track is a recording of your path. The track log contains information about points along the recorded path, including time, location, and elevation for each point.

### Recording a Track

- 1 Select the action key.
- 2 Select **Start GPS**.
- 3 Wait while the device locates satellites.
- 4 Walk around to record a track.  
Your distance and time appear.
- 5 Select  $\nabla$  to view the loop of data pages including compass data, altimeter data, ascent and speed, the map, and the time of day page.

You can customize the data pages (*Customizing the Data Pages*, page 9).

- 6 Hold  $\leftarrow$ .
- 7 Select an option:
  - Select **Pause Track** to pause tracking.
  - Select **Save Track** to save your track.
  - Select **Clear Track** to erase the track without saving.

- Select **Stop GPS** to turn off GPS without deleting your track.

### Saving the Current Track

- 1 Select the action key.
- 2 Select **Tracks > Current**.
- 3 Select an option:
  - To save the entire track, select **Save**.
  - To save part of the track, select **Save Part**, and select the part to save.

### Viewing Details about the Track

- 1 Select the action key.
- 2 Select **Tracks**.
- 3 Select a track.
- 4 Select **View Map**.  
The beginning and the end of the track are marked by flags.
- 5 Select  $\leftarrow$  > **Details**.
- 6 Use  $\Delta$  and  $\nabla$  to view information about the track.

### Clearing the Current Track

- 1 Select the action key.
- 2 Select **Tracks > Current > Clear**.

### Deleting a Track

- 1 Select the action key.
- 2 Select **Tracks**.
- 3 Select a track.
- 4 Select **Delete > Yes**.

## Sending and Receiving Data Wirelessly

Before you can share data wirelessly, you must be within 10 feet (3 m) of a compatible Garmin® device.

Your device can send or receive data when connected to another compatible device. You can share waypoints, geocaches, routes, and tracks wirelessly.

- 1 Select the action key.
- 2 Select **Share Data > Unit to Unit**.
- 3 Select **Send** or **Receive**.
- 4 Follow the on-screen instructions.

## Garmin Adventures

You can create adventures to share your journeys with family, friends, and the Garmin community. Group related items together as an adventure. For example, you can create an adventure for your latest hiking trip. The adventure could contain the track log of the trip, photos of the trip, and geocaches you hunted. You can use BaseCamp to create and manage your adventures. For more information, go to <http://adventures.garmin.com>.

## Navigation

You can navigate to a route, track, waypoint, geocache, or any saved location in the device. You can use the map or the compass to navigate to your destination.

### Navigating to a Destination

You can navigate to a destination using the compass or map (*Map*, page 5).

- 1 Select the action key.
- 2 Select **Start GPS**.
- 3 Wait while the device locates satellites.



- 4 Select the action key.
- 5 Select an option:
  - Select **Waypoints**.
  - Select **Tracks**.
  - Select **Routes**.
  - Select **GPS Tools** > **Coordinates**.
  - Select **GPS Tools** > **POIs**.
  - Select **GPS Tools** > **Geocaches**.
- 6 Select a destination.
- 7 Select **Go**.



The device displays time to destination ①, distance to destination ②, and estimated time of arrival ③.

- 8 Select  $\nabla$  to view the compass page.



The two pointer marks ④ serve as a bearing pointer. The top mark on the device points in the direction you are facing.

- 9 Align the pointer marks with the top mark.
- 10 Continue in that direction until you reach the destination.

## Navigating with Sight 'N Go

You can point the device at an object in the distance, such as a water tower, lock in the direction, and then navigate to the object.

- 1 Select the action key.
- 2 Select **GPS Tools** > **Sight 'N Go**.
- 3 Point the top mark on the bezel at an object.
- 4 Select the action key.
- 5 Select an option:
  - Select **Set Course** to navigate to the distant object.
  - Select **Project** (*Projecting a Waypoint*, page 3).
- 6 Navigate using the compass (*Compass*, page 5) or map (*Map*, page 5).

## Compass

The device has a 3-axis compass with automatic calibration.

- Compass navigation (*Navigating to a Waypoint*, page 3)
- Compass settings (*Compass Settings*, page 9)

## Calibrating the Compass

### NOTICE

Calibrate the electronic compass outdoors. To improve heading accuracy, do not stand near objects that influence magnetic fields, such as vehicles, buildings, and overhead power lines.

Your device was already calibrated at the factory, and the device uses automatic calibration by default. If you experience

irregular compass behavior, for example, after moving long distances or after extreme temperature changes, you can manually calibrate the compass.

- 1 Select the action key.
- 2 Select **Setup** > **Sensors** > **Compass** > **Calibrate** > **Start**.
- 3 Follow the on-screen instructions.

## Map

$\blacktriangle$  represents your location on the map. As you travel, the icon moves and leaves a track log (trail). Waypoint names and symbols appear on the map. When you are navigating to a destination, your route is marked with a line on the map.

- Map navigation (*Browsing the Map*, page 5)
- Map settings (*Map Settings*, page 10)


## Browsing the Map

- 1 While navigating, select  $\triangle$  to view the map.
- 2 Select the action key.
- 3 Select an option:
  - To pan up or down, select **Pan**, and select  $\triangle$  or  $\nabla$ .
  - To pan right or left, select **Pan** >  $\curvearrowright$ , and select  $\triangle$  or  $\nabla$ .
  - To navigate to a saved location, select **Pan**, select the action key, and select **Select Pt.**
  - To zoom in or out, select **Zoom**, and select  $\triangle$  or  $\nabla$ .

## Navigating Using TracBack®

While navigating, you can navigate back to the beginning of your track. This can be helpful when finding your way back to camp or the trail head.

- 1 Select the action key.
- 2 Select **Tracks** > **Current** > **TracBack**.

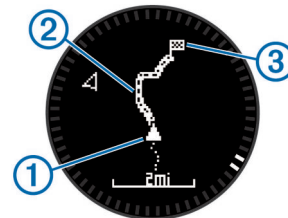

Your current location ①, track to follow ②, and end point ③ appear on the map.

## Altimeter and Barometer

The device contains an internal altimeter and barometer.

- On Demand sensor data (*Viewing the Sensor Data*, page 1)
- Always On sensor data (*Turning on a Sensor Mode*, page 2)
- Altimeter settings (*Altimeter Settings*, page 10)
- Altimeter and barometric readings (*Altimeter and Barometric Readings*, page 16)

## Calibrating the Barometric Altimeter



Your device was already calibrated at the factory, and the device uses automatic calibration at your GPS starting point by default. You can manually calibrate the barometric altimeter if you know the correct elevation or the correct sea level pressure.

- 1 Select the action key.
- 2 Select **Setup** > **Sensors** > **Altimeter**.
- 3 Select an option:
  - Select **Auto Cal.** > **At Start** to calibrate automatically from your GPS starting point.
  - Select **Auto Cal.** > **Continuous** to calibrate automatically with periodic GPS calibration updates.



- Select **Calibrate** to enter the current elevation or sea-level pressure.

### Tracking Weather Changes Overnight

You can use your device to track changes in barometric pressure over time. Increases in barometric pressure usually indicate good weather, and decreases in barometric pressure usually indicate bad weather.

- 1 Select the action key.
- 2 Select **Setup > Sensors > Mode > Always On**.
- 3 Select  repeatedly to return to the time of day page.
- 4 Select  repeatedly until the barometric data page appears.  
The current barometric pressure appears in large numbers, and the range of previous readings for the graph shown appears in small numbers at the bottom of the page.
- 5 Compare the current reading with earlier readings to see if the barometric pressure is increasing or decreasing.

### Marking and Starting Navigation to a Man Overboard Location

You can save a man overboard (MOB) location, and automatically start navigation back to it. You can customize the hold function of the  or  key to access the MOB function quickly (*Customizing the Arrow Keys*, page 9).

- 1 Select the action key.
- 2 Select **GPS Tools > MOB > Start**.  
The map page opens showing the route to the MOB location.
- 3 Navigate using the compass (*Compass*, page 5) or map (*Map*, page 5).

## Geocaches

A geocache is like a hidden treasure. Geocaching is when you hunt for hidden treasures using GPS coordinates posted online by those hiding the geocache.

### Downloading Geocaches

- 1 Connect your device to a computer using the USB cable.
- 2 Go to [www.opencaching.com](http://www.opencaching.com).
- 3 If necessary, create an account.
- 4 Sign in.
- 5 Follow the on-screen instructions to find and download geocaches to your device.

### Navigating to a Geocache

Before you can navigate to a geocache, you must go to [www.opencaching.com](http://www.opencaching.com), and download a geocache to your device.

Navigating to a geocache is like navigating to any other location.

- See the navigation section (*Navigating to a Destination*, page 4) for more information.
- Go to the profiles section (*Creating a Custom Profile*, page 2) to create a profile for geocaching.
- Go to the geocache settings (*Geocache Settings*, page 11) to customize your device settings.
- Go to the data pages section (*Customizing the Data Pages*, page 9) to customize your data fields.

### Logging the Attempt

After you have attempted to find a geocache, you can log your results.

- 1 Select the action key.
- 2 Select **GPS Tools > Geocaches > Log Attempt**.


- 3 Select **Found, Did Not Find, or Unattempted**.

- 4 Select an option:
  - To begin navigation to a geocache nearest you, select **Find Next**.
  - To end the logging, select **Done**.

### chirp™

A chirp is a small Garmin accessory that is programmed and left in a geocache. You can use your device to find a chirp in a geocache. For more information about the chirp, see the *chirp Owner's Manual* at [www.garmin.com](http://www.garmin.com).

### Finding a Geocache with a chirp

- 1 Select the action key.
- 2 Select **Setup > Geocaches > chirp > On**.
- 3 Hold .
- 4 Select **Start GPS**.
- 5 Wait while the device locates satellites.
- 6 Select the action key.
- 7 Select **GPS Tools > Geocaches**.
- 8 Select a geocache, and select **chirp** to show chirp details while you are navigating.
- 9 Select **Go**, and navigate to the geocache (*Navigating to a Waypoint*, page 3).

When you are within 32.9 ft. (10 m) of the geocache that contains a chirp, a message appears.

## Applications

### Jumpmaster

The jumpmaster feature is designed for experienced skydivers, particularly those in the military.

The jumpmaster feature follows military guidelines for calculating the high altitude release point (HARP). The device detects automatically when you have jumped to begin navigating toward the desired impact point (DIP) using the barometer and electronic compass.

### Planning a Jump

#### WARNING

Jumpmaster is for use by experienced skydivers only. Jumpmaster should not be used as a primary skydiving altimeter. Failure to input the appropriate jump related information into Jumpmaster can lead to serious personal injury or death.

- 1 Select a jump type (*Jump Types*, page 6).
- 2 Enter the jump information (*Entering Jump Information*, page 7).  
The device calculates the HARP.
- 3 Select **GOTO HARP** to start navigation to the HARP.

### Jump Types

The jumpmaster feature allows you to set the jump type to one of three types: HAHO, HALO, or Static. The jump type selected determines what additional setup information is required (*Entering Jump Information*, page 7). For all jump types, drop altitudes and opening altitudes are measured in feet above ground level (AGL).

**HAHO:** High Altitude High Opening. The jumpmaster jumps from a very high altitude and opens the parachute at a high altitude. You must set a DIP and a drop altitude of at least 1,000 feet. The drop altitude is assumed to be the same as

the opening altitude. Common values for a drop altitude range from 12,000 to 24,000 feet AGL.

**HALO:** High Altitude Low Opening. The jumpmaster jumps from a very high altitude and opens the parachute at a low altitude. The required information is the same as the HAHO jump type, plus an opening altitude. The opening altitude must not be greater than the drop altitude. Common values for an opening altitude range from 2,000 to 6,000 feet AGL.

**Static:** The wind speed and direction are assumed to be constant for the duration of the jump. The drop altitude must be at least 1,000 feet.

## Entering Jump Information

- 1 Select the action key.
- 2 Select **Jumpmaster**.
- 3 Select a jump type (*Jump Types, page 6*).
- 4 Complete one or more actions to enter your jump information:
  - Select **DIP** to set a waypoint for the desired landing location.
  - Select **Drop Alt** to set the drop altitude AGL (in feet) when the jumpmaster exits the aircraft.
  - Select **Open Alt** to set the open altitude AGL (in feet) when the jumpmaster opens the parachute.
  - Select **FWD Throw** to set the horizontal distance traveled (in meters) due to aircraft speed.
  - Select **Crs to HARP** to set the direction traveled (in degrees) due to aircraft speed.
  - Select **Wind** to set the wind speed (in knots) and direction (in degrees).
  - Select **Constant** to fine-tune some information for the planned jump. Depending on the jump type, you can select **Percent Max**, **Safety Fctr**, **K-Open**, **K-Freefall**, or **K-Static** and enter additional information (*Constant Settings, page 7*).
  - Select **Auto to DIP** to enable navigation to the DIP automatically after you jump.
  - Select **GOTO HARP** to start navigation to the HARP.

## Entering Wind Information for HAHO and HALO Jumps

- 1 Select the action key.
- 2 Select **Jumpmaster**.
- 3 Select a jump type (*Jump Types, page 6*).
- 4 Select **Wind > Add**.
- 5 Select an altitude.
- 6 Enter a wind speed in knots and select **Done**.
- 7 Enter a wind direction in degrees and select **Done**.  
The wind value is added to the list. Only wind values included in the list are used in calculations.
- 8 Repeat steps 5–7 for each available altitude.

## Resetting Wind Information

- 1 Select the action key.
  - 2 Select **Jumpmaster**.
  - 3 Select **HAHO** or **HALO**.
  - 4 Select **Wind > Reset**.
- All wind values are removed from the list.

## Entering Wind Information for a Static Jump

- 1 Select the action key.
- 2 Select **Jumpmaster > Static > Wind**.
- 3 Enter a wind speed in knots and select **Done**.
- 4 Enter a wind direction in degrees and select **Done**.

## Constant Settings

Select **Jumpmaster**, select a jump type, and select **Constant**.

**Percent Max:** Sets the jump range for all jump types. A setting less than 100% decreases the drift distance to the DIP, and a setting greater than 100% increases the drift distance. More experienced jumpmasters may want to use smaller numbers, and less experienced skydivers may want to use larger numbers.

**Safety Fctr:** Sets the margin of error for a jump (HAHO only). Safety factors are usually integer values of two or greater, and are determined by the jumpmaster based on specifications for the jump.

**K-Freefall:** Sets the wind drag value for a parachute during freefall, based on the parachute canopy rating (HALO only). Each parachute should be labeled with a K value.

**K-Open:** Sets the wind drag value for an open parachute, based on the parachute canopy rating (HAHO and HALO). Each parachute should be labeled with a K value.

**K-Static:** Sets the wind drag value for a parachute during a static jump, based on the parachute canopy rating (Static only). Each parachute should be labeled with a K value.

## Viewing Tide Information


**NOTE:** This feature is not available in all areas.

You can view information about a tide station, including the tide height and when the next high and low tides will occur.

- 1 Select the action key.
- 2 Select **Tides > Search Near**.
- 3 Select an option:
  - To search near a previously saved waypoint, select **Waypoints**, and select or search for a waypoint.
  - To search near a specific city, select **Cities**, and select or search for a city.

A list of the tide stations near the selected location appears.

- 4 Select a station.  
A 24-hour tide chart appears for the current date, showing the current tide height ① and when the next high ② and low tides ③ will occur.

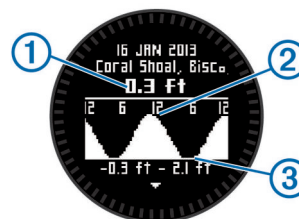

- 5 Select an option:
  - To view more detailed information about the next four tide peaks and troughs, select ▾.
  - To pan the tide chart, select the action key, and select **Pan Chart**.
  - To view tide information for a different date, select the action key, select **Change Date**, and select the date.

## Clock

### Setting the Alarm

- 1 Select the action key.
- 2 Select **Clock > Alarm Clock > Add Alarm**.
- 3 Select the action key, **△**, and **▽** to set the time.
- 4 Select **Tone**, **Vibration**, or **Tone & Vib.**.
- 5 Select **Once**, **Daily**, or **Weekdays**.

## Starting the Countdown Timer

- 1 Select the action key.
- 2 Select **Clock > Timer**.
- 3 Select the action key,  $\Delta$ , and  $\nabla$  to set the time.
- 4 If necessary, select **Notification**, and select a type of notification.
- 5 Select **Start**.

## Using the Stopwatch

- 1 Select the action key.
- 2 Select **Clock > Stopwatch**.
- 3 Select **Start**.

## Adding a Custom Time Zone

- 1 Select the action key.
- 2 Select **Clock > Alt. Zones > Add Zone**.
- 3 Select a time zone.

The custom time zone page is added to the current profile.

## Editing a Custom Time Zone

- 1 Select the action key.
- 2 Select **Clock > Alt. Zones**.
- 3 Select a time zone.
- 4 Select an option:
  - To change the time zone, select **Edit Zone**.
  - To customize the name of the time zone, select **Edit Label**.
  - To delete the time zone from the quick page loop, select **Delete > Yes**.

## Alerts

You can set the device to alert you in many different situations where your awareness of the surrounding conditions or other data is important. There are three types of alerts: event alerts, range alerts, and recurring alerts.

**Event alert:** An event alert notifies you once. The event is a specific value. For example, you can set the device to alert you when you reach a specified elevation.

**Range alert:** A range alert notifies you any time the device is above or below a specified range of values. For example, you can set the device to alert you when your heart rate is below 60 beats per minute (bpm) and over 210 bpm.

**Recurring alert:** A recurring alert notifies you every time the device records a specified value or interval. For example, you can set the device to alert you every 30 minutes.

Alert Name	Alert Type	Description
Proximity	Recurring	See <a href="#">Setting a Proximity Alarm, page 8</a> .
Distance	Event, recurring	You can set an interval or a custom distance from your final destination.
Time	Event, recurring	You can set an interval or a custom time from your estimated time of arrival.
Elevation	Event, range, recurring	You can set minimum and maximum elevation values. You can also set the device to alert you when you ascend or descend a specified amount.
Nav. Arrival	Event	You can set alerts for reaching waypoints and the final destination of a track or route.
Speed	Range	You can set minimum and maximum speed values.
Pace	Range	You can set minimum and maximum pace values.
Heart Rate	Range	You can set minimum and maximum heart rate values or select zone changes. See <a href="#">About Heart Rate Zones, page 12</a> and <a href="#">Heart Rate Zone Calculations, page 17</a> .

Alert Name	Alert Type	Description
Cadence	Range	You can set minimum and maximum cadence values.
Battery	Event	You can set a low battery power alert.

## Setting a Proximity Alarm

Proximity alarms alert you when you are within a specified range of a particular location.

- 1 Select the action key.
- 2 Select **Alerts > Proximity > Edit > Create New**.
- 3 Select a location.
- 4 Enter a radius.
- 5 Select **Done**.

## Calculating the Size of an Area

Before you can calculate the size of an area, you must acquire satellites.

- 1 Select the action key.
- 2 Select **GPS Tools > Area Calc..**
- 3 Walk around the perimeter of the area.
- 4 When you are finished, select the action key to calculate the area.
- 5 Select an option:
  - Select **Save Track**, enter a name, and select **Done**.
  - Select **Change Units** to convert the area to a different unit.
  - Select  $\curvearrowright$  to exit without saving.

## Viewing the Almanacs

You can view almanac information for the sun and moon, and hunting and fishing.

- 1 Select the action key.
- 2 Select an option:
  - To view the sunrise, sunset, moonrise, and moonset information, select **GPS Tools > Sun & Moon**.
  - To view the predicted best times for hunting and fishing, select **GPS Tools > Hunt & Fish**.
- 3 If necessary, select  $\Delta$  or  $\nabla$  to view a different day.

## Viewing Satellite Information

The satellite page shows your current location, GPS accuracy, satellite locations, and signal strength.

- 1 Select the action key.
- 2 Select **Start GPS**.
- 3 Select the action key.
- 4 Select **GPS Tools > Satellite**.
- 5 Select  $\nabla$  to view additional information.

## Simulating a Location

When you are planning routes or activities in a different area, you can turn off GPS and simulate a different location.

- 1 Select the action key.
- 2 Select **Setup > System > GPS Mode > Demo Mode**.
- 3 Select a location.
- 4 Select **Go > Move to Location**.

# Customizing Your Device

## Setup Overview

The Setup menu contains numerous ways to customize your device. Garmin recommends that you familiarize yourself with the settings for each feature. If you customize your settings before your activity, you will spend less time adjusting the watch during your activity. To open the Setup menu, select the action key, and select Setup.

**NOTE:** All changes you make are saved to the active profile (*Changing Profiles, page 2*).

Setup Item	Available Settings and Information
System	You can customize GPS settings, arrow keys, and the device language ( <i>System Settings, page 9</i> ).
Data Pages	You can customize data pages and data fields ( <i>Customizing the Data Pages, page 9</i> ).
Sensors	You can customize the compass ( <i>Compass Settings, page 9</i> ) and altimeter ( <i>Altimeter Settings, page 10</i> ) settings.
ANT Sensor	You can set up wireless accessories such as the heart rate monitor or tempe ( <i>ANT+ Sensors, page 11</i> ).
Tones	You can customize the tones and vibrations ( <i>Setting the Device Tones, page 10</i> ).
Display	You can adjust the backlight and screen contrast ( <i>Display Settings, page 10</i> ).
Reset	You can clear the trip data, sensor plots ( <i>Clearing All Sensor Plot Data, page 14</i> ), waypoints, or track log, or you can reset all of your settings ( <i>Resetting the Device to Factory Settings, page 14</i> ).
Map	You can customize the map orientation and how items appear on the map ( <i>Map Settings, page 10</i> ).
Tracks	You can customize the track recording settings ( <i>Track Settings, page 10</i> ).
Time	You can customize the appearance of the time page ( <i>Time Settings, page 10</i> ).
Units	You can change the units of measure for data such as distance, elevation, and temperature ( <i>Changing the Units of Measure, page 10</i> ).
Pos. Format	You can change how your position data appears ( <i>Position Format Settings, page 10</i> ).
Profiles	You can change the active profile and edit your profiles ( <i>Profiles, page 2</i> ).
Fitness	You can turn on Auto Lap, customize your fitness user profile, and edit your heart rate zones ( <i>Fitness Settings, page 10</i> ).
Geocaches	You can customize how your geocaches are listed and activate chirp ( <i>Geocache Settings, page 11</i> ).
Menu	You can customize the items that appear in the main menu ( <i>Customizing the Main Menu, page 9</i> ).
About	You can view information about the device and software ( <i>Viewing Device Information, page 13</i> ).

## Customizing the Main Menu

You can move or delete items in the main menu.

- 1 Select the action key.
- 2 Select **Setup > Menu**.
- 3 Select a menu item.
- 4 Select an option:
  - Select **Move Up** or **Move Down** to change the location of the item in the list.
  - Select **Remove** to delete an item from the list.

## Customizing the Arrow Keys

You can customize the hold function of  $\Delta$  and  $\nabla$  and  $\leftrightarrow$  for your activity. For example, if the hiking profile is active, you can customize the hold  $\nabla$  function to start and stop the timer.

- 1 Select the action key.
- 2 Select **Setup > System > Hot Keys**.
- 3 Select an option:
  - Select **Hold Up** to set the function performed when you hold  $\Delta$ .
  - Select **Hold Down** to set the function performed when you hold  $\nabla$ .
  - Select **Data Page Back** to set the function performed when you select  $\leftrightarrow$ .
  - Select **Data Page Up** to set the function performed when you select  $\Delta$ .
  - Select **Data Page Down** to set the function performed when you select  $\nabla$ .

**NOTE:** The available options depend on the current profile.

## Customizing the Data Pages

You can customize the data pages for each profile. The organization and appearance of data pages depends on the active profile and the mode.

- 1 Select the action key.
- 2 Select **Setup > Data Pages**.
- 3 Select a mode.
- 4 Select **Add Page** and follow the on-screen instructions to add a new page (optional).
- 5 Select a page to edit data fields.
- 6 Select an option:
  - Select **Edit**, and change the data fields.
  - Select **Move Up** or **Move Down** to change the order of the data pages.
  - Select **Delete** to remove the data page from the page loop.

## System Settings

Select **Setup > System**.

**GPS Mode:** Sets the GPS to Normal, UltraTrac (*About UltraTrac, page 9*), Indoor, or Demo Mode (GPS off).

**WAAS:** Sets the device to use Wide Area Augmentation System (WAAS) GPS signals. For information about WAAS, go to [www.garmin.com/aboutGPS/waas.html](http://www.garmin.com/aboutGPS/waas.html).

**Hot Keys:** Allows you to customize the hold function of the arrow keys (*Customizing the Arrow Keys, page 9*).

**Language:** Sets the text language on the device.

**NOTE:** Changing the text language does not change the language of user-entered data or map data.

## About UltraTrac

UltraTrac is a GPS setting that records track points less frequently than normal GPS mode in order to save battery. The default interval between track points is one point per minute. You can adjust the interval.

## Compass Settings

Select **Setup > Sensors > Compass**.

**Display:** Sets the directional heading on the compass to degrees or milli-radians.

**North Ref.:** Sets the north reference of the compass (*Setting the North Reference, page 10*).

**Mode:** Sets the compass to use either a combination of GPS and the electronic sensor data when moving (Auto) or GPS data only (Off).

**Calibrate:** Allows you to manually calibrate the compass sensor (*Calibrating the Compass, page 5*).

## Setting the North Reference

You can set the directional reference used in calculating heading information.

- 1 Select the action key.
- 2 Select **Setup > Sensors > Compass > North Ref.**
- 3 Select an option:
  - To set geographic north as the heading reference, select **True**.
  - To set the magnetic declination for your location automatically, select **Magnetic**.
  - To set grid north (000°) as the heading reference, select **Grid**.
  - To set the magnetic variation value manually, select **User**, enter the magnetic variance, and select **Done**.

## Altimeter Settings

Select **Setup > Sensors > Altimeter**.

**Auto Cal.:** Allows the altimeter to self-calibrate each time you turn on GPS tracking.

**Baro. Plot:** Variable records changes in elevation while you are moving. Fixed assumes the device is stationary at a fixed elevation. Therefore, the barometric pressure should only change due to weather. **Amb. Press.** records ambient pressure changes over a period of time.

**Elev. Plot:** Sets the device to record elevation changes over a period of time or distance.

## Setting the Device Tones

You can customize tones for messages and keys.

- 1 Select the action key.
- 2 Select **Setup > Tones**.
- 3 Select **Messages** or **Keys**.
- 4 Select an option.

## Display Settings

Select **Setup > Display**.

**Backlight:** Adjusts the backlight level and the length of time before the backlight turns off.

**Contrast:** Adjusts the screen contrast.

## Map Settings

Select **Setup > Map**.

**Orientation:** Adjusts how the map is shown on the page. North Up shows North at the top of the page. Track Up shows your current direction of travel toward the top of the page.

**Auto Zoom:** Automatically selects the appropriate zoom level for optimal use on your map. When Off is selected, you must zoom in or out manually.

**Points:** Selects the zoom level for points on the map.

**Track Log:** Allows you to show or hide tracks on the map.

**Go To Line:** Allows you to select how the course appears on the map.

## Track Settings

Select **Setup > Tracks**.

**Method:** Selects a track recording method. Auto records the tracks at a variable rate to create an optimum representation of your tracks. If you select Distance or Time, you can set the interval rate manually.

**Interval:** Allows you to set the track log recording rate. Recording points more frequently creates a more-detailed track, but it fills the track log faster.

**Auto Start:** Sets the device to record your track automatically when you select Start GPS.

**Auto Save:** Sets the device to automatically save your track when you turn off GPS.

**Auto Pause:** Sets the device to stop recording your track when you are not moving.

## Output

**Output:** Sets the device to save the track as a GPX, FIT, or a GPX/FIT file ([File Types, page 14](#)).

- GPX records a traditional track that allows you to perform GPS functions with the track such as navigation and routes.
- FIT records additional information such as lap data and is used to record a track greater than 10,000 points. FIT files can be uploaded to Garmin Connect™ and are much more compact than GPX files.
- GPX/FIT allows you to output both file types.

## Time Settings

Select **Setup > Time**.

**Time Page:** Allows you to customize the appearance of the time of day.

**Format:** Allows you to select a 12-hour or a 24-hour display time.

**Time Zone:** Allows you to select the time zone for the device. You can select Auto to set the time zone automatically based on your GPS position.

## Changing the Units of Measure

You can customize units of measure for distance and speed, elevation, depth, temperature, and pressure.

- 1 Select the action key.
- 2 Select **Setup > Units**.
- 3 Select a measurement type.
- 4 Select a unit of measure.

## Position Format Settings

**NOTE:** Do not change the position format or the map datum coordinate system unless you are using a map or chart that specifies a different position format.

Select **Setup > Pos. Format**.

**Format:** Sets the position format in which a given location reading appears.

**Datum:** Sets the coordinate system on which the map is structured.

**Spheroid:** Shows the coordinate system the device is using. The default coordinate system is WGS 84.

## Fitness Settings

Select **Setup > Fitness**.

**Auto Lap:** Sets the device to automatically mark the lap at a specific distance.

**User:** Sets the user profile information ([Setting Your Fitness User Profile, page 11](#)).

**HR Zones:** Sets the five heart rate zones for fitness activities ([Setting Your Heart Rate Zones, page 12](#)).

**FIT Activity:** Sets the type of fitness activity being performed. This allows your activity type to appear correctly when you transfer your activity data to Garmin Connect.

**Foot Pod Speed:** Sets the speed to Off, Indoor, and Always On ([Going for a Run Using a Foot Pod, page 12](#)).

## Setting Your Fitness User Profile

The device uses information that you enter about yourself to calculate accurate data. You can modify the following user profile information: gender, age, weight, height, and lifetime athlete (*About Lifetime Athletes*, page 11).

- 1 Select the action key.
- 2 Select **Setup > Fitness > User**.
- 3 Modify the settings.

## About Lifetime Athletes

A lifetime athlete is an individual who has trained intensely for many years (with the exception of minor injuries) and has a resting heart rate of 60 beats per minute (bpm) or less.

## Geocache Settings

Select **Setup > Geocaches**.

**List:** Allows you to display the geocache list by names or codes.

**chirp:** Turns chirp searching on or off (*chirp™*, page 6).

# Fitness

## Customizing Your Running or Cycling Profile

There are many ways to customize your device for ease of use while running or cycling. You can access the settings menu using the action key.

- Select **Setup > Tracks > Auto Pause** to turn on Auto Pause® (*Track Settings*, page 10).
- Select **Setup > Tracks > Output** to set your output format if you plan to manage your fitness activities using Garmin Connect (*Track Settings*, page 10).
- Select **Setup > Data Pages** to customize the data fields and to change the order of the data pages (*Customizing the Data Pages*, page 9).
- Select **Setup > Units** to change units of measurement.  
For example, you can record your biking distance in kilometers instead of miles.
- Customize the hold function of your arrow keys for your activity (*Customizing the Arrow Keys*, page 9).
- Select **Setup > Fitness > Auto Lap** to set your lap distance. The default distance is 1 mi (1.60 km).
- Enter your fitness user profile information (*Setting Your Fitness User Profile*, page 11) and heart rate zones (*Setting Your Heart Rate Zones*, page 12) to obtain accurate calorie measurements.

## Going for a Run

Before you go for a run, you must change the profile to running (*Changing Profiles*, page 2).

- 1 Select the action key.
- 2 Select **Start GPS**.
- 3 Wait while the device locates satellites.
- 4 Hold  $\Delta$  to start the timer.
- 5 Start running.  
You can hold  $\Delta$  to pause and resume your run. You can hold  $\nabla$  to mark a lap.
- 6 Select the action key.
- 7 Select **Stop GPS** to finish your run.  
The device automatically saves your run.

## History

History includes date, time, distance, calories, average speed or pace, ascent, descent, and optional ANT+™ sensor information.

**NOTE:** History is not recorded while the timer is stopped or paused.

When the device memory is full, a message appears. The device does not automatically delete or overwrite your history. You can upload your history to Garmin Connect (*Using Garmin Connect*, page 11) or BaseCamp (*Garmin Adventures*, page 4) periodically to keep track of all your activity data.

## Viewing an Activity

You can view the history or a map of your fitness activity.

- 1 Select the action key.
- 2 Select **FIT History**.  
A list of your activities appears by date.
- 3 Select an activity.
- 4 Select **Details** or **View Map**.

## Saving an Activity as a Track

You can save an activity as a track using GPS. This allows you to perform GPS functions with the activity, such as navigation and routes.

- 1 Select the action key.
- 2 Select **FIT History**.
- 3 Select an activity.
- 4 Select **Save as Track**.

## Deleting an Activity

- 1 Select the action key.
- 2 Select **FIT History**.
- 3 Select an activity.
- 4 Select **Delete > Yes**.

## Using Garmin Connect

- 1 Connect the device to your computer using the USB cable.
- 2 Go to [www.garminconnect.com/start](http://www.garminconnect.com/start).
- 3 Follow the on-screen instructions.

# ANT+ Sensors

The device is compatible with these optional, wireless ANT+ accessories.

- Heart rate monitor (*Putting On the Heart Rate Monitor*, page 12)
- GSC™ 10 speed and cadence sensor (*Using an Optional Bike Cadence Sensor*, page 13)
- tempe wireless temperature sensor (*tempe*, page 12)

For information about compatibility and purchasing additional sensors, go to <http://buy.garmin.com>.

## Pairing Your ANT+ Sensors

Before you can pair, you must put on the heart rate monitor or install the sensor.

Pairing is the connecting of ANT+ wireless sensors, for example, connecting a heart rate monitor with your Garmin device.

- 1 Bring the device with range (3 m) of the sensor.  
**NOTE:** Stay 10 m away from other ANT+ sensors while pairing.
- 2 Select the action key.
- 3 Select **Setup > ANT Sensor**.
- 4 Select your sensor.
- 5 Select **New Search**.

When the sensor is paired with your device, the sensor status changes from Searching to Connected. Sensor data appears in the data page loop or a custom data field.

## tempe

The tempe is an ANT+ wireless temperature sensor. You can attach the sensor to a secure strap or loop where it is exposed to ambient air, and therefore, provides a consistent source of accurate temperature data. You must pair the tempe with your device to display temperature data from the tempe.

## Putting On the Heart Rate Monitor

**NOTE:** If you do not have a heart rate monitor, you can skip this task.

You should wear the heart rate monitor directly on your skin, just below your breastplate. It should be snug enough to stay in place during your activity.

- 1 Snap the heart rate monitor module ① onto the strap.



- 2 Wet both electrodes ② on the back of the strap to create a strong connection between your chest and the transmitter.



- 3 If the heart rate monitor has a contact patch ③, wet the contact patch.
- 4 Wrap the strap around your chest, and connect the strap hook ④ to the loop.  
The Garmin logo should be right-side up.
- 5 Bring the device within range (3 m) of the heart rate monitor.

After you put on the heart rate monitor, it is on standby and ready to send data.

## About Heart Rate Zones

Many athletes use heart rate zones to measure and increase their cardiovascular strength and improve their level of fitness. A heart rate zone is a set range of heartbeats per minute. The five commonly accepted heart rate zones are numbered from 1 to 5 according to increasing intensity. Generally, heart rate zones are calculated based on percentages of your maximum heart rate.

## Fitness Goals

Knowing your heart rate zones can help you measure and improve your fitness by understanding and applying these principles.

- Your heart rate is a good measure of exercise intensity.
- Training in certain heart rate zones can help you improve cardiovascular capacity and strength.
- Knowing your heart rate zones can prevent you from overtraining and can decrease your risk of injury.

If you know your maximum heart rate, you can use the table ([Heart Rate Zone Calculations, page 17](#)) to determine the best heart rate zone for your fitness objectives.

If you do not know your maximum heart rate, use one of the calculators available on the Internet. Some gyms and health centers can provide a test that measures maximum heart rate.

## Setting Your Heart Rate Zones

Before the device can determine your heart rate zones, you must set up your fitness user profile ([Setting Your Fitness User Profile, page 11](#)).

You can manually adjust the heart rate zones according to your fitness goals ([Fitness Goals, page 12](#)).

- 1 Select the action key.
- 2 Select **Setup > Fitness > HR Zones**.
- 3 Enter the maximum and minimum heart rate for zone 5.
- 4 Enter your minimum heart rate for zones 4-1.

The maximum heart rate for each zone is based on the minimum heart rate of the previous zone. For example, if you enter 167 as a minimum heart rate for zone 5, the device uses 166 as the maximum rate for zone 4.

## Tips for Erratic Heart Rate Data

If the heart rate data is erratic or does not appear, you can try these tips.

- Reapply moisture to the electrodes and contact patch.  
You can use water, saliva, or electrode gel.
- Tighten the strap on your chest.
- Warm up for 5–10 minutes.
- Wash the strap after every seven uses ([Caring for the Heart Rate Monitor, page 14](#)).
- Wear a cotton shirt or wet your shirt if suitable for your activity.  
Synthetic fabrics that rub or flap against the heart rate monitor can create static electricity that interferes with heart rate signals.
- Move away from sources that can interfere with your heart rate monitor.  
Sources of interference may include strong electromagnetic fields, some 2.4 Ghz wireless sensors, high-voltage power lines, electric motors, ovens, microwave ovens, 2.4 Ghz cordless phones, and wireless LAN access points.
- Replace the battery ([Replacing the Heart Rate Monitor Battery, page 14](#)).

## Foot Pod

Your device is compatible with the foot pod. You can use the foot pod to record pace and distance instead of using GPS when you are training indoors or when your GPS signal is weak. The foot pod is on standby and ready to send data (like the heart rate monitor).

After 30 minutes of inactivity, the foot pod powers off to conserve the battery. When the battery is low, a message appears on your device. Approximately five hours of battery life remain.

## Setting the Foot Pod Mode

You can set your device to use foot pod data instead of GPS data to calculate pace.

- 1 Select the action key.
- 2 Select **Setup > Fitness > Foot Pod Speed**.
- 3 Select an option:
  - Select **Indoor** when you are training indoors without GPS.
  - Select **Always On** when training outdoors, when your GPS signal is weak, or when you lose satellite signals.

## Going for a Run Using a Foot Pod

Before you go for a run, you must change the profile to running ([Changing Profiles, page 2](#)), and pair the foot pod with your device ([Pairing Your ANT+ Sensors, page 11](#)).

When your device can not acquire satellite signals, such as when running indoors on a treadmill, you can use the foot pod to measure your running distance.

- 1 Install your foot pod according to the accessory instructions.
- 2 Select the action key.



- 3 Select **Setup > Fitness > Foot Pod Speed > Indoor**.
- 4 Hold  $\Delta$  to start the timer.
- 5 Start running.  
You can hold  $\Delta$  to pause and resume your run. You can hold  $\nabla$  to mark a lap.
- 6 Hold  $\Delta$  to stop the timer.  
The device automatically saves your run.

### Foot Pod Calibration

Calibrating your foot pod is optional and can improve accuracy. There are three ways to adjust the calibration: distance, GPS, and manual.

#### Calibrating Your Foot Pod by Distance

Before you can calibrate your device, you must pair your device with the foot pod (*Pairing Your ANT+ Sensors*, page 11).

For best results, the foot pod should be calibrated using the inside lane of a regulation track or an exact distance. A regulation track (2 laps = 0.5 mi. or 800 m) is more accurate than a treadmill.

- 1 Select the action key.
- 2 Select **Setup > ANT Sensor > Foot Pod > Calibrate > Distance**.
- 3 Select **Start** to begin recording.
- 4 Run or walk 0.5 mi. or 800 m.
- 5 Select **Stop**.

#### Calibrating Your Foot Pod by GPS

Before you can calibrate your device, you must acquire GPS signals, and pair your device with the foot pod (*Pairing Your ANT+ Sensors*, page 11).

- 1 Select the action key.
- 2 Select **Setup > ANT Sensor > Foot Pod > Calibrate > GPS**.
- 3 Select **Start** to begin recording.
- 4 Run or walk approximately 0.62 mi. or 1 k.  
The device informs you when you have traveled far enough.

#### Calibrating Your Foot Pod Manually

Before you can calibrate your device, you must pair your device with the foot pod (*Pairing Your ANT+ Sensors*, page 11).

Garmin recommends manual calibration if you know your calibration factor. If you have calibrated a foot pod with another Garmin product, you may know your calibration factor.

- 1 Select the action key.
- 2 Select **Setup > ANT Sensor > Foot Pod > Calibrate > Manual**.
- 3 Adjust the calibration factor:
  - Increase the calibration factor if your distance is too low.
  - Decrease the calibration factor if your distance is too high.

### Using an Optional Bike Cadence Sensor

You can use a compatible bike cadence sensor to send data to your device.

- Pair the sensor with your device (*Pairing Your ANT+ Sensors*, page 11).
- Create a custom profile for biking (*Creating a Custom Profile*, page 2).
- Update your fitness user profile information (*Setting Your Fitness User Profile*, page 11).

## Device Information

### Viewing Device Information

You can view the unit ID, software version, and license agreement.

- 1 Select the action key.
- 2 Select **Setup > About**.

### Updating the Software

**NOTE:** Updating the software does not erase any of your data or settings.

- 1 Connect your device to a computer using the USB cable.
- 2 Go to [www.garmin.com/products/webupdater](http://www.garmin.com/products/webupdater).
- 3 Follow the on-screen instructions.

### Device Care

#### NOTICE

Do not use a sharp object to clean the device.

Avoid chemical cleaners, solvents, and insect repellents that can damage plastic components and finishes.

Thoroughly rinse the device with fresh water after exposure to chlorine, salt water, sunscreen, cosmetics, alcohol, or other harsh chemicals. Prolonged exposure to these substances can damage the case.

Avoid pressing the keys under water.

Avoid extreme shock and harsh treatment, because it can degrade the life of the product.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

### Cleaning the Device

- 1 Wipe the device using a cloth dampened with a mild detergent solution.
- 2 Wipe it dry.

### Specifications

Battery type	500 mAh Lithium-ion battery
Battery life	Up to 5 weeks
Water resistance	Water resistant to 164 ft. (50 m) <b>NOTE:</b> The watch is designed for surface swimming.
Operating temperature range	From -4° to 122°F (from -20° to 50°C)
Radio frequency/protocol	2.4 GHz ANT+ wireless communications protocol Bluetooth® Smart device

### Heart Rate Monitor Specifications

Battery type	User-replaceable CR2032, 3 volts
Battery life	Up to 4.5 years (1 hour per day)
Water resistance	Water resistant to 98.4 ft. (30 m) <b>NOTE:</b> This product does not transmit heart rate data while swimming.
Operating temperature range	From 23° to 122°F (from -5° to 50°C)
Radio frequency/protocol	2.4 GHz ANT+ wireless communications protocol

### Battery Information

The actual battery life depends on how much you use GPS, device sensors, optional wireless sensors, and the backlight.

Battery Life	Mode
16 hours	Normal GPS mode
50 hours	UltraTrac GPS mode
Up to 2 weeks	Always On sensor mode
Up to 5 weeks	Watch mode

## Heart Rate Monitor Battery

### ⚠ WARNING

Do not use a sharp object to remove user-replaceable batteries.

Contact your local waste disposal department to properly recycle the batteries. Perchlorate Material – special handling may apply. Go to [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

### Replacing the Heart Rate Monitor Battery

- 1 Use a small Phillips screwdriver to remove the four screws on the back of the module.
- 2 Remove the cover and battery.



- 3 Wait 30 seconds.
- 4 Insert the new battery with the positive side facing up.
- 5 Replace the back cover and the four screws.

**NOTE:** Do not overtighten.

After you replace the heart rate monitor battery, you may need to pair it with the device again.

## Caring for the Heart Rate Monitor

### NOTICE

You must unsnap and remove the module before cleaning the strap.

A build up of sweat and salt on the strap can decrease the ability of the heart rate monitor to report accurate data.

- Go to [www.garmin.com/HRMcare](http://www.garmin.com/HRMcare) for detailed washing instructions.
- Rinse the strap after every use.
- Machine wash the strap after every seven uses.
- Do not put the strap in a dryer.
- When drying the strap, hang it up or lay it flat.
- To prolong the life of your heart rate monitor, unsnap the module when not in use.

## Data Management

**NOTE:** The device is not compatible with Windows 95, 98, Me, Windows NT®, and Mac OS 10.3 and earlier.

### File Types

The device supports these file types.

- Files from BaseCamp or HomePort™. Go to [www.garmin.com/trip\\_planning](http://www.garmin.com/trip_planning).
- GPI custom POI files from the Garmin POI Loader. Go to [www.garmin.com/products/poiloader](http://www.garmin.com/products/poiloader).
- GPX track files.

- GPX geocache files. Go to [www.opencaching.com](http://www.opencaching.com).
- FIT files for exporting to Garmin Connect.
- GPX/FIT files for recording data in both formats simultaneously.

### Disconnecting the USB Cable

If your device is connected to your computer as a removable drive or volume, you must safely disconnect your device from your computer to avoid data loss. If your device is connected to your Windows computer as a portable device, it is not necessary to safely disconnect.

- 1 Complete an action:
  - For Windows computers, select the **Safely Remove Hardware** icon in the system tray, and select your device.
  - For Mac computers, drag the volume icon to the trash.
- 2 Disconnect the cable from your computer.

## Deleting Files

### NOTICE

If you do not know the purpose of a file, do not delete it. Your device memory contains important system files that should not be deleted.

- 1 Open the **Garmin** drive or volume.
- 2 If necessary, open a folder or volume.
- 3 Select a file.
- 4 Press the **Delete** key on your keyboard.

## Troubleshooting

### Locking the Keys

You can lock the keys to prevent inadvertent key presses.

- 1 Select the data page you want to view while the keys are locked.
- 2 Hold and to lock the keys.
- 3 Hold and to unlock the keys.

### Resetting Your Device

If the device stops responding, you may need to reset it.

- 1 Hold for at least 25 seconds.
- 2 Hold for one second to turn on the device.

### Resetting the Device to Factory Settings

You can restore all of the device settings to the factory default values.

- 1 Select the action key.
- 2 Select **Setup > Reset > All Settings > Yes**.

### Clearing All Sensor Plot Data

- 1 Select the action key.
- 2 Select **Setup > Reset > Clear Plots > Yes**.

### Getting More Information

You can find more information about this product on the Garmin website.

- Go to [www.garmin.com/outdoor](http://www.garmin.com/outdoor).
- Go to [www.garmin.com/learningcenter](http://www.garmin.com/learningcenter).
- Go to <http://buy.garmin.com>, or contact your Garmin dealer for information about optional accessories and replacement parts.

# Appendix

## Data Fields

Some data fields require you to be navigating or require ANT+ accessories to display data.

**ACCURACY (GPS):** The margin of error for your exact location. For example, your GPS location is accurate to within +/- 12 feet (3.65 m).

**AMB PRESS (ambient pressure):** The uncalibrated environmental pressure.

**ASCENT (ascent total):** The total elevation distance ascended since the last reset.

**AVG ASCENT (average ascent):** The average vertical distance of ascent since the last reset.

**AVG CAD (average cadence):** The average cadence for the current activity.

**AVG DESCNT (average descent):** The average vertical distance of descent since the last reset.

**AVG HR (average heart rate):** The average heart rate for the current activity.

**AVG HR % (average heart rate percentage):** The average percentage of maximum heart rate for the current activity.

**AVG LAP (average lap):** The average lap time for the current activity.

**AVG PACE (average pace):** The average pace for the current activity.

**AVG SPEED (average speed overall):** The average speed while moving and stopped since the last reset.

**BAROMETER:** The calibrated current pressure.

**BATTERY:** The remaining battery power.

**BEARING:** The direction from your current location to a destination. You must be navigating for this data to appear.

**CADENCE:** The revolutions of the crank arm or strides per minute. Your device must be connected to a cadence accessory.

**CALORIES:** The amount of total calories burned.

**CMP HDNG (compass heading):** The direction you are moving based on the compass.

**COMPASS:** A visual representation of the direction in which the device is pointing.

**COURSE:** The direction from your starting location to a destination. Course can be viewed as a planned or set route. You must be navigating for this data to appear.

**DATE:** The current day, month, and year.

**DESCENT (descent total):** The total elevation distance descended since the last reset.

**DISTANCE (trip odometer):** A running tally of the distance traveled since the last reset.

**ELEVATION:** The altitude of your current location above or below sea level.

**FINAL DEST (final destination):** The last point on the route to the destination. You must be navigating for this data to appear.

**FINAL DIST (distance to final destination):** The remaining distance to the final destination. You must be navigating for this data to appear.

**FINAL ETA (final estimated time of arrival):** The estimated time of day you will reach the final destination (adjusted to the local time of the destination). You must be navigating for this data to appear.

**FINAL ETE (final estimated time en route):** The estimated time remaining before you reach the destination. You must be navigating for this data to appear.

**FINAL LOC (final location):** The last point on the route or course.

**FINAL VDST (final vertical distance to destination):** The elevation distance between your current position and the final destination. You must be navigating for this data to appear.

**FINAL VSPD (final vertical speed to destination):** The rate of ascent or descent to a predetermined altitude. You must be navigating for this data to appear.

**GLIDE RATIO:** The ratio of horizontal distance traveled to the change in vertical distance.

**GPS (signal strength):** The strength of the GPS satellite signal.

**GPS ELEVTN (GPS elevation):** The altitude of your current location using GPS.

**GPS HDNG (GPS heading):** The direction you are moving based on GPS.

**GRADE:** The calculation of rise (elevation) over run (distance). For example, if for every 10 feet (3 m) you climb you travel 200 feet (60 m), the grade is 5%.

**GR DEST (glide ratio to destination):** The glide ratio required to descend from your current position to the destination elevation. You must be navigating for this data to appear.

**HEADING:** The direction you are moving.

**HEART RATE:** Your heart rate in beats per minute (bpm). Your device must be connected to a compatible heart rate monitor.

**HR % MAX (heart rate percentage maximum):** The percentage of maximum heart rate.

**HR ZONE (heart rate zone):** The current range of heart rate (1 to 5). The default zones are based on your user profile, maximum heart rate, and resting heart rate.

**LAP ASCNT (lap ascent):** The vertical distance of ascent for the current lap.

**LAP CAD (lap cadence):** The average cadence for the current lap.

**LAP DESCNT (lap descent):** The vertical distance of descent for the current lap.

**LAP DIST (lap distance):** The distance traveled for the current lap.

**LAP HR (lap heart rate):** The average heart rate for the current lap.

**LAP HR % (lap heart rate percentage):** The average percentage of maximum heart rate for the current lap.

**LAP PACE:** The average pace for the current lap.

**LAPS:** The number of laps completed for the current activity.

**LAP SPEED:** The average speed for the current lap.

**LAP TIME:** The stopwatch time for the current lap.

**LAP TOTAL:** The stopwatch time for all the completed laps.

**LAT/LON (latitude/longitude):** The current position in latitude and longitude regardless of the selected position format setting.

**LLAP ASCNT (last lap ascent):** The vertical distance of ascent for the last completed lap.

**LLAP CAD (last lap cadence):** The average cadence for the last completed lap.

**LLAP DECNT (last lap descent):** The vertical distance of descent for the last completed lap.

**LLAP DIST (last lap distance):** The distance traveled for the last completed lap.

**LLAP HR (last lap heart rate):** The average heart rate for the last completed lap.

**LLAP PACE (last lap pace):** The average pace for the last completed lap.

**LLAP SPD (last lap speed):** The average speed for the last completed lap.

**LLAP TIME (last lap time):** The stopwatch time for the last completed lap.

**LOCATION:** The current position using the selected position format setting.

**MAX ASCENT (maximum ascent):** The maximum rate of ascent in feet per minute or meters per minute since the last reset.

**MAX DESCNT (maximum descent):** The maximum rate of descent in feet per minute or meters per minute since the last reset.

**MAX ELEVTN (maximum elevation):** The highest elevation reached since the last reset.

**MAX SPEED (maximum speed):** The highest speed reached since the last reset.

**MAX TEMP (maximum temperature):** The maximum temperature recorded in the last 24 hours.

**MIN ELEVTN (minimum elevation):** The lowest elevation reached since the last reset.

**MIN TEMP (minimum temperature):** The minimum temperature recorded in the last 24 hours.

**MOV'N AVG (moving average):** The average speed while moving since the last reset.

**MOV'N TIME (moving time):** A running tally of the time spent moving since the last reset.

**NEXT DEST (next destination):** The next point on the route. You must be navigating for this data to appear.

**NEXT DIST (distance to next waypoint):** The remaining distance to the next waypoint on the route. You must be navigating for this data to appear.

**NEXT ETA (next estimated time of arrival):** The estimated time of day you will reach the next waypoint on the route (adjusted to the local time of the waypoint). You must be navigating for this data to appear.

**NEXT ETE (next estimated time en route):** The estimated time remaining before you reach the next waypoint in the route. You must be navigating for this data to appear.

**NEXT VDST (next vertical distance):** The elevation distance between your current position and the next waypoint in the route. You must be navigating for this data to appear.

**NONE:** This is a blank data field.

**ODOMETER:** A running tally of distance traveled for all trips. This total does not clear when resetting the trip data.

**OFF COURSE:** The distance to the left or right by which you have strayed from the original path of travel. You must be navigating for this data to appear.

**PACE:** The current pace.

**SPEED:** The current rate of travel.

**STEPS:** The number of steps recorded by the foot pod.

**STOP TIME:** A running tally of the time spent not moving since the last reset.

**STOPWATCH:** The stopwatch time for the current activity.

**SUNRISE:** The time of sunrise based on your GPS position.

**SUNSET:** The time of sunset based on your GPS position.

**TEMP (temperature):** The temperature of the air. Your body temperature affects the temperature sensor.

**TIME:** A running tally of the total time spent moving and not moving since the last reset.

**TIMER:** The current time of the countdown timer.

**TO COURSE:** The direction in which you must move to get back on the route. You must be navigating for this data to appear.

**TOD (time of day):** The current time of day based on your current location and time settings (format, time zone, daylight saving time).

**TRACK DIST (track distance):** The distance traveled for the current track.

**TURN:** The angle of difference (in degrees) between the bearing to your destination and your current course. L means turn left. R means turn right. You must be navigating for this data to appear.

**VERT SPEED (vertical speed):** The rate of ascent or descent over time.

**VMG (velocity made good):** The speed at which you are closing on a destination along a route. You must be navigating for this data to appear.

## Registering Your Device

Help us better support you by completing our online registration today.

- Go to <http://my.garmin.com>.
- Keep the original sales receipt, or a photocopy, in a safe place.

## Software License Agreement

BY USING THE DEVICE, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

Garmin Ltd. and its subsidiaries ("Garmin") grant you a limited license to use the software embedded in this device (the "Software") in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin and/or its third-party providers.

You acknowledge that the Software is the property of Garmin and/or its third-party providers and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software, for which source code is not provided, are valuable trade secrets of Garmin and/or its third-party providers and that the Software in source code form remains a valuable trade secret of Garmin and/or its third-party providers. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America or the export control laws of any other applicable country.

## Altimeter and Barometric Readings

The altimeter and barometer function differently depending on the fixed or variable settings. For information about calibrating the barometric altimeter, see [Calibrating the Barometric Altimeter, page 5](#). For information about tracking weather changes, see [Tracking Weather Changes Overnight, page 6](#).

You can adjust the altimeter and barometric settings by selecting **Setup > Sensors > Altimeter > Baro. Plot**.

Sensor	Fixed	Variable
Altimeter with GPS On	Elevation is equal to GPS elevation.	Elevation reflects changes in ambient pressure and GPS position.
Barometer with GPS On	Barometric pressure reading reflects changes in ambient pressure and changes in GPS position. Using the barometer at a constant altitude results in accurate readings.	Barometric pressure reading reflects changes in ambient pressure and changes in GPS position.
Altimeter with GPS Off	Elevation remains constant.	Elevation reflects changes in ambient pressure.
Barometer with GPS Off	Barometric pressure reading reflects changes in ambient pressure. Using the barometer at a constant altitude results in accurate readings.	Barometric pressure reading is based on the calibrated altitude and changes in ambient pressure.

## Heart Rate Zone Calculations

Zone	% of Maximum Heart Rate	Perceived Exertion	Benefits
1	50–60%	Relaxed, easy pace, rhythmic breathing	Beginning-level aerobic training, reduces stress
2	60–70%	Comfortable pace, slightly deeper breathing, conversation possible	Basic cardiovascular training, good recovery pace
3	70–80%	Moderate pace, more difficult to hold conversation	Improved aerobic capacity, optimal cardiovascular training
4	80–90%	Fast pace and a bit uncomfortable, breathing forceful	Improved anaerobic capacity and threshold, improved speed
5	90–100%	Sprinting pace, unsustainable for long period of time, labored breathing	Anaerobic and muscular endurance, increased power

# Index

## A

- accessories 14
- adventures 4
- alarms 8
  - clock 7
  - proximity 8
- alerts 8
  - location 8
- almanac
  - hunting and fishing 8
  - sunrise and sunset 8
- altimeter 1, 2, 5, 6, 10, 14, 16
- ANT+ sensors 11
  - pairing 11
- area calculation 8
- Auto Pause 10, 11

## B

- backlight 1, 10
- barometer 1, 2, 5, 6, 14, 16
- BaseCamp 2, 14
- battery 13
  - charging 1
  - life 1, 13
  - replacing 14
- bearing pointer 3
- bike sensors 13

## C

- cadence, sensors 13
- calibrating
  - altimeter 5
  - compass 5
- charging 1
- chirp 6, 11
- cleaning the device 13, 14
- compass 1–5, 9, 10
- computer, connecting 2
- contrast 10
- coordinates 4
- countdown timer 8
- customizing the device 9, 11

## D

- data
  - sharing 4
  - storing 11
  - transferring 11
- data fields 9
- deleting
  - all user data 14
  - locations 3
  - profiles 2
- demo mode 8
- device, registration 16
- distance 4
- downloading, geocaches 6

## E

- elevation 1, 2
  - plot 14

## F

- files
  - transferring 6
  - types 14
- finding locations, near your location 3
- fishing times 8
- fitness 10, 11
- foot pod 12, 13

## G

- Garmin Connect, storing data 11
- geocaches 4, 6, 11, 14
  - downloading 6
  - navigating to 6
- GPS 9, 13
  - signal 1, 2, 8

- stopping 2, 8
- GSC 10 11

## H

- heart rate 2
  - monitor 12, 14
  - zones 12, 17
- heart rate monitor 11, 12, 14
- history 11
  - sending to computer 11
  - viewing 11
- HomePort 14
- hunting and fishing times 8

## J

- jumpmaster 6, 7

## K

- keys 1, 9
  - locking 14

## L

- language 9
- lifetime athlete 11
- locations 4, 8
  - editing 3
  - saving 3
- locking, keys 14

## M

- main menu, customizing 9
- man overboard (MOB) 6
- maps 4
  - browsing 5
  - navigating 5
  - orientation 10
  - settings 10
  - viewing 11
  - zoom 5
- menu 1
- moon phase 8

## N

- navigation 4
  - compass 4
  - Sight 'N Go 5
  - waypoints 3
- north reference 10

## P

- pairing ANT+ sensors 11
- position format 10
- product registration 16
- profiles 2, 11
- proximity alarms 8

## R

- registering the device 16
- replacing battery 14
- replacing the battery 14
- resetting, device 14
- resetting the device 14
- restoring settings 14
- routes 3, 4
  - creating 3
  - deleting 4
  - editing 3, 4
  - viewing on the map 4
- running 11

## S

- satellite page 8
- satellite signals 8
  - acquiring 2
- saving activities 11
- screen 10
- settings 9–11, 14
- sharing data 4
- Sight 'N Go 5
- software
  - updating 13
  - version 13

- software license agreement 13, 16
- specifications 13
- speed 4
- speed and cadence sensors 2
- stopwatch 8
- sunrise and sunset times 8
- system settings 9

## T

- tempe 11, 12
- temperature 1, 2, 6, 12
- tides 7
- time of day 1
- time settings 8, 10
- time zones 8, 10
- timer 11
  - countdown 8
- tones 8, 10
- TracBack 5
- tracks 4, 10, 11
  - deleting 4
  - recording 2
- transferring, files 14
- transferring files 6
- trip planner. See routes
- troubleshooting 12, 14

## U

- UltraTrac 9
- unit ID 13
- units of measure 10
- updating software 13
- USB
  - disconnecting 14
  - transferring files 14
- user data, deleting 14
- user profile 11

## V

- vibration alerts 10

## W

- WAAS 9
- water resistance 13
- waypoints 1, 3, 4
  - deleting 3
  - editing 3
  - projecting 3
  - saving 3
- weather 6

## Z

- zones, time 8
- zooming 1
  - maps 5



