


GARMIN®

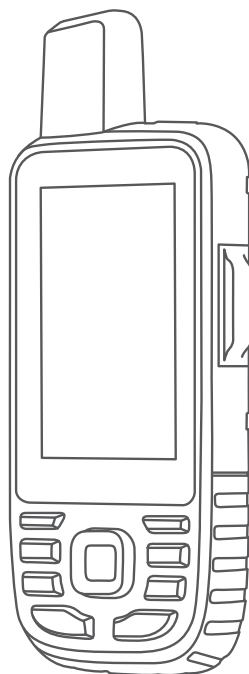

GPSMAP® 67i

Owner's Manual

© 2023 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Garmin®, the Garmin logo, ANT+®, Auto Lap®, AutoLocate®, City Navigator®, GPSMAP®, inReach®, TracBack®, VIRB®, and Xero® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. BaseCamp™, chirp™, Connect IQ™, Garmin Connect™, Garmin Explore™, Garmin Express™, Garmin HuntView™, Garmin Messenger™, Garmin Response™, and tempe™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Android™ is a trademark of Google Inc. Apple®, iPhone®, and Mac® are trademarks of Apple Inc., registered in the U.S. and other countries. The BLUETOOTH® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. iOS® is a registered trademark of Cisco Systems, Inc. used under license by Apple Inc. Iridium® is a registered trademark of Iridium Satellite LLC. microSD® and the microSDHC logo are trademarks of SD-3C, LLC. NMEA® is a registered trademark of the National Marine Electronics Association. Wi-Fi® is a registered mark of Wi-Fi Alliance Corporation. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Other trademarks and trade names are those of their respective owners.

Table of Contents

| | |
|--|-----------|
| Getting Started..... | 1 |
| Device Overview | 1 |
| Status LED | 2 |
| Status Icons | 2 |
| Buttons | 3 |
| Turning On the Device | 3 |
| Locking the Buttons | 3 |
| Turning On the Backlight | 3 |
| Adjusting the Backlight | 4 |
| Acquiring Satellite Signals | 4 |
| GPS and Other Satellite Systems | 4 |
| Charging the GPSMAP 67i Device | 5 |
| Saving Energy While Charging the Device | 5 |
| Pairing Your Phone and Activating the Device | 5 |
| Garmin Messenger App | 6 |
| Garmin Explore™ | 6 |
| Iridium Satellite Network | 6 |
| inReach Features..... | 6 |
| Messages | 6 |
| Sending a Check-In Message | 7 |
| Sending a Text Message | 7 |
| Using Keyboard Shortcuts | 7 |
| Replying to a Message | 7 |
| Checking for Messages | 7 |
| Viewing Message Details | 8 |
| Navigating to a Message Location | 8 |
| Including Location Coordinates in a Message | 8 |
| Deleting Messages | 8 |
| Messages Settings | 8 |
| inReach Tracking | 8 |
| Starting Tracking | 9 |
| Stopping Tracking | 9 |
| Sharing Your Tracking Page | 9 |
| inReach Tracking Settings | 9 |
| SOS | 9 |
| Initiating an SOS Rescue | 10 |
| Sending a Custom SOS Message | 10 |
| Canceling an SOS Request | 10 |
| Sending a Test Message..... | 11 |

| | |
|--|-----------|
| Syncing inReach Data..... | 11 |
| Contacts..... | 11 |
| Adding a Contact | 11 |
| Editing a Contact | 11 |
| Deleting a Contact | 11 |
| Using the Main Pages..... | 11 |
| Opening the Main Menu | 12 |
| Map | 12 |
| Navigating with the Map | 12 |
| Measuring Distance on the Map | 12 |
| Map Page Settings | 12 |
| Map Settings | 13 |
| Advanced Map Settings | 13 |
| Compass | 13 |
| Navigating with the Compass | 13 |
| Using the Course Pointer | 14 |
| Navigating with Sight 'N Go | 14 |
| Projecting a Waypoint from Your Current Location | 15 |
| Compass Settings | 15 |
| Calibrating the Compass | 15 |
| Heading Settings | 16 |
| Trip Computer | 16 |
| Trip Computer Settings | 16 |
| Altimeter | 16 |
| Altimeter Plot Settings | 17 |
| Altimeter Settings | 17 |
| Calibrating the Barometric Altimeter | 17 |
| Navigation..... | 17 |
| FIND Page | 17 |
| Navigating to a Destination | 18 |
| Stopping Navigation | 18 |
| Finding a Location Near Another Location | 18 |
| Waypoints | 18 |
| Saving Your Current Location as a Waypoint | 18 |
| Saving a Location on the Map as a Waypoint | 18 |
| Navigating to a Waypoint | 18 |
| Finding a Saved Waypoint | 19 |
| Editing a Waypoint | 19 |
| Deleting a Waypoint | 19 |

| | | | |
|--|----|--|-----------|
| Changing the Photo for a Waypoint..... | 19 | Editing a Course..... | 27 |
| Increasing the Accuracy of a Waypoint Location..... | 19 | Editing the Name of a Course..... | 27 |
| Projecting a Waypoint from a Saved Waypoint..... | 20 | Viewing a Saved Course on the Map..... | 27 |
| Moving a Waypoint on the Map..... | 20 | Viewing the Elevation Plot of a Course..... | 27 |
| Finding a Location Near a Waypoint..... | 20 | Reversing a Course..... | 28 |
| Setting a Waypoint Proximity Alarm..... | 20 | Creating a Track or Route from a Saved Course..... | 28 |
| Adding a Waypoint to a Route..... | 21 | Deleting a Course..... | 28 |
| Repositioning a Waypoint to Your Current Location..... | 21 | Optional Maps..... | 28 |
| Routes..... | 21 | Purchasing Additional Maps..... | 28 |
| Creating a Route Using Route Planner..... | 21 | Finding an Address..... | 28 |
| Creating a Route Using the Map..... | 21 | Connected Features..... | 29 |
| Navigating a Saved Route..... | 21 | Connected Feature Requirements..... | 29 |
| Viewing the Active Route..... | 22 | Phone Notifications..... | 30 |
| Editing a Route..... | 22 | Viewing Phone Notifications..... | 30 |
| Editing the Name of a Route..... | 22 | Hiding Notifications..... | 30 |
| Viewing a Route on the Map..... | 22 | Managing Notifications..... | 30 |
| Viewing the Elevation Plot of a Route..... | 22 | Connecting to a Wireless Network..... | 30 |
| Reversing a Route..... | 23 | Connect IQ Features..... | 30 |
| Deleting a Route..... | 23 | Downloading Connect IQ Features.. | 30 |
| Recordings..... | 23 | Downloading Connect IQ Features Using Your Computer..... | 31 |
| Recording Settings..... | 23 | Viewing Connect IQ Widgets..... | 31 |
| Advanced Recording Settings..... | 23 | Data Use and History..... | 31 |
| Auto Save Settings..... | 24 | Viewing Plan Details..... | 31 |
| Viewing the Current Activity..... | 24 | Viewing Data Use..... | 31 |
| Navigating Using TracBack®..... | 24 | Main Menu Tools..... | 32 |
| Stopping the Current Activity..... | 24 | Requesting an inReach Weather Forecast..... | 33 |
| Saving the Current Activity..... | 25 | Updating an inReach Weather Forecast..... | 33 |
| Viewing Saved Activity Information..... | 25 | Deleting an inReach Weather Forecast..... | 34 |
| Saving a Location from an Activity as a Waypoint..... | 25 | Viewing an Active Weather Forecast... .. | 34 |
| Creating a Track from a Saved Activity..... | 25 | Viewing an Active Weather Map..... | 34 |
| Reversing an Activity..... | 25 | Adding an Active Weather Location..... | 34 |
| Navigating a Saved Activity..... | 25 | Switching the Active Weather Location..... | 35 |
| Deleting a Saved Activity..... | 26 | Deleting an Active Weather Location..... | 35 |
| Courses..... | 26 | Garmin Adventures..... | 35 |
| Creating a Course..... | 26 | | |
| Creating a Course Using the Map.... | 26 | | |
| Navigating a Saved Course..... | 26 | | |

| | |
|---|----|
| Sending Files to and from BaseCamp | 35 |
| Creating an Adventure | 35 |
| Starting an Adventure | 36 |
| Calculating the Size of an Area | 36 |
| Using the Flashlight | 36 |
| Geocaches | 36 |
| Registering Your Device at Geocaching.com | 37 |
| Connecting to Geocaching.com | 37 |
| Downloading Geocaches Using a Computer | 37 |
| Searching for a Geocache | 37 |
| Searching for a Geocache on the Map | 38 |
| Filtering the Geocache List | 38 |
| Saving a Custom Geocache Filter | 38 |
| Editing a Custom Geocache Filter | 38 |
| Viewing Geocache Details | 38 |
| Navigating to a Geocache | 39 |
| Using Hints and Clues to find a Geocache | 39 |
| Logging the Attempt | 39 |
| chirp | 39 |
| Enabling chirp Searching | 39 |
| Finding a Geocache with a chirp .. | 39 |
| Removing Live Geocache Data from the Device | 40 |
| Removing Your Device Registration From Geocaching.com | 40 |
| Marking and Starting Navigation to a Man Overboard Location | 40 |
| Downloading Maps | 40 |
| Enabling Maps | 41 |
| Deleting a Map | 41 |
| Selecting a Profile | 41 |
| Setting a Proximity Alarm | 41 |
| Editing or Deleting a Proximity Alarm | 41 |
| Satellite Page | 41 |
| GPS Satellite Settings | 42 |
| Sending and Receiving Data Wirelessly | 42 |
| Using the VIRB Remote | 42 |

Customizing the Device..... 42

| | |
|---|----|
| Customizing the Data Fields | 42 |
| Setup Menu | 43 |
| System Settings | 43 |
| Satellite Settings | 44 |
| Display Settings | 44 |
| Turning Off the Screen | 44 |
| Changing the Color Mode | 44 |
| Bluetooth Settings | 44 |
| Wi-Fi Settings | 44 |
| Routing Settings | 45 |
| Advanced Routing Settings | 45 |
| Turning On Expedition Mode | 45 |
| Setting the Device Tones | 45 |
| Geocaching Settings | 46 |
| Pairing Your Wireless Sensors | 46 |
| Fitness Settings | 46 |
| Marking Laps by Distance | 46 |
| Marine Settings | 47 |
| Setting Up Marine Alarms | 47 |
| Menu Settings | 47 |
| Customizing the Main Menu | 47 |
| Changing the Page Sequence | 48 |
| Configuring the Page Ribbon Display | 48 |
| Position Format Settings | 48 |
| Changing the Units of Measure | 49 |
| Time Settings | 49 |
| Profiles | 49 |
| Creating a Custom Profile | 49 |
| Editing a Profile Name | 49 |
| Deleting a Profile | 50 |
| Resetting Data and Settings | 50 |
| Restoring Default Page Settings .. | 50 |

Device Information..... 50

| | |
|------------------------------------|----|
| Product Updates | 50 |
| Setting Up Garmin Express | 50 |
| Getting More Information | 51 |
| Attaching the Carabiner Clip | 51 |
| Removing the Carabiner Clip | 51 |
| Attaching a Lanyard | 51 |
| Device Care | 52 |
| Cleaning the Device | 52 |
| Data Management | 52 |
| File Types | 52 |
| Installing a Memory Card | 52 |

| | |
|--|----|
| Connecting the Device to Your Computer..... | 53 |
| Transferring Files to Your Device..... | 53 |
| Deleting Files..... | 53 |
| Disconnecting the USB Cable..... | 53 |
| Specifications..... | 54 |
| Viewing E-label Regulatory and Compliance Information..... | 54 |

Appendix..... 55


| | |
|---------------------------------------|----|
| Data Fields..... | 55 |
| Optional Accessories..... | 57 |
| tempe..... | 57 |
| Tips for Pairing Wireless Sensors.... | 58 |
| Troubleshooting..... | 58 |
| Maximizing Battery Life..... | 58 |
| Long-Term Storage..... | 58 |
| Restarting the Device..... | 58 |
| About Heart Rate Zones..... | 58 |
| Fitness Goals..... | 58 |
| Heart Rate Zone Calculations..... | 59 |

Getting Started

⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.


Device Overview

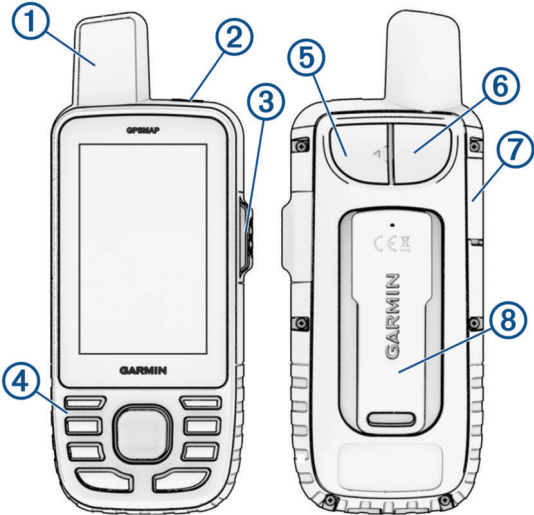

| | |
|---|--|
| ① | Internal Iridium® and GNSS antenna |
| ② | Power button ❶ |
| ③ | SOS button |
| ④ | Buttons |
| ⑤ | USB port (under weather cap) |
| ⑥ | Flashlight |
| ⑦ | microSD® card slot (under weather cap) |
| ⑧ | Mounting spine |

Status LED

The status LED ① indicates the device status.

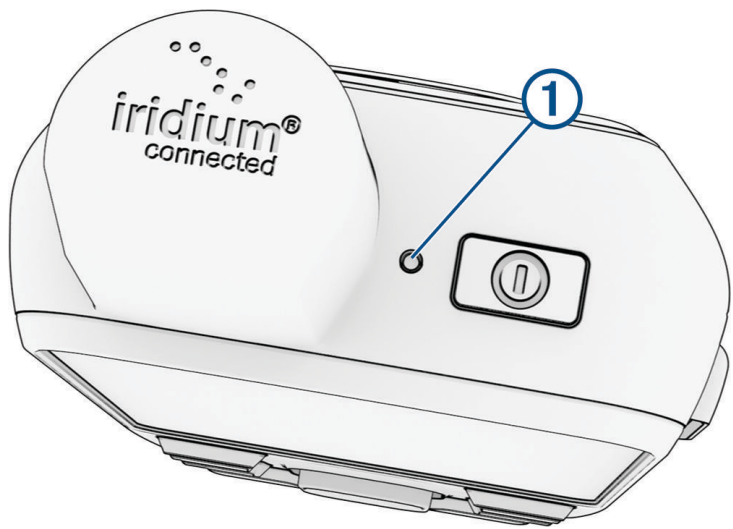

| LED Activity | Status |
|-----------------------------------|---|
| Double flashing green | You have an unread inReach® message. |
| Flashing green | The device is in expedition mode. The screen is turned off to maximize battery life. |
| Flashing red | An inReach message failed to send. The device is below 10-percent battery power. |
| Alternating red and green flashes | The device is in SOS mode. |

Status Icons


| | |
|--|---|
| | ANT+® sensor status |
| | GPS signal strength |
| | Charging battery |
| | Charging complete |
| | Bluetooth® technology status |
| | Wi-Fi® status |
| | Sending, receiving, or searching for inReach messages and tracking points |
| | Unread inReach messages |
| | inReach tracking status |

Buttons




| | |
|-------|---|
| FIND | Press to open the search menu. Hold to mark your current location as a man overboard (MOB) location and activate navigation. |
| MARK | Press to save your current location as a waypoint. |
| QUIT | Press to cancel or return to the previous menu or page. Press to scroll through the main pages. |
| ENTER | Press to choose options and acknowledge messages. Press to control the current activity recording (from the main pages). |
| MENU | Press to open the options menu for the page that is currently open. Press twice to open the main menu (from any page). |
| PAGE | Press to scroll through the main pages. |
| | Press to select menu options and move the map cursor. |
| | Press to zoom in on the map. |
| | Press to zoom out on the map. |

Turning On the Device

Press and hold .

Locking the Buttons

You can lock the keypad to prevent inadvertent button presses.

- 1 Press  to open the status page.
- 2 Select **Lock Keys**.

Turning On the Backlight

Press any button to turn on the backlight.
The backlight turns on automatically when alerts and messages are displayed.

Adjusting the Backlight

- 1 Press **ⓘ** to open the status page.
- 2 Use **+** and **-** to adjust the brightness.

NOTE: To maximize battery life, the screen turns off automatically when the backlight times out. You can select **Setup > Display** to customize the backlight and display settings.

Acquiring Satellite Signals

It may take 30 to 60 seconds to acquire satellite signals.

- 1 Go outdoors to an open area.
- 2 If necessary, turn on the device.
- 3 Wait while the device searches for satellites.
? flashes while the device determines your GNSS location.



in the status bar shows the satellite signal strength.

When the device acquires satellite signals, it automatically starts recording your path as an activity.

GPS and Other Satellite Systems

Using GPS and another satellite system together offers increased performance in challenging environments and faster position acquisition than using GPS only. However, using multiple systems can reduce battery life more quickly than using GPS only.

Your device can use these Global Navigation Satellite Systems (GNSS). Multi-band systems use multiple frequency bands and allow for more consistent track logs, improved positioning, improved multi-path errors, and fewer atmospheric errors when using the device in challenging environments.

GPS: A satellite constellation built by the United States.

GPS multi-band: A satellite constellation built by the United States, using the enhanced L5 signal.

GALILEO: A satellite constellation built by the European Space Agency.

QZSS multi-band: A satellite constellation built by Japan, using the enhanced L5 signal.


Charging the GPSMAP 67i Device

NOTICE

To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

NOTE: The device does not charge when it is outside the approved temperature range ([Specifications, page 54](#)).

- 1 Lift the weather cap ①.

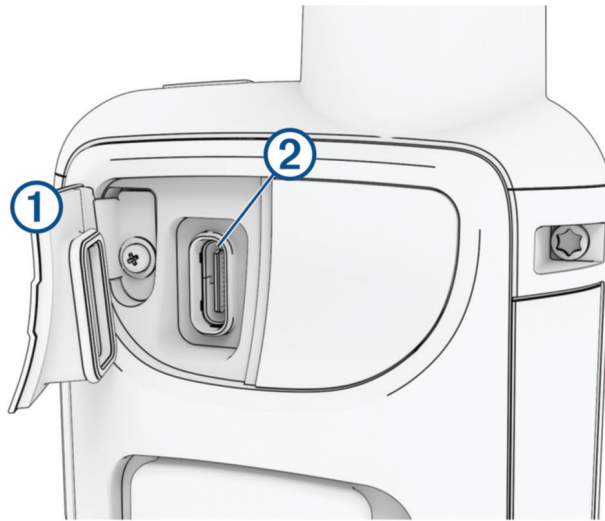

- 2 Plug the small end of the power cable into the charging port ② on the device.
 - 3 Plug the other end of the power cable into a compatible AC power adapter.
 - 4 Plug the AC power adapter into a standard wall outlet.
- The device displays the current battery charge level.

Saving Energy While Charging the Device

- 1 Connect your device to an external power source.
- 2 Hold the power button until the screen turns off.
The device goes into a low power, battery charging mode, and the battery gauge appears.
- 3 Charge the device completely.

Pairing Your Phone and Activating the Device

⚠ WARNING

Before you can use the inReach features of your device, including messaging, SOS, tracking, and inReach Weather, you must have an active satellite subscription. Always test your device before you use it outdoors.

The GPSMAP 67i device works best when it is paired with the Garmin Messenger™ app. The app allows you to compose and send messages using your phone, and to sync contacts and check-in messages with your device.

- 1 Turn on the inReach device.
- 2 Bring your compatible phone within 10 m (33 ft.) of your device.
- 3 From the app store on your phone, download the Garmin Messenger app, and follow the on-screen instructions to complete the pairing process.
- 4 Follow the on-screen instructions to activate a subscription service plan.

After the devices are paired, they connect automatically when they are turned on and within Bluetooth range.

Garmin Messenger App

WARNING

Before you can use certain inReach features of the Garmin Messenger app, including SOS, tracking, and inReach Weather, you must have an active satellite subscription and a connected inReach device. Always test the app before you use it outdoors.

With an inReach subscription and a connected inReach device, you can use the Garmin Messenger app for tracking, SOS, inReach Weather, and managing your service plan. You can also use the app to message other inReach device users, as well as friends and family. The app works over both the Iridium satellite network and the internet (using a wireless connection or cellular data on your phone). Messages sent using a wireless connection or cellular data on your phone do not incur data charges or additional charges on your inReach subscription. Messages received may incur charges if message delivery is attempted over both the Iridium satellite network and the internet. Standard text messaging rates for your cellular data plan apply.

Without an inReach subscription, the app also provides a messaging experience for friends and family. Anyone can download the app and connect their phone, allowing them to communicate with other app users over the internet (no login is required). App users can also create group messaging threads with other SMS phone numbers. New members added to the group message can download the app to see what others are saying.

Garmin Explore™

The Garmin Explore website and app allow you to create courses, waypoints, and collections, plan trips, and use cloud storage. They offer advanced planning both online and offline, allowing you to share and sync data with your compatible Garmin® device. You can use the app to download maps for offline access, and then navigate anywhere without using your cellular service.

You can download the Garmin Explore app from the app store on your phone, or you can go to explore.garmin.com.

Iridium Satellite Network

Your device requires a clear view of the sky to transmit messages and track points over the Iridium satellite network. Without a clear view of the sky, your device attempts to send the information until it acquires satellite signals.

TIP: For the best connection with satellites, place the device with the antenna pointed toward the sky.

inReach Features

WARNING

Before you can use the inReach features of your GPSMAP 67i device, including messaging, SOS, tracking, and inReach Weather, you must have an active satellite subscription. Always test your device before you use it outdoors.

Ensure you have a clear view of the sky when using the messaging, tracking, and SOS functions, because these features require satellite access to operate properly.

NOTICE

Some jurisdictions regulate or prohibit the use of satellite communications devices. It is the responsibility of the user to know and follow all applicable laws in the jurisdictions where the device is intended to be used.

Messages

Your GPSMAP 67i device sends and receives text messages using the Iridium satellite network. You can send messages to an SMS phone number, an email address, or another device that uses inReach technology. Each message you send includes your location details where allowed.

Sending a Check-In Message

Check-in messages are messages with predefined text and recipients. You can use the Garmin Messenger app to customize recipients.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Messages > Send Check-In**.
- 3 Choose a message, and press **ENTER**.
- 4 Press **ENTER** to send the message.

Sending a Text Message

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Messages > New Message**.
- 3 Select an option:
 - To start with a pre-written message, select **Send Quick Text**.
NOTE: You can add and edit quick text messages on the Garmin Explore website.
 - To write a custom message, select **Type Message**.
- 4 Select **To** to choose recipients from your contacts list, or enter each recipient's contact information.
- 5 After you have finished your message, select **Send Message**.

Using Keyboard Shortcuts

- To select the first autocomplete option, select **FIND**.
- To cycle through keyboards, select **MARK**.
- To change character case, select **PAGE** once, and to turn on caps lock, select **PAGE** twice.
- To insert a backspace, select **+**.
- To insert a space, select **—**.

Replying to a Message

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Messages**.
- 3 Select a conversation.
- 4 Select **Reply**.
- 5 Select an option:
 - To write a custom message, select **Type Message**.
 - To start with a pre-written message, select **Send Quick Text** and select a message.
- 6 When you have finished your message, select **Send Message**.

Checking for Messages

Your navigator automatically checks for messages every hour. When you send a message, it listens for replies for 10 minutes. When you are using the inReach tracking feature, it checks for messages at your tracking interval. You can manually force a message check by checking for messages, sending a message, or sending a track point. During a message check, your navigator connects to satellites and receives messages waiting to be sent to your device.

NOTE: Your navigator must have a clear view of the sky and be in view of a satellite during the listen interval to receive messages.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **inReach Utilities > Mail Check > Check Mailbox**.

Viewing Message Details

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Messages**.
- 3 Select a conversation.
- 4 Select a message.
- 5 Select the information tab.

Navigating to a Message Location

When you receive a message from another device with inReach technology, the message may include location information. For these messages, you can navigate to the location from which the message was sent.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Messages**.
- 3 Select a conversation.
- 4 Select a message with location information.
- 5 Select the map tab.
- 6 Select **Go**.

Including Location Coordinates in a Message

If you are sending a message to a recipient who may not have internet access, you can include your location coordinates in the message. For example, if your recipient has an older model phone that does not support viewing maps or is outside of a mobile data coverage area and cannot view a web page.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Messages > New Message > Send Location**.
- 3 Enter one or more recipients.
- 4 If necessary, enter a message.
- 5 Select **Send Message**.

Deleting Messages

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Messages**.
- 3 Select a conversation.
- 4 Select **MENU > Delete Thread**.

Messages Settings

Press **MENU** twice to open the main menu. Select **Setup > Messages**.

Ring Until Read: Sets the navigator to ring until you read a new message. This feature is helpful if you are in a noisy environment.

Notifications: Alerts you to incoming inReach messages.

Show on Map: Displays inReach messages on the map.

inReach Tracking

You can use the tracking feature on your GPSMAP 67i device to record track points and transmit them over the Iridium satellite network at the specified send interval.

Track points appear on the Garmin Explore website.

Starting Tracking

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Tracking > Start Tracking**.

NOTE: Starting the Tracking feature also starts recording your path as an activity.

Stopping Tracking

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Tracking > Stop Tracking**.

NOTE: Stopping tracking also pauses your activity recording.

Sharing Your Tracking Page

You can share a link to a tracking webpage with other people. The system automatically adds text, including link information, to the end of your message.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Tracking > Share With > Share**.
- 3 Select **To** to choose recipients from your contacts list, or enter each recipient's contact information.
- 4 Select **Send Message**.

inReach Tracking Settings

Press **MENU** twice to open the main menu. Select **Setup > Tracking**.

Auto Track: Sets the navigator to start tracking when you turn it on.

Link with Recording: Links the track with the current activity recording.

Moving Interval: Sets the frequency at which the navigator records a track point and transmits it over the satellite network when you are moving. If you are on a professional plan, you can specify the interval when you are stationary.

SOS

WARNING

Before you can use the SOS function, you must have an active satellite subscription. Always test your device before you use it outdoors.

Ensure you have a clear view of the sky when using the SOS function, because this feature requires satellite access to operate properly.

NOTICE


Some jurisdictions regulate or prohibit the use of satellite communications devices. It is the responsibility of the user to know and follow all applicable laws in the jurisdictions where the device is intended to be used.

During an emergency, you can use your GPSMAP 67i device to contact the Garmin ResponseSM center to request help. Pressing the SOS button sends a message to the Garmin Response team, and they notify the appropriate emergency responders of your situation. You can communicate with the Garmin Response team during your emergency while you wait for help to arrive. You should only use the SOS function in a real emergency situation.

Initiating an SOS Rescue

You can initiate an SOS rescue with the device turned on or off if the device has battery power.

- 1 Lift the protective cap ① from the **SOS** button ②.

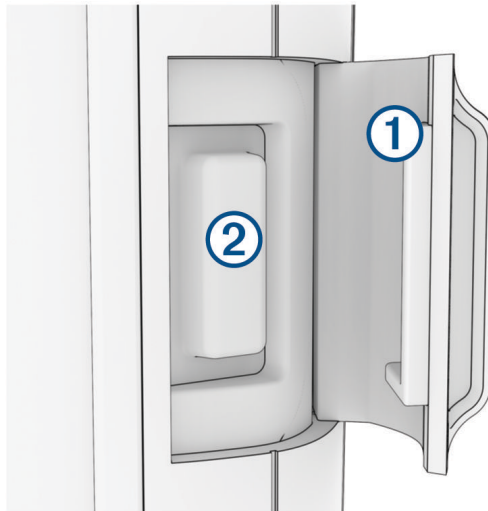

- 2 Press and hold the **SOS** button.

- 3 Wait for the SOS countdown.

The device sends a default message to the emergency response service with details about your location.

- 4 Reply to the confirmation message from the emergency response service.

Your reply lets the emergency response service know that you are capable of interacting with them during the rescue. If you do not reply, the emergency response service will still initiate a rescue.

For the first 10 minutes of your rescue, an updated location is sent to the emergency response service every minute. To conserve battery power after the first 10 minutes, an updated location is sent every 10 minutes.

TIP: You can also initiate an SOS rescue and interact with the Garmin Response team using the Garmin Messenger app. You must have an active satellite subscription to use the SOS feature in the app.

Sending a Custom SOS Message

After pressing the SOS button to initiate an SOS rescue, you can reply with a custom message using the SOS page.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **SOS > Reply**.
- 3 Select **Type Message** to compose a custom SOS message.
- 4 Select **Send Message**.

Your reply lets the emergency response service know that you are capable of interacting with them during the rescue.

Canceling an SOS Request

If you no longer need assistance, you can cancel an SOS request after it is sent to the emergency response service.

- 1 Lift the protective cap, and hold the **SOS** button.
- 2 Select **Cancel SOS**.
- 3 When prompted to confirm your cancellation request, select **Cancel SOS**.

Your device transmits the cancellation request. When you receive a confirmation message from the emergency response service, the device returns to normal operation.

Sending a Test Message

WARNING

You should send a test message outdoors before using the navigator on a trip to ensure your satellite subscription is active.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **inReach Utilities > Communications Test > Test**.
Wait while the navigator sends a test message. When you receive a confirmation message, your navigator is ready to use.

Syncing inReach Data

After you make changes to your data, such as plan changes, contacts, or check-in messages, you must sync your device using the app.

- 1 Open the paired Garmin Messenger or Garmin Explore app.
- 2 Wait while your data syncs.
TIP: You can check the connection status on the Device tab in the app.

Contacts

You can add, delete, and edit contacts on the GPSMAP 67i device.

Adding a Contact

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Contacts > New Contact**.
- 3 Select an item to edit.
- 4 Enter the new information.

Editing a Contact

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Contacts**.
- 3 Select a contact.
- 4 Select an item to edit.
- 5 Enter the new information.

Deleting a Contact

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Contacts**.
- 3 Select a contact.
- 4 Select **MENU > Delete Contact**.

Using the Main Pages

The information needed to operate this device is found on the main menu, map, compass, and trip computer pages.

Press **PAGE** or **QUIT** to scroll through the main pages.
The page displayed in the middle opens automatically.

Opening the Main Menu

The main menu gives you access to tools and setup screens for waypoints, activities, routes, and more ([Main Menu Tools, page 32](#), [Setup Menu, page 43](#)).

From any page, press **MENU** twice.

Map

▲ represents your location on the map. As you travel, ▲ moves and displays your path. Depending on your zoom level, waypoint names and symbols may appear on the map. You can zoom in on the map to see more detail. When you are navigating to a destination, your route is marked with a colored line on the map.

Navigating with the Map

1 Begin navigating to a destination ([Navigating to a Destination, page 18](#)).

2 Press **PAGE** to scroll to the map page.

A blue triangle represents your location on the map. As you travel, the blue triangle moves and displays your path.

3 Complete one or more actions:

- To view different areas of the map, press ▲, ▼, ◀, or ▶.
- To zoom in and out of the map, press + and -.
- To view more information about a waypoint on the map (represented by an icon) or other location, move the map cursor to the location, and press **ENTER**.

Measuring Distance on the Map

You can measure the distance between multiple locations.

1 Press **PAGE** to scroll to the map page.

2 Press **MENU**.

3 Select **Measure Distance**.

4 Press ▲, ▼, ◀, and ▶ to move the map cursor to a location.

The measured distance appears.

5 Press **ENTER** to select additional locations on the map.

Map Page Settings

Press **PAGE** to scroll to the map page, and press **MENU**.

Show Dashboard: Allows you to show or hide the dashboard after setting one to display on the map ([Map Settings, page 13](#)).

Stop Navigation: Stops navigating the current route.

Map Setup: Allows you to customize additional map settings ([Map Settings, page 13](#)).

Measure Distance: Allows you to measure the distance between multiple locations ([Measuring Distance on the Map, page 12](#)).

Change Data Fields: Allows you to customize the data fields on the dashboard.

Restore Defaults: Restores the map to factory default settings.

Map Settings

Press **PAGE** to scroll to the map page, and press **MENU**. Select **Map Setup**.

Map Manager: Shows the downloaded map versions. With an Outdoor Maps+ subscription, allows you to download additional maps ([Downloading Maps, page 40](#)).

Orientation: Adjusts how the map is shown on the page ([Changing the Map Orientation, page 13](#)).

Dashboard: Sets a dashboard to display on the map. Each dashboard shows different information about your route or your location.

NOTE: Your customized settings are remembered by the dashboard. Your settings are not lost when you change profiles ([Profiles, page 49](#)).

Guidance Text: Sets when the guidance text is shown on the map.

Advanced Setup: Allows you to customize advanced map settings ([Advanced Map Settings, page 13](#)).

Changing the Map Orientation

- 1 Press **PAGE** to scroll to the map page.
- 2 Press **MENU**.
- 3 Select **Map Setup > Orientation**.
- 4 Select an option:
 - Select **North Up** to show north at the top of the page.
 - Select **Track Up** to show your current direction of travel at the top of the page.
 - Select **Automotive Mode** to show an automotive perspective with the direction of travel at the top.

Advanced Map Settings

Press **PAGE** to scroll to the map page, and press **MENU**. Select **Map Setup > Advanced Setup**.

Auto Zoom: Automatically selects the appropriate zoom level for optimal use on your map. When Off is selected, you must zoom in or out manually.

Detail: Sets the amount of detail shown on the map. Showing more detail may cause the map to redraw more slowly.

Shaded Relief: Shows detail relief on the map, if available, or turns off shading.

Vehicle: Sets the position icon, which represents your position on the map. The default icon is a small blue triangle.

Zoom Levels: Adjusts the zoom level at which map items appear. The map items do not appear when the map zoom level is higher than the selected level.

Text Size: Sets the text size for map items.

Compass

When navigating, ▲ points to your destination, regardless of the direction you are moving. When ▲ points toward the top of the electronic compass, you are traveling directly toward your destination. If ▲ points any other direction, turn until it points toward the top of the compass.

Navigating with the Compass


When navigating to a destination, ▲ points to your destination, regardless of the direction you are moving.

- 1 Begin navigating to a destination ([Navigating to a Destination, page 18](#)).
- 2 Press **PAGE** to scroll to the compass page.
- 3 Turn until ▲ points toward the top of the compass, and continue moving in that direction to the destination.

Using the Course Pointer

The course pointer is most useful when you are navigating to your destination in a straight line, such as when you are navigating on water. It can help you navigate back to the course line when you go off-course to avoid obstacles or hazards.

- 1 Press **PAGE** to scroll to the compass page.
- 2 Press **MENU**.
- 3 Select **Heading Setup > Go To Line (Pointer) > Course (CDI)** to enable the course pointer.

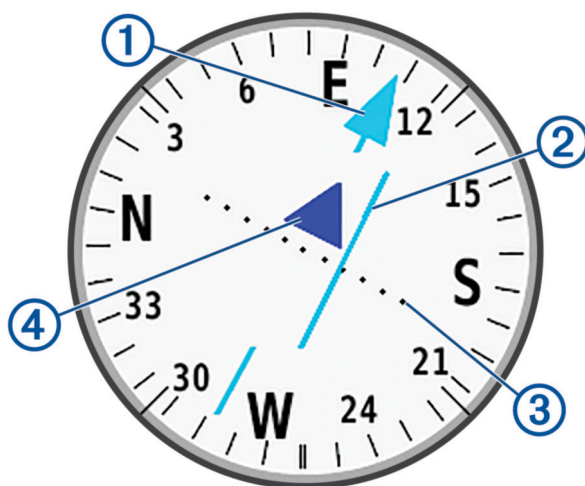

| | |
|---|--|
| ① | Course line pointer. Indicates the direction of the desired course line from your starting point to your next waypoint. |
| ② | Course deviation indicator (CDI). Indicates the location of the desired course line in relation to your location. If the CDI is aligned with the course line pointer, you are on course. |
| ③ | Course deviation distance. The dots indicate your distance off course. The distance represented by each dot is indicated by the scale in the upper-right corner. |
| ④ | To-and-from indicator. Indicates whether you are headed to or away from the next waypoint. |

Navigating with Sight 'N Go

You can point the device at an object in the distance with the compass direction locked in, project the object as a waypoint, and navigate using the object as a reference point.

- 1 Press **PAGE** to scroll to the compass page.
- 2 Press **MENU**.
- 3 Select **Sight 'N Go**.
- 4 Point the device at an object.
- 5 Select **Lock Direction > Set Course**.
- 6 Navigate using the compass.

Projecting a Waypoint from Your Current Location

You can save a new waypoint by projecting the distance from your current location.

For example, if you would like to navigate to a location you observe on the other side of a river or stream, you can project a waypoint from your current location to the observed location, and then navigate to the new location after you cross the river or stream.

- 1 Press **PAGE** to scroll to the compass page.
- 2 Press **MENU**.
- 3 Select **Sight 'N Go**.
- 4 Point the device at the new location.
- 5 Select **Lock Direction > Project Waypoint**.
- 6 Select a unit of measure.
- 7 Enter the distance, and select **Done**.
- 8 Select **Save**.

Compass Settings

Press **PAGE** to scroll to the compass page, and press **MENU**.

Sight 'N Go: Allows you to point the device at an object in the distance, and navigate using the object as a reference point ([Navigating with Sight 'N Go, page 14](#)).

Stop Navigation: Stops navigation of the current route.

Change Dashboard: Changes the theme and information displayed on the dashboard.

NOTE: Your customized settings are remembered by the dashboard. Your settings are not lost when you change profiles ([Profiles, page 49](#)).

Set Scale: Sets the scale for the distance between the dots on the course deviation indicator when navigating with Sight 'N Go.

Calibrate Compass: Allows you to calibrate the compass if you experience irregular compass behavior. For example, after moving long distances or after extreme temperature changes ([Calibrating the Compass, page 15](#)).

Heading Setup: Allows you to customize the compass heading settings ([Heading Settings, page 16](#)).

Change Data Fields: Allows you to customize the compass data fields.

Restore Defaults: Restores the compass to factory default settings.

Calibrating the Compass

Before you can calibrate the electronic compass, you must be outdoors, away from objects that influence magnetic fields, such as cars, buildings, or overhead power lines.

The GPSMAP 67i device has a 3-axis electronic compass. You should calibrate the compass after moving long distances or experiencing temperature changes.

- 1 Press **PAGE** to scroll to the compass page.
- 2 Press **MENU**.
- 3 Select **Calibrate Compass > Start**.
- 4 Follow the on-screen instructions.

Heading Settings

Press **PAGE** to scroll to the compass page, and press **MENU**. Select **Heading Setup**.

Display: Sets the directional heading on the compass to letters, degrees, or milliradians.

North Reference: Sets the north reference used on the compass ([Setting the North Reference, page 16](#)).

Go To Line (Pointer): Sets the behavior of the pointer that appears on the map. Bearing points in the direction of your destination. Course (CDI) shows your relationship to the course line leading to the destination.

Compass: Automatically switches from an electronic compass to a GPS compass when you are traveling at a higher rate of speed for a period of time.

Calibrate Compass: Allows you to calibrate the compass if you experience irregular compass behavior. For example, after moving long distances or after extreme temperature changes ([Calibrating the Compass, page 15](#)).

Setting the North Reference

You can set the directional reference used in calculating heading information.

- 1 Press **PAGE** to scroll to the compass page.
- 2 Press **MENU**.
- 3 Select **Heading Setup > North Reference**.
- 4 Select an option:
 - To set geographic north as the heading reference, select **True**.
 - To set the magnetic declination for your location automatically, select **Magnetic**.
 - To set grid north (000 degrees) as the heading reference, select **Grid**.
 - To set the magnetic variation value manually, select **User**, enter the magnetic variance, and select **Done**.

Trip Computer

The trip computer displays your current speed, average speed, trip odometer, and other helpful statistics. You can customize the trip computer layout, dashboard, and data fields.

Trip Computer Settings

Press **PAGE** to scroll to the trip computer page, and press **MENU**.

Reset: Resets all the trip computer values to zero. For accurate information, reset the trip information before beginning a trip.

Change Data Fields: Customizes the trip computer data fields.

Change Dashboard: Changes the theme and information displayed on the dashboard.

NOTE: Your customized settings are remembered by the dashboard. Your settings are not lost when you change profiles ([Profiles, page 49](#)).

Insert Page: Inserts an additional page of customizable data fields.

TIP: You can use the arrow buttons to scroll through the pages.

Remove Page: Removes an additional page of customizable data fields.

More Data: Adds additional data fields to the trip computer.

Less Data: Removes data fields from the trip computer.

Restore Defaults: Restores the trip computer to its factory default settings.

Altimeter

By default, the altimeter displays the elevation over the distance traveled. You can customize altimeter settings ([Altimeter Settings, page 17](#)). You can select any point on the plot to view details about that point.

Altimeter Plot Settings

Press **PAGE** to scroll to the altimeter page, and press **MENU**.

Reset: Resets the altimeter data, including waypoint, track, and trip data.

Altimeter Setup: Enables you to open additional altimeter settings ([Altimeter Settings, page 17](#)).

Adjust Zoom Ranges: Adjusts the zoom ranges shown on the altimeter page.

Change Data Fields: Allows you to customize the altimeter data fields.

Restore Defaults: Restores the altimeter to factory default settings.

Altimeter Settings

Press **PAGE** to scroll to the altimeter page, and press **MENU**. Select **Altimeter Setup**.

Auto Calibration: Once allows the altimeter to automatically calibrate one time when you start an activity. Continuous allows the altimeter to calibrate throughout the duration of your activity.

Barometer Mode: Variable Elevation allows the barometer to measure changes in elevation while you are moving. Fixed Elevation assumes the navigator is stationary at a fixed elevation, so the barometric pressure should only change due to weather.

Pressure Trending: Sets how the navigator records pressure data. Save Always records all pressure data, which can be helpful when you are watching for pressure fronts.

Plot Type: Records elevation changes over a period of time or distance, records barometric pressure over a period of time, or records ambient pressure changes over a period of time.

Calibrate Altimeter: Allows you to manually calibrate the barometric altimeter ([Calibrating the Barometric Altimeter, page 17](#)).

Calibrating the Barometric Altimeter

You can manually calibrate the barometric altimeter if you know the correct elevation or the correct barometric pressure.

- 1 Go to a location where the elevation or barometric pressure is known.
- 2 Press **PAGE** to scroll to the altimeter page.
- 3 Press **MENU**.
- 4 Select **Altimeter Setup > Calibrate Altimeter**.
- 5 Select **Method** to select the measurement to use in calibration.
- 6 Enter the measurement.
- 7 Select **Calibrate**.

Navigation

You can use the GPS navigation features on your device to navigate a saved activity, route, or course.

- Your device records your path as an activity. Activities use corridor navigation. When navigating a saved activity, it cannot be recalculated ([Recordings, page 23](#)).
- A route is a sequence of waypoints or locations that leads you to your destination. If you depart from the original route, the device recalculates the route and provides new directions ([Routes, page 21](#)).
- A course can have multiple destinations, and can be created point to point or on routable roads. When navigating a saved course, you can choose to navigate using the direct path with no map adjustments or recalculations, or following roads and trails with recalculations as needed. You can convert saved activities and routes to courses ([Courses, page 26](#)).

FIND Page

You can use the Find page to find a destination to navigate to. Not all FIND categories are available in all areas and maps.

Navigating to a Destination

- 1 Press **FIND**.
- 2 Select a category.
- 3 If necessary, press **MENU** to narrow the search.
- 4 If necessary, select **Spell Search**, and enter the destination name or part of the name.
- 5 Select a destination.
- 6 Select **Go**.
Your route appears as a magenta line on the map.
- 7 Navigate using the map ([Navigating with the Map, page 12](#)) or compass ([Navigating with the Compass, page 13](#)).

Stopping Navigation

- 1 Press **FIND**.
- 2 Select **Stop Navigation**.

Finding a Location Near Another Location

- 1 Press **FIND**.
- 2 Press **MENU**.
- 3 Select **Search Near**, and select an option.
- 4 Select a location.

Waypoints

Waypoints are locations you record and store in the device. Waypoints can mark where you are, where you are going, or where you have been. You can add details about the location, such as name, elevation, and depth.

You can add a .gpx file that contains waypoints by transferring the file to the GPX folder ([Transferring Files to Your Device, page 53](#)).

Saving Your Current Location as a Waypoint

- 1 Press **MARK**.
- 2 If necessary, select a field to edit information about the waypoint, such as the name or location.
- 3 Select **Save**.

Saving a Location on the Map as a Waypoint

You can save a location on the map as a waypoint.

- 1 Press **PAGE** to scroll to the map page.
- 2 Press **▲**, **▼**, **◀**, or **▶** to move the cursor to a location.
An information bar appears at the top of the screen.
- 3 Press **ENTER**.
- 4 Press **MENU**.
- 5 Select **Save as Waypoint**.

Navigating to a Waypoint

- 1 Press **FIND**.
- 2 Select **Waypoints**.
- 3 Select a waypoint.
- 4 Select **Go**.
By default, your route to the waypoint appears as a straight, colored line on the map.

Finding a Saved Waypoint

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 If necessary, press **MENU** to narrow the search.
- 4 If necessary, select an option:
 - Select **Spell Search** to search using the name of the waypoint.
 - Select **Search Near** to search near a recently found location, another waypoint, your current location, or a point on the map.
 - Select **Sort** to view the list of waypoints based on nearest distance or alphabetical order.
- 5 Select a waypoint from the list.

Editing a Waypoint

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 Select a saved waypoint.
- 4 Select an item to edit, such as the name or location.
- 5 Enter the new information, and select **Done**.

Deleting a Waypoint

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 Select a waypoint.
- 4 Press **MENU**.
- 5 Select **Delete**.

Changing the Photo for a Waypoint

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 Select a waypoint.
- 4 Press **MENU**.
- 5 Select **Change Photo**.
- 6 Select a photo.
- 7 Select **Use**.

Increasing the Accuracy of a Waypoint Location

You can refine the accuracy of a waypoint location by averaging the location data. When averaging, the device takes several GPS readings at the same location and uses the average value to provide more accuracy.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 Select a waypoint.
- 4 Press **MENU**.
- 5 Select **Average Location**.
- 6 Move to the waypoint location.
- 7 Select **Start**.
- 8 Follow the on-screen instructions.
- 9 When the confidence status bar reaches 100%, select **Save**.

For best results, collect four to eight samples for the waypoint, waiting at least 90 minutes between samples.

Projecting a Waypoint from a Saved Waypoint

You can save a new waypoint by projecting the distance and bearing from a saved waypoint to a new location.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 Select a waypoint.
- 4 Press **MENU**.
- 5 Select **Project Waypoint**.
- 6 Enter the bearing, and select **Done**.
- 7 Select a unit of measure.
- 8 Enter the distance, and select **Done**.
- 9 Select **Save**.

Moving a Waypoint on the Map

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 Select a waypoint.
- 4 Press **MENU**.
- 5 Select **Move Waypoint**.
- 6 Press **▲**, **▼**, **◀**, or **▶** to move the cursor to a new location on the map.
- 7 Select **Move**.

Finding a Location Near a Waypoint

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 Select a waypoint.
- 4 Press **MENU**.
- 5 Select **Find Near Here**.
- 6 Select a category.

The list displays locations near the selected waypoint.

Setting a Waypoint Proximity Alarm

You can add a proximity alarm for a waypoint. Proximity alarms alert you when you are within a specified range of a particular location.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 Select a waypoint.
- 4 Press **MENU**.
- 5 Select **Set Proximity**.
- 6 Enter the radius.

When you enter an area with a proximity alarm, the device sounds a tone.

Adding a Waypoint to a Route

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 Select a waypoint.
- 4 Press **MENU**.
- 5 Select **Add to Route**.
- 6 Select a route.

Repositioning a Waypoint to Your Current Location

You can change the position of a waypoint. For example, if you move your vehicle, you can change the location to your current position.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Waypoint Manager**.
- 3 Select a waypoint.
- 4 Press **MENU**.
- 5 Select **Reposition Here**.

The waypoint location changes to your current location.

Routes

A route is a sequence of waypoints or locations that leads you to your final destination. Routes are saved as GPX files on the device.

Creating a Route Using Route Planner

A route can include many waypoints, and it should include at least a starting point and one destination.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Route Planner > Create Route > Select First Point**.
- 3 Select a category.
- 4 Select the first point in the route.
- 5 Select **Use**.
- 6 Select **Select Next Point** to add additional points to the route.
- 7 Select **QUIT** to save the route.

Creating a Route Using the Map

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Route Planner > Create Route > Select First Point > Use Map**.
- 3 Press **▲**, **▼**, **◀**, or **▶** to select a point on the map.
- 4 Select **Use**.
- 5 Repeat steps 3 and 4 to select additional points on the map to add to the route (optional).
- 6 Select **QUIT**.

Navigating a Saved Route

- 1 Press **FIND**.
- 2 Select **Routes**.
- 3 Select a route.
- 4 Select **Go**.

By default, your route appears as a straight, colored line on the map.

Viewing the Active Route

- 1 Begin navigating a route ([Navigating a Saved Route, page 21](#)).
- 2 Press **MENU** twice to open the main menu.
- 3 Select **Active Route**.
- 4 Select a point in the route to view additional details.

Editing a Route

You can add, remove, or rearrange points on a route.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Route Planner**.
- 3 Select a route.
- 4 Press **MENU**.
- 5 Select **Edit Route**.
- 6 Select a point.
- 7 Select an option:
 - To view the point on the map, select **Review**.
 - To change the order of the points on the route, select **Move Up** or **Move Down**.
 - To insert an additional point on the route, select **Insert**.
The additional point is inserted before the point you are editing.
 - To remove the point from the route, select **Remove**.
- 8 Select **QUIT** to save the route.

Editing the Name of a Route

You can customize the name of a route to make it distinct.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Route Planner**.
- 3 Select a route.
- 4 Press **MENU**.
- 5 Select **Change Name**.
- 6 Enter the new name.

Viewing a Route on the Map

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Route Planner**.
- 3 Select a route.
- 4 Select the map tab.

Viewing the Elevation Plot of a Route

The elevation plot displays the elevations for a route based on your route setting. If your navigator is configured for direct routing, the elevation plot displays the straight-line elevations between route points. If your navigator is configured for on-road routing, the elevation plot displays the elevations along the roads included in your route.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Route Planner**.
- 3 Select a route.
- 4 Select the elevation plot tab.

Reversing a Route

You can switch the start and end points of your route to navigate the route in reverse.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Route Planner**.
- 3 Select a route.
- 4 Press **MENU**.
- 5 Select **Reverse Route**.

Deleting a Route

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Route Planner**.
- 3 Select a route.
- 4 Press **MENU**.
- 5 Select **Delete**.

Recordings

Your device records your path as an activity. Activities contain information about points along your recorded path, including time and location for each point. Activities are saved as FIT files on the device.

Recording Settings

Press **MENU** twice to open the main menu. Select **Setup > Recording**.

Record Method: Sets the recording method. The Auto option records points at a variable rate to create an optimum representation of your path. You can also record points at specific time or distance intervals.

Interval: Sets the recording rate. Recording points more frequently creates a more-detailed path, but fills the recording log faster.

Auto Pause: Sets the device to stop recording your path when you are not moving.

Auto Start: Sets the device to start a new recording automatically when the previous recording ends.

Activity Type: Sets the default activity type for the device.

Advanced Setup: Allows you to customize additional recording settings ([Advanced Recording Settings, page 23](#)).

Advanced Recording Settings

Press **MENU** twice to open the main menu. Select **Setup > Recording > Advanced Setup**.

Output Format: Sets the device to save the recording as a FIT or a GPX and FIT file ([File Types, page 52](#)). The FIT option records your activity with fitness information that is tailored for the Garmin Connect™ application and can be used for navigation. The FIT and GPX option records your activity as both a traditional track that can be viewed on the map and used for navigation, and as an activity with fitness information.

Auto Save: Sets an automated schedule to save your recordings. This helps organize your trips and save memory space ([Auto Save Settings, page 24](#)).

Trip Recording: Sets a trip recording option.

Recorded Data Reset: Sets a reset option. The Activity and Trip option resets the recording and trip data when you finish the active recording. The Prompted option prompts you to select the data to reset.

Auto Save Settings

Press **MENU** twice to open the main menu. Select **Setup > Recording > Advanced Setup > Auto Save**.

When Full: Automatically saves the current recording and starts a new one when the current recording is near 20,000 track points.

Daily: Automatically saves the previous day's recording and starts a new one when you turn on the device on a new day.

Weekly: Automatically saves the previous week's recording and starts a new one when you turn on the device on a new week.

Auto: Automatically saves the current recording based on its length and the number of track points taken.

Never: Never saves the current recording automatically. When the current recording nears 20,000 track points, the device filters the active track to remove redundant points while retaining the shape and history of the recording. Unfiltered points are saved in a temporary GPX and FIT file that is saved or discarded when the recording stops.

NOTE: When importing FIT activities or GPX tracks with more than 20,000 track points, the device filters the line to fit in the device memory and improve map drawing performance, while retaining the shape and history of the recording. The FIT and GPX files retain all of their original track points.

Viewing the Current Activity

By default, the device automatically starts recording your path as an activity when it is turned on and has acquired satellite signals. You can pause and start recording manually.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Recording Controls**.
- 3 Press ◀ and ▶ to view an option:
 - To control the current activity recording, select ▶▶.
 - To view data fields for the activity, select ⓘ.
 - To view the current activity on the map, select 📍.
 - To view the elevation plot for the current activity, select 📈.

Navigating Using TracBack

While recording, you can navigate back to the beginning of your activity. This can be helpful when finding your way back to camp or the trail head.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Recording Controls**.
- 3 Press ▶ to switch to the map tab.
- 4 Select **TracBack**.

The map displays your route with a magenta line, start point, and end point.
- 5 Navigate using the map ([Navigating with the Map, page 12](#)) or compass ([Navigating with the Compass, page 13](#)).


Stopping the Current Activity

- 1 From the main pages, press **ENTER**.
- 2 Select **Stop**.
- 3 Select an option:
 - To resume recording, select **Resume**.
 - To save the activity, select 📁.



TIP: You can view the saved activity by pressing **MENU** twice to view the main menu, and selecting **Recorded Activities**.

 - To delete the activity and reset the trip computer, select 🗑️.

Saving the Current Activity






- 1 Press **MENU** twice to open the main menu.
- 2 Select **Recording Controls** > .
- 3 Select an option:
 - Select **Save** to save the entire activity.
 - Press **MENU**, select **Save Portion**, and select a portion.

Viewing Saved Activity Information

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Recorded Activities**.
- 3 Select an activity.
- 4 Select  to view information about the activity, such as time and distance.
- 5 Select  to view the activity on a map.

The beginning and the end of the trail are marked by flags.

Saving a Location from an Activity as a Waypoint

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Recorded Activities**.
- 3 Select an activity.
- 4 Select .
- 5 Press , , , or  to move the cursor to a location.

An information bar appears at the top of the screen.
- 6 Press **ENTER**.
- 7 Press **MENU**.
- 8 Select **Save as Waypoint**.

Creating a Track from a Saved Activity

You can create a track from a saved activity. Tracks are saved using different file types than activities ([File Types, page 52](#)). This allows you to share your track wirelessly with other compatible Garmin devices.


- 1 Press **MENU** twice to open the main menu.
- 2 Select **Recorded Activities**.
- 3 Select an activity.
- 4 Press **MENU**.
- 5 Select **Save as Track**.

Reversing an Activity

You can switch the start and end points of your activity to navigate the activity in reverse.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Recorded Activities**.
- 3 Select an activity.
- 4 Press **MENU**.
- 5 Select **Copy Reversed**.

Navigating a Saved Activity

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Recorded Activities**.
- 3 Select an activity.
- 4 Select .
- 5 Select **Go**.

Deleting a Saved Activity

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Recorded Activities**.
- 3 Select an activity.
- 4 Press **MENU**.
- 5 Select **Delete**.

Courses

A course can have multiple destinations, and can be navigated point to point or on routable roads. Courses are saved as FIT files on the device.

Creating a Course

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Course Planner > Create Course**.
- 3 Select a course creation method:
 - To create a course with no map adjustments or recalculations, select **Direct Path**.
 - To create a course that adjusts to follow map data and recalculates as needed, select **Roads & Trails**.
- 4 Select **Select First Point**.
- 5 Select a category.
- 6 Select the first point in the course.
- 7 Select **Use**.
- 8 Select **Select Next Point** to add additional points to the course.
- 9 Select **Done**.

Creating a Course Using the Map

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Course Planner > Create Course**.
- 3 Select a course creation method:
 - To create a course with no map adjustments or recalculations, select **Direct Path**.
 - To create a course that adjusts to follow map data and recalculates as needed, select **Roads & Trails**.
- 4 Select **Select First Point > Use Map**.
- 5 Select a point on the map.
- 6 Select **Use**.
- 7 Move the map, and select additional points on the map to add to the course.
- 8 Select **Done**.

Navigating a Saved Course

- 1 Press **FIND**.
 - 2 Select **Courses**.
 - 3 Select a course.
 - 4 Select **Go**.
- By default, your route appears as a straight line on the map.

Editing a Course

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Course Planner**.
- 3 Select a course.
- 4 Press **MENU**.
- 5 Select **Edit Course**.
- 6 Select a point.
- 7 Select an option:
 - To view the point on the map, select **Review**.
 - To edit the name of the point, select **Edit Name**.
 - To edit the symbol used to represent the point, select **Edit Icon**.
 - To change the order of the points on the course, select **Move Up** or **Move Down**.
 - To insert an additional point on the course, select **Insert Before**.
The additional point is inserted before the point you are editing.
 - To receive an alert when you arrive at the point, select **Alert on Arrival**.
Points with alerts are generally destinations on your course. Points without alerts are used as shaping points on the course but are not destinations.
 - To remove the point from the course, select **Remove**.
- 8 Select **QUIT** to save the course.

Editing the Name of a Course

You can customize the name of a course to make it distinct.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Course Planner**.
- 3 Select a course.
- 4 Press **MENU**.
- 5 Select **Change Name**.
- 6 Enter the new name.

Viewing a Saved Course on the Map

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Course Planner**.
- 3 Select a course.
- 4 Select the map tab.

Viewing the Elevation Plot of a Course

The elevation plot displays the elevations for a course based on your routing settings. If your navigator is configured for direct routing, the elevation plot displays the straight-line elevations between course points. If your navigator is configured for on-road routing, the elevation plot displays the elevations along the roads included in your course.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Course Planner**.
- 3 Select a course.
- 4 Select the elevation plot tab.

Reversing a Course

You can switch the start and end points of your course to navigate the course in reverse.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Course Planner**.
- 3 Select a course.
- 4 Press **MENU**.
- 5 Select **Reverse Course**.

Creating a Track or Route from a Saved Course

You can create a track or route from a saved course. The tracks or routes can be navigated using Garmin devices that do not support course navigation.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Course Planner**.
- 3 Select a course.
- 4 Press **MENU**.
- 5 Select **Save as Track** or **Save as Route**.

Deleting a Course

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Course Planner**.
- 3 Select a course.
- 4 Press **MENU**.
- 5 Select **Delete**.

Optional Maps

You can use additional maps with the device, such as Outdoor Maps+, City Navigator®, and Garmin HuntView™ Plus detailed maps. Detailed maps may contain additional points of interest, such as restaurants or marine services. For more information, go to buy.garmin.com or contact your Garmin dealer.

Purchasing Additional Maps

- 1 Go to your device product page at www.garmin.com.
- 2 Click the **Maps** tab.
- 3 Follow the on-screen instructions.

Finding an Address

You can use optional City Navigator maps to search for addresses.

- 1 Press **FIND**.
- 2 Select **Addresses**.
- 3 Select **Search Area**, and enter the country, region, or city.
- 4 Select **Number**, and enter the house number.
- 5 Select **Street Name**, and enter the street.

Connected Features

Connected features are available for your GPSMAP 67i device when you connect the device to a wireless network or a compatible phone using Bluetooth technology. Some features require you to install the Garmin Messenger app on your phone. Some features require you to install the Garmin Explore app on your phone. Go to garmin.com/apps for more information.

Garmin Messenger: The Garmin Messenger app allows you to compose and send messages using your phone, and to sync contacts and check-in messages with your device.

Garmin Explore: The Garmin Explore app syncs and shares waypoints, courses, and collections with your device. You can also download maps to your phone for offline access.

Bluetooth sensors: Allows you to connect Bluetooth compatible sensors, such as a heart rate monitor.

Connect IQ™: Allows you to extend your device features with widgets, data fields, and apps using the Connect IQ app.

EPO Downloads: Allows you to download an extended prediction orbit file to quickly locate GPS satellites and reduce the time it takes to get an initial GPS fix using the Garmin Explore app or when connected to a Wi-Fi network.

Outdoor Maps+: Allows you to download free satellite imagery or premium map data using an Outdoor Maps+ subscription when connected to a Wi-Fi network.

Live Geocache Data: Provides paid or subscription-free services to view live geocache data from www.geocaching.com using the Garmin Explore app or when connected to a Wi-Fi network.

Tracking: Allows you to record track points and transmit them over the Iridium satellite network. You can invite contacts to follow along by sending them an inReach message from the field. This feature allows your contacts to view your live data on a tracking webpage.

Phone notifications: Displays phone notifications and messages on your GPSMAP 67i device using the Garmin Explore app.

Software Updates: Allows you to receive updates for your device software using the Garmin Explore app or when connected to a Wi-Fi network.

inReach Weather: Allows you to receive weather information through your inReach subscription. You can request a basic, extended, or marine weather forecast.

Connected Feature Requirements

Some features require a smartphone and a specific app on your smartphone.

| Feature | Connected to a Paired Smartphone with the Garmin Connect App | Connected to a Wi-Fi Network |
|------------------------------------|--|------------------------------|
| Activity uploads to Garmin Connect | Yes | Yes |
| Software updates | Yes | Yes |
| EPO downloads | Yes | Yes |
| Live geocache data | Yes | Yes |
| Weather | Yes | Yes |
| Phone notifications | Yes ¹ | No |
| Connect IQ | Yes | No |
| Outdoor Maps+ | Yes ² | Yes ³ |

¹ The device receives phone notifications from a paired iOS® phone directly, and through the Garmin Connect app on an Android™ phone.

² Required to activate your subscription.

³ Required to download maps.

Phone Notifications

Phone notifications require a compatible smartphone to be paired with the GPSMAP 67i device. When your phone receives messages, it sends notifications to your device.

Viewing Phone Notifications

Before you can view notifications, you must pair your device with your compatible phone.

- 1 Press **I** to open the status page.
- 2 Select **Notifications**.
- 3 Select a notification.

Hiding Notifications

By default, notifications appear on the screen when they are received. You can hide notifications to prevent them from appearing.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Bluetooth > Notifications > Hide**.

Managing Notifications

You can use your compatible smartphone to manage notifications that appear on your GPSMAP 67i device.

Select an option:

- If you are using an iPhone® device, go to the iOS notifications settings to select the items to show on the device.
- If you are using an Android smartphone, from the Garmin Connect app, select **Settings > Smart Notifications**.

Connecting to a Wireless Network

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Wi-Fi**.
- 3 Select the toggle switch to enable Wi-Fi technology, if necessary.
- 4 Select **Add Network**.
- 5 Select a wireless network from the list and enter the password, if necessary.

The navigator stores the network information and connects automatically when you return to this location.

Connect IQ Features

You can add Connect IQ features to your device from Garmin and other providers using the Connect IQ app. You can customize your device with data fields, widgets, and apps.

Data Fields: Allow you to download new data fields that present sensor, activity, and history data in new ways.

You can add Connect IQ data fields to built-in features and pages.

Widgets: Provide information at a glance, including sensor data and notifications.

Apps: Add interactive features to your device, such as new outdoor and fitness activity types.

Downloading Connect IQ Features

Before you can download features from the Connect IQ app, you must pair your GPSMAP 67i device with your smartphone ([Pairing Your Phone and Activating the Device, page 5](#)).

- 1 From the app store on your smartphone, install and open the Connect IQ app.
- 2 If necessary, select your device.
- 3 Select a Connect IQ feature.
- 4 Follow the on-screen instructions.

Downloading Connect IQ Features Using Your Computer

- 1 Connect the device to your computer using a USB cable.
- 2 Go to apps.garmin.com, and sign in.
- 3 Select a Connect IQ feature, and download it.
- 4 Follow the on-screen instructions.

Viewing Connect IQ Widgets

- 1 Press **I** to open the status page.
- 2 Select ◀ or ▶ to scroll through the widgets.

Data Use and History

You can view plan details and data use on the GPSMAP 67i device.

Viewing Plan Details

- 1 Press **MENU** twice to open the main menu.
- 2 Select **inReach Utilities**.
- 3 Select **Plan Details**.

Viewing Data Use

You can view the number of messages, check-in messages, and track points sent during the current billing cycle. The data use counter resets automatically at the beginning of each billing cycle.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **inReach Utilities**.
- 3 Select **Plan Usage**.

Main Menu Tools

Press **MENU** twice to open the main menu.

Active Route: Displays your active route and any upcoming waypoints ([Routes, page 21](#)).

Active Weather: Displays the current temperature, temperature forecast, weather forecast, weather radar, cloud cover, and wind conditions ([Viewing an Active Weather Forecast, page 34](#)).

Adventures: Displays a list of adventures from the BaseCamp™ application ([Garmin Adventures, page 35](#)).

Alarm Clock: Sets an audible alarm. If you are not currently using the navigator, you can set it to turn on at a specific time.

Altimeter: Displays the elevation over distance traveled ([Altimeter, page 16](#)).

Area Calculation: Allows you to calculate the size of an area ([Calculating the Size of an Area, page 36](#)).

Calculator: Displays a calculator.

Calendar: Displays a calendar.

Collections Manager: Displays collections synced from your Garmin Explore account.

Compass: Displays the compass ([Compass, page 13](#)).

Connect IQ: Displays a list of installed Connect IQ apps ([Connect IQ Features, page 30](#)).

Course Planner: Displays a list of saved courses and allows you to create new courses ([Courses, page 26](#)).

Flashlight: Turns on the flashlight ([Using the Flashlight, page 36](#)).

Geocaching: Displays a list of downloaded geocaches ([Geocaches, page 36](#)).

Hunt and Fish: Displays the predicted best dates and times for hunting and fishing at your current location.

inReach Utilities: Allows you to view details about your inReach subscription, check mail, and send a test message ([inReach Features, page 6](#)).

inReach Weather: Allows you to request basic, extended, or marine weather forecasts using your inReach subscription ([Requesting an inReach Weather Forecast, page 33](#)).

Man Overboard: Allows you to save a man overboard (MOB) location and navigate back to it ([Marking and Starting Navigation to a Man Overboard Location, page 40](#)).

Map: Displays the map ([Map, page 12](#)).

Map Manager: Shows the downloaded map versions. With an Outdoor Maps+ subscription, allows you to download additional maps ([Downloading Maps, page 40](#)).

Messages: Allows you to send messages over the Iridium satellite network ([inReach Features, page 6](#)).

Notifications: Alerts you to incoming calls, texts, social network updates, and more, based on your smartphone notification settings ([Phone Notifications, page 30](#)).

Photo Viewer: Displays saved photos.

Profile Change: Allows you to change the profile to customize your settings and data fields for a particular activity or trip ([Selecting a Profile, page 41](#)).

Proximity Alarms: Allows you to set alerts to sound within range of particular locations ([Setting a Proximity Alarm, page 41](#)).

Recorded Activities: Displays your current activity and a list of recorded activities ([Recordings, page 23](#)).

Recording Controls: Allows you to view details about the current activity and control the current activity recording ([Viewing the Current Activity, page 24](#)).

Route Planner: Displays a list of saved routes and allows you to create new routes ([Creating a Route Using Route Planner, page 21](#)).

Satellite: Displays your current GPS satellite information ([Satellite Page, page 41](#)).

Saved Tracks: Displays a list of saved tracks ([Creating a Track from a Saved Activity, page 25](#)).

Share Wirelessly: Allows you to wirelessly transfer files to another compatible device ([Sending and Receiving Data Wirelessly, page 42](#)).

Sight 'N Go: Allows you to point the navigator at an object in the distance, and navigate using the object as a reference point ([Navigating with Sight 'N Go, page 14](#)).

SOS: Allows you to initiate an SOS rescue ([inReach Features, page 6](#)).

Stopwatch: Allows you to use a timer, mark a lap, and time laps.

Sun and Moon: Displays sunrise and sunset times, along with the moon phase, based on your GPS position.

Tracking: Allows you to record track points and transmit them over the Iridium satellite network ([inReach Features, page 6](#)).

Trip Computer: Displays the trip computer ([Trip Computer, page 16](#)).

VIRB Remote: Provides camera controls when you have a VIRB® camera paired with your GPSMAP 67i navigator ([Using the VIRB Remote, page 42](#)).

Waypoint Averaging: Allows you to refine a waypoint location for more accuracy ([Increasing the Accuracy of a Waypoint Location, page 19](#)).

Waypoint Manager: Displays all waypoints saved to the device ([Waypoints, page 18](#)).

FIND: Allows you to find a destination to navigate to ([Navigating to a Destination, page 18](#)).

XERO Locations: Displays laser location information when you have a Xero® bow sight paired with your GPSMAP 67i navigator.

Requesting an inReach Weather Forecast

For the best results, you should ensure your navigator has a clear view of the sky when you request an inReach weather forecast.

Your navigator can send a message to request a basic, premium, or marine weather forecast using your inReach subscription. You can receive weather forecasts for your current location, a waypoint, GPS coordinates, or a location you choose on the map. Weather forecasts incur data charges or additional charges on your inReach subscription.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **inReach Weather > New Forecast**.
- 3 If necessary, select **Forecast Type**, and select a **Basic** or **Premium** weather forecast.
- 4 If necessary, select **Location**, and select a location.
By default, the navigator requests weather for your current location.
- 5 If necessary, select **Marine** to request a marine weather forecast.

NOTE: For best results, you should only request a marine forecast for a location away from shore and over a large body of water. Marine forecasts are not available for land locations or inland lakes.

- 6 Select **Get Forecast**.

The navigator sends a request for the forecast. It may take several minutes to receive the weather forecast data.

After the navigator finishes downloading the data, you can view the forecast at any time until all the information in the forecast has expired. You can also update the forecast at any time.

Updating an inReach Weather Forecast

You can update an inReach weather forecast that has expired or contains outdated information. Updating a forecast incurs the same data charges or additional charges as requesting a forecast.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **inReach Weather**.
- 3 Select a location with an outdated weather forecast.
- 4 Select **Update Forecast**.

The navigator requests an updated forecast. If you update the My Location forecast, the navigator requests an updated forecast for your current location. It may take several minutes to receive the updated weather forecast data.

Deleting an inReach Weather Forecast

You can delete an expired forecast or a forecast for a location that you no longer need.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **inReach Weather**.
- 3 Select a weather location.
NOTE: You cannot delete the My Location forecast.
- 4 Press **MENU**.
- 5 Select **Delete**.

Viewing an Active Weather Forecast

While your GPSMAP 67i navigator is connected to your phone or to a Wi-Fi network and has an active internet connection, it can receive detailed weather information from the internet.





- 1 Press **MENU** twice to open the main menu.
- 2 Select **Active Weather**.
The navigator automatically downloads a weather forecast for your current location.
- 3 Select a day to view an hourly forecast, if available.
- 4 Select a time interval to view detailed weather information.

Viewing an Active Weather Map

To view an active weather map, your navigator must be connected to your phone.

While your navigator is connected to a phone or Wi-Fi network with internet access, you can view a live weather map showing weather radar, cloud cover, temperature, or wind conditions.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Active Weather**.
- 3 Press ◀ or ▶ to select a weather map tab.
NOTE: Some options may not be available in all areas.

- To view a weather radar, select .
- To view cloud coverage, select .
- To view temperatures, select .
- To view wind speeds and directions, select .

The selected data appears on the map. The navigator may take a few moments to load the weather map data.

- 4 Select an option:
 - To zoom in or out on the map, press **+** or **-**.
 - To pan up, down, left, or right on the map, press ▼ to enter panning mode, and use the directional pad.

Adding an Active Weather Location

You can add a weather location to view active weather for waypoints, GPS coordinates, or other locations.

- 1 View an active weather forecast.
- 2 Press **MENU**.
- 3 Select **Manage Locations > New Location**.
- 4 Select a location.
TIP: The Weather Locations option allows you to quickly select a location for which you have previously requested an inReach weather forecast.
- 5 Select **Use**.
The navigator downloads a forecast for the selected location.

Switching the Active Weather Location

You can quickly switch between forecasts for active weather locations you have previously added.

- 1 View an active weather forecast.
- 2 Press **MENU**.
- 3 Select **Manage Locations**.
- 4 Select a location from the list.

TIP: The My Location option always downloads a forecast for your current location.

- 5 Select **Use**.

The navigator downloads the most recent forecast for the selected location.

Deleting an Active Weather Location

- 1 View an active weather forecast.
- 2 Press **MENU**.
- 3 Select **Manage Locations**.
- 4 Select a location from the list.

NOTE: You cannot delete the My Location forecast.

- 5 Select **Delete**.

Garmin Adventures

You can group related items together as an adventure. For example, you can create an adventure for your latest hiking trip. The adventure could contain the track log of the trip, photos of the trip, and geocaches you hunted. You can use BaseCamp to create and manage your adventures. For more information, go to garmin.com/basecamp.

Sending Files to and from BaseCamp

- 1 Open BaseCamp.
- 2 Connect the device to your computer.
- 3 Select an option:
 - Select an item from a connected device and drag it to My Collection or to a list.
 - Select an item from My Collection or a list and drag it to a connected device.

Creating an Adventure

Before you can create an adventure and send it to your device, you must download BaseCamp to your computer and transfer a track from your device to your computer (*[Sending Files to and from BaseCamp](#), page 35*).

- 1 Open BaseCamp.
- 2 Select **File > New > Garmin Adventure**.
- 3 Select a track, and select **Next**.
- 4 If necessary, add items from BaseCamp.
- 5 Complete the required fields to name and describe the adventure.
- 6 If you want to change the cover photo for the adventure, select **Change**, and select a different photo.
- 7 Select **Finish**.

Starting an Adventure

Before you can start an adventure, you must send an adventure from BaseCamp to your navigator ([Sending Files to and from BaseCamp, page 35](#)).

When you start a saved adventure, the navigator follows the saved track and displays shortcuts to related information along the track, such as photos and waypoints.

1 Press **MENU** twice to open the main menu.

2 Select **Adventures**.

NOTE: You may need to add this application to the main menu before you can select it ([Customizing the Main Menu, page 47](#)).

3 Select an adventure.

4 Select **Start**.

Calculating the Size of an Area

1 Press **MENU** twice to open the main menu.

2 Select **Area Calculation > Start**.

NOTE: You may need to add this application to the main menu before you can select it ([Customizing the Main Menu, page 47](#)).

3 Walk around the perimeter of the area you want to calculate.

4 Select **Calculate** when finished.

Using the Flashlight

WARNING

This device may have a flashlight that can be programmed to flash at various intervals. Consult your physician if you have epilepsy or are sensitive to bright or flashing lights.

NOTE: Using the flashlight can reduce battery life. You can reduce the brightness or flash frequency to extend the life of the battery.

1 Press **MENU** twice to open the main menu.

2 Select **Flashlight > ENTER**.

NOTE: You may need to add this application to the main menu before you can select it ([Customizing the Main Menu, page 47](#)).

3 If necessary, use the brightness slider to adjust the brightness.

4 If necessary, select a different flash type.

| | |
|-------------|--|
| 0 | No strobe, constant beam. |
| 1 through 9 | Number of strobes per second. |
| SOS | Emergency strobe. NOTE: Wi-Fi, Bluetooth, and ANT+ connections are disabled in SOS mode. |

Geocaches

Geocaching is a treasure hunting activity in which players hide or search for hidden caches using clues and GPS coordinates.

Registering Your Device at Geocaching.com

You can register your device at www.geocaching.com to search for a list of nearby geocaches, or to search live information for millions of geocaches.

- 1 Connect to a wireless network (*Connecting to a Wireless Network, page 30*) or to the Garmin Connect app (*Pairing Your Phone and Activating the Device, page 5*).
- 2 Press **MENU** twice to open the main menu.
- 3 Select **Setup > Geocaching > Register Device**.
An activation code appears.
- 4 Follow the on-screen instructions.

Connecting to Geocaching.com

After you register, you can view geocaches from www.geocaching.com on your device while connected wirelessly.

- Connect to the Garmin Connect app.
- Connect to a Wi-Fi network.

Downloading Geocaches Using a Computer

You can load geocaches manually onto your device using a computer (*Transferring Files to Your Device, page 53*). You can place the geocache files into a GPX file and import them into the GPX folder on the device. With a premium membership to geocaching.com, you can use the "pocket query" feature to load a large group of geocaches onto your device as a single GPX file.


- 1 Connect the device to your computer using a USB cable.
- 2 Go to www.geocaching.com.
- 3 If necessary, create an account.
- 4 Sign in.
- 5 Follow the instructions at geocaching.com to find and download geocaches to your device.

Searching for a Geocache

You can search the geocaches loaded on your navigator.


If you are connected to www.geocaching.com, you can search live geocache data and download geocaches.

NOTE: You can download detailed information for a limited number of geocaches per day. You can purchase a premium subscription to download more. Go to www.geocaching.com for more information.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Geocaching** > .
- 3 Press **MENU**.
- 4 Select an option:
 - To search the geocaches loaded on your navigator by name, select **Spell Search**, and enter a search term.
 - To search for geocaches near you or near another location, select **Search Near**, and select a location.
If you are connected to www.geocaching.com, the search results include live geocache data obtained by **GC Live Download**.
 - To search for live geocaches by code, select **GC Live Download > GC Code**, and enter the geocache code.
This feature allows you to download a specific geocache from www.geocaching.com when you know the geocache code.
- 5 Select a geocache.
The geocache details appear.


NOTE: If you selected a live geocache and you are connected, the navigator downloads the full geocache details to the internal storage, if necessary.

Searching for a Geocache on the Map

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Geocaching** > .
- 3 Press **MENU**.
- 4 Select **Download Geocaches** to search for and download nearby geocaches on the map.
TIP: You can select **Filter** to filter the search results.
- 5 Select a geocache.
The geocache details appear. If you selected a live geocache and you are connected to www.geocaching.com, the navigator downloads the full geocache details to the internal storage.

Filtering the Geocache List

You can filter your geocache list based on certain factors, such as the level of difficulty.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Geocaching** > .
- 3 Press **MENU**.
- 4 Select **Filter**, and select one or more options:
 - To filter by a geocache category, such as puzzle or event, select **Type**.
 - To filter by the physical size of the geocache container, select **Cache Size**.
 - To filter by **Unattempted**, **Did Not Find**, or **Found** geocaches, select **Status**.
 - To filter by the difficulty level of finding the geocache, or the difficulty of the terrain, select a level from 1 to 5.
- 5 Select **QUIT** to view the filtered geocache list.

Saving a Custom Geocache Filter

You can create and save custom filters for geocaches based on specific factors.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup** > **Geocaching** > **Filter Setup** > **Create Filter**.
- 3 Select items to filter.
- 4 Select **QUIT**.
By default, the new filter is saved automatically as Filter followed by a number. For example, Filter 2. You can edit the geocache filter to change the name ([Editing a Custom Geocache Filter, page 38](#)).

Editing a Custom Geocache Filter

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup** > **Geocaching** > **Filter Setup**.
- 3 Select a filter.
- 4 Select an item to edit.

Viewing Geocache Details

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Geocaching**.
- 3 Select a geocache.
- 4 Press **MENU**.
- 5 Select **Review Point**.
The geocache description and logs appear.

Navigating to a Geocache

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Geocaching**.
- 3 Select a geocache.
- 4 Select **Go**.

Using Hints and Clues to find a Geocache

You can use hints or clues, such as a description or coordinates, to help you find a geocache.

- 1 While navigating to a geocache, select **MENU > Geocache**.
- 2 Select an option:
 - To view details about the geocache, select **Description**.
 - To view a clue about a geocache location, select **Hint**.
 - To view latitude and longitude for a geocache, select **Coordinates**.
 - To view feedback about the geocache from previous searchers, select **Logs**.
 - To turn on chirp™ searching, select **chirp™**.

Logging the Attempt

After you have attempted to find a geocache, you can log your results. You can verify some geocaches at www.geocaching.com.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Geocaching > Log**.
- 3 Select **Found, Did Not Find, Needs Repair, or Unattempted**.
- 4 Select an option:
 - To stop logging, select **Done**.
 - To begin navigation to the geocache nearest you, select **Find Next Closest**.
 - To enter a comment about looking for the cache or about the cache itself, select **Edit Comment**, enter a comment, and select **Done**.

If you are signed in to www.geocaching.com, the log uploads to your www.geocaching.com account automatically.

chirp

A chirp is a small Garmin accessory that is programmed and left in a geocache. You can use your device to find a chirp in a geocache.

Enabling chirp Searching

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Geocaching > chirp™ Setup**.
- 3 Select **chirp™ Searching > On**.

Finding a Geocache with a chirp

- 1 With chirp searching enabled, navigate to a geocache.

When you are within approximately 10 m (33 ft.) of the geocache that contains a chirp, details about the chirp appear.
- 2 Select **Show Details**.
- 3 If necessary, select **Go** to navigate to the next stage of the geocache.

Removing Live Geocache Data from the Device

You can remove live geocache data to show only geocaches manually loaded on the device using a computer.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Geocaching > Geocaching Live > Remove Live Data**.

Live geocaching data is removed from the device and no longer appears in the geocache list.

Removing Your Device Registration From Geocaching.com

If you transfer ownership of your device, you can remove your device registration from the geocaching website.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Geocaching > Geocaching Live > Unregister Device**.

Marking and Starting Navigation to a Man Overboard Location

Before you can save a man overboard (MOB) location and navigate back to it, you must add the Man Overboard application ([Customizing the Main Menu, page 47](#)).

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Man Overboard > Start**.
The map opens, showing the route to the MOB location. By default, the route appears as a magenta line.
- 3 Navigate using the map ([Navigating with the Map, page 12](#)) or compass ([Navigating with the Compass, page 13](#)).

Downloading Maps

Before you can download maps to your navigator, you must connect to a wireless network ([Connecting to a Wireless Network, page 30](#)).

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Map Manager > Outdoor Maps+**.
NOTE: You may need to add this application to the main menu before you can select it ([Customizing the Main Menu, page 47](#)).
- 3 Select an option:
 - To download free satellite map data without a subscription, select **Add Satellite Imagery**.
 - To download premium maps and activate your Outdoor Maps+ subscription for your navigator, select **Check Subscription**.
NOTE: Go to garmin.com/outdoormaps for information about purchasing a subscription.
- 4 Press **OK**, and select **Layer Information** to view details about the map layers (optional).
- 5 From the map, complete one or more actions:
 - To view different areas of the map, press **▲**, **▼**, **◀**, or **▶**.
 - To zoom in and out of the map, press **+** and **-**.
- 6 Select **Select Area > Download**.
An estimated download size appears for the map. You should verify your navigator has enough available storage space for the map.
- 7 Select **Name** to edit the name of the map download (optional).
- 8 Press **MENU**.
- 9 Select **Configure Maps**.
- 10 Select a toggle switch to enable or disable map layers.

Enabling Maps

You can enable map products installed on your device.

- 1 Select **Map Manager > Outdoor Maps+ > MENU > Configure Maps**.
- 2 Select the toggle switch to enable each installed map.
- 3 Select the map name to change the raster brightness level (optional).

Deleting a Map

You can remove maps to increase the available device storage.

- 1 Select **Map Manager > Outdoor Maps+**.
- 2 Select a map.
- 3 Select **MENU > Delete**.

Selecting a Profile

When you change activities, you can change the setup of the device by changing the profile.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Profile Change**.
NOTE: You may need to add this application to the main menu before you can select it ([Customizing the Main Menu, page 47](#)).
- 3 Select a profile.

Setting a Proximity Alarm

Proximity alarms alert you when you are within a specified range of a particular location.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Proximity Alarms > Create Alarm**.
NOTE: You may need to add this application to the main menu before you can select it ([Customizing the Main Menu, page 47](#)).
- 3 Select a category.
- 4 Select a location.
- 5 Select **Use**.
- 6 Enter a radius.

When you enter an area with a proximity alarm, the device sounds a tone.

Editing or Deleting a Proximity Alarm

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Proximity Alarms**.
- 3 Select an alarm.
- 4 Select an option:
 - To edit the radius, select **Change Radius**.
 - To view the alarm on a map, select **View Map**.
 - To delete the alarm, select **Delete**.

Satellite Page

The satellite page shows your current location, GPS accuracy, satellite locations, and signal strength.

You can select ◀ or ▶ to view additional satellite constellations when they are enabled.

GPS Satellite Settings

Press **MENU** twice to open the main menu. Select **Satellite**. Press **MENU**.

Use With GPS On: Allows you to turn the GPS on.

Track Up: Indicates whether satellites are shown with their rings oriented with north toward the top of the screen, or oriented with your current track toward the top of the screen.

Single Color: Allows you to select whether the satellite page is displayed in multicolor or single color format.

Set Location On Map: Allows you to mark your current location on the map. You can use this location to create routes or search for saved locations.

AutoLocate Position: Calculates your GPS position using the Garmin AutoLocate® feature.

Satellite Setup: Sets the satellite system options ([Satellite Settings, page 44](#)).

Sending and Receiving Data Wirelessly

Before you can share data wirelessly, you must be within 3 m (10 ft.) of a compatible Garmin device.



Your navigator can send and receive data wirelessly when connected with a compatible Garmin device using ANT+ technology. You can share waypoints, geocaches, routes, tracks, and more.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Share Wirelessly**.
- 3 Select an option:
 - Select **Send**, and select a type of data.
 - Select **Receive** to receive data from another device. The other compatible device must be attempting to send data.
- 4 Follow the on-screen instructions.

Using the VIRB Remote

Before you can use the VIRB remote function, you must enable the remote setting on your VIRB camera. See the *VIRB Series Owner's Manual* for more information.

The VIRB remote function allows you to control your VIRB camera using your navigator.

- 1 Turn on your VIRB camera.
- 2 On your GPSMAP 67i navigator, select **VIRB Remote**.
NOTE: You may need to add this application to the main menu before you can select it ([Customizing the Main Menu, page 47](#)).
- 3 Wait while the navigator connects to your VIRB camera.
- 4 Select an option:
 - To record video, select .
 - To take a photograph, select .

Customizing the Device

Customizing the Data Fields

You can customize the data fields displayed on each main page.

- 1 Open the page for which you will change the data fields.
- 2 Press **MENU**.
- 3 Select **Change Data Fields**.
- 4 Select a data field.
- 5 Follow the on-screen instructions.

Setup Menu

Press **MENU** twice to open the main menu. Select **Setup**.

System: Allows you to customize system settings ([System Settings, page 43](#)).

Display: Adjusts the backlight and display settings ([Display Settings, page 44](#)).

Bluetooth: Pairs your navigator to a phone, and allows you to customize the Bluetooth settings ([Bluetooth Settings, page 44](#)).

Wi-Fi: Allows you to connect to wireless networks ([Wi-Fi Settings, page 44](#)).

Tracking: Allows you to customize the Tracking settings ([inReach Tracking Settings, page 9](#)).

Messages: Allows you to customize the settings for messages ([Messages Settings, page 8](#)).

Contacts: Allows you to add, delete, and edit contacts ([Contacts, page 11](#)).

Map: Sets the map appearance ([Map Settings, page 13](#)).

Recording: Allows you to customize activity recording settings ([Recording Settings, page 23](#)).

Routing: Allows you to customize how the device calculates routes for each activity ([Routing Settings, page 45](#)).

Expedition Mode: Allows you to customize settings for turning on expedition mode ([Turning On Expedition Mode, page 45](#)).

Waypoints: Allows you to enter a custom prefix for automatically named waypoints.

Tones: Sets the device sounds, such as key tones and alerts ([Setting the Device Tones, page 45](#)).

Heading: Allows you to customize the compass heading settings ([Heading Settings, page 16](#)).

Altimeter: Allows you to customize the altimeter settings ([Altimeter Settings, page 17](#)).

Geocaching: Allows you to customize your geocache settings ([Geocaching Settings, page 46](#)).

Sensors: Pairs wireless sensors with your navigator ([Pairing Your Wireless Sensors, page 46](#)).

Fitness: Allows you to customize settings for recording fitness activities ([Fitness Settings, page 46](#)).

Marine: Sets the appearance of marine data on the map ([Marine Settings, page 47](#)).

Menus: Allows you to customize the page sequence and main menu ([Menu Settings, page 47](#)).

Position Format: Sets the geographical position format and datum options ([Position Format Settings, page 48](#)).

Units: Sets the units of measure used on the device ([Changing the Units of Measure, page 49](#)).

Time: Adjusts the time settings ([Time Settings, page 49](#)).

Profiles: Allows you to customize and create new activity profiles ([Profiles, page 49](#)).

Reset: Allows you to reset user data and settings ([Resetting Data and Settings, page 50](#)).

About: Displays device information, such as the unit ID, software version, regulatory information, and license agreement ([Viewing E-label Regulatory and Compliance Information, page 54](#)).

System Settings

Press **MENU** twice to open the main menu. Select **Setup > System**.

Satellite: Sets the satellite system options ([Satellite Settings, page 44](#)).

Text Language: Sets the text language on the device.

NOTE: Changing the text language does not change the language of user-entered data or map data, such as street names.

USB Mode: Sets the device to use MTP (media transfer protocol) or Garmin mode when connected to a computer.

RINEX Logging: Enables the device to write Receiver Independent Exchange Format (RINEX) data to a system file. RINEX is a data interchange format for raw satellite navigation system data.

Satellite Settings

Press **MENU** twice to open the main menu. Select **Setup > System > Satellite**.

Satellite System: Sets the satellite system to GPS only, multiple satellite systems, or Demo Mode (GPS off).

Multi-Band: Enables the use of multi-band systems on the GPSMAP 67i device.

NOTE: Multi-band systems use multiple frequency bands and allow for more consistent track logs and improved positioning when using the device in challenging environments.

Display Settings

Press **MENU** twice to open the main menu. Select **Setup > Display**.

Backlight Timeout: Adjusts the length of time before the backlight turns off.

Always On Display: Saves the battery power and prolongs the battery life by turning off the screen when the backlight times out ([Turning Off the Screen, page 44](#)).

Appearance: Changes the appearance of the display background and selection highlight ([Changing the Color Mode, page 44](#)).

Screen Capture: Allows you to save the image on the device screen.

Review Text Size: Changes the size of the text on the screen.

Turning Off the Screen

To save battery power and prolong the battery life, you can turn off the screen automatically when the backlight times out.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Display > Always On Display > Off**.

You can press **ⓘ** to turn on the screen.

Changing the Color Mode

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Display > Appearance**.
- 3 Select an option:
 - To allow the device to display day or night colors automatically based on the time of day, select **Mode > Auto**.
 - To use a light background, select **Mode > Day**.
 - To use a dark background, select **Mode > Night**.
 - To customize the color scheme for daytime, select **Day Color**.
 - To customize the color scheme for nighttime, select **Night Color**.

Bluetooth Settings

Press **MENU** twice to open the main menu. Select **Setup > Bluetooth**.

Status: Enables Bluetooth wireless technology, and shows current connection status.

Notifications: Shows or hides phone notifications.

Forget Phone: Removes the connected phone from the list of paired phones. This option is available only after a phone is paired.

Wi-Fi Settings

Press **MENU** twice to open the main menu. Select **Setup > Wi-Fi**.

Wi-Fi: Enables wireless internet technology.

Add Network: Allows you to scan for and connect to a wireless internet network.

Routing Settings

The available routing settings vary based on whether Direct Routing is enabled or disabled.

Press **MENU** twice to open the main menu. Select **Setup > Routing**.

Direct Routing: Enables or disables direct routing. Direct routing calculates the most direct route possible to the destination.

Activity: Sets an activity while routing. The navigator calculates routes optimized for the type of activity you are doing.

Lock On Road: Locks the blue triangle, which represents your position on the map, onto the nearest road. This is most useful when driving or navigating on roads.

Course Navigation: Sets the method used to calculate courses and routes. The Direct Path option is used for point-to-point navigation without recalculation. The Roads & Trails option adjusts the course to follow map data, recalculating as needed.

Route Transitions: Sets how the navigator routes from one point on the route to the next. This setting is available only for some activities. The Distance option routes you to the next point on the route when you are within a specified distance of your current point.

Advanced Setup: Allows you to customize additional routing settings ([Advanced Routing Settings, page 45](#)).

Advanced Routing Settings

Press **MENU** twice to open the main menu. Select **Setup > Routing > Advanced Setup**.

Calculation Method: Sets the method used to calculate your route.

Off Route Recalculation: Sets recalculation preferences when navigating away from an active route.

Avoidance Setup: Sets the types of roads, terrain, and transportation methods to avoid while navigating.

Turning On Expedition Mode

You can use expedition mode to prolong the battery life. In expedition mode, the screen shuts off, the device enters low power mode, and the device collects fewer GPS track points.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Expedition Mode**.
- 3 Select an option:
 - To enable the device to prompt you to turn on expedition mode when you turn off the device, select **Prompted**.
 - To automatically turn on expedition mode after two minutes of inactivity, select **Auto**.
 - To never turn on expedition mode, select **Never**.

In expedition mode, the green LED flashes occasionally.

Setting the Device Tones

You can customize tones for messages, keys, turn warnings, and alarms.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Tones**.
- 3 Select **Sounds**.
- 4 Select an option:
 - To enable both tones and vibration, select **Tone & Vibration**.
 - To enable only tones, select **Tone**.
 - To enable only vibration, select **Vibration**.
 - To disable tones and vibration, select **Off**.
- 5 Select **Volume** to set the tone volume.
- 6 Select a tone for each audible type.

Geocaching Settings

Press **MENU** twice to open the main menu. Select **Setup > Geocaching**.

Geocaching Live: Allows you to remove live geocache data from your device and remove your device registration from geocaching.com (*Removing Live Geocache Data from the Device, page 40, Removing Your Device Registration From Geocaching.com, page 40*).

Geocache Style: Sets the device to display the geocache list using names or codes.

chirp™ Setup: Allows you to enable chirp searching and program a chirp accessory (*chirp, page 39*).

Filter Setup: Allows you to create and save custom filters for geocaches (*Saving a Custom Geocache Filter, page 38*).

Found Geocaches: Allows you to edit the number of geocaches found. This number automatically increases when you log a find (*Logging the Attempt, page 39*).

Proximity Alarm: Allows you to set an alert to sound when you are within a specified range of a geocache.

Pairing Your Wireless Sensors

Before you can pair, you must put on the heart rate monitor or install the sensor.

Your navigator can be paired with wireless sensors using ANT+ or Bluetooth technology. For example, you can connect a heart rate monitor with your navigator. For more information about compatibility and purchasing optional sensors, go to buy.garmin.com.

- 1 Bring the navigator within 3 m (10 ft.) of the sensor.

NOTE: Stay 10 m (33 ft.) away from other sensors while pairing.

- 2 Press **MENU** twice to open the main menu.
- 3 Select **Setup > Sensors**.
- 4 Select your sensor type.
- 5 Select **Search For New**.

When the sensor is paired with your navigator, the sensor status changes from Searching to Connected.

Fitness Settings

Press **MENU** twice to open the main menu. Select **Setup > Fitness**.

Auto Lap: Sets the navigator to automatically mark the lap at a specific distance.

User: Sets your user profile information. The navigator uses this information to calculate accurate training data in Garmin Connect.

HR Zones: Sets the five heart rate zones and your maximum heart rate for fitness activities.

Marking Laps by Distance

You can use the Auto Lap® feature to automatically mark the lap at a specific distance. This feature is helpful for comparing your performance over different parts of an activity.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Fitness > Auto Lap**.
- 3 Enter a value, and select **Done**.

Marine Settings

Press **MENU** twice to open the main menu. Select **Setup > Marine**.

Marine Chart Mode: Sets the type of chart the device uses when displaying marine data. Nautical displays various map features in different colors so the marine POIs are more readable and so the map reflects the drawing scheme of paper charts. Fishing (requires marine maps) displays a detailed view of bottom contours and depth soundings and simplifies map presentation for optimal use while fishing.

Appearance: Sets the appearance of marine navigation aids on the map.

Marine Alarm Setup: Sets alarms for when you exceed a specified drift distance while anchored, when you are off course by a specified distance, and when you enter water of a specific depth ([Setting Up Marine Alarms, page 47](#)).

Marine Speed Filter: Averages the speed of your vessel over a short period of time for smoother speed values.

Setting Up Marine Alarms

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Marine > Marine Alarm Setup**.
- 3 Select an alarm type.
- 4 Enter a distance, and select **Done**.

Menu Settings

Press **MENU** twice to open the main menu. Select **Setup > Menus**.

Menu Style: Changes the appearance of the main menu.

Main Menu: Allows you to move, add, and delete items in the main menu ([Customizing the Main Menu, page 47](#)).

Page Sequence: Allows you to move, add, and delete items in the page sequence ([Changing the Page Sequence, page 48](#)).

Setup: Changes the order of items in the setup menu.

Find: Changes the order of items in the find menu.

Customizing the Main Menu


You can move, add, and delete items in the main menu.

- 1 Press **MENU** twice to open the main menu.
- 2 Select an option:
 - To add a new item to the end of the list, select **Add Page**, select a category, and select an option.
 - To change the placement of an item in the list, press **MENU**, select **Change Item Order**, select a menu item, and select **Move**.
 - To add a new item to the list before the selected item, press **MENU**, select **Change Item Order**, select a menu item, and select **Insert**.
 - To delete an item from the list, press **MENU**, select **Change Item Order**, select a menu item, and select **Remove**.

Changing the Page Sequence

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Menus > Page Sequence > Edit Page Sequence**.
- 3 Select a page.
- 4 Select an option:
 - To move the page up or down in the list, select **Move**.
 - To add a new page to the page sequence, select **Insert**, and select a category.
 - To remove a page from the page sequence, select **Remove**.

TIP: You can press **PAGE** to view the page sequence.

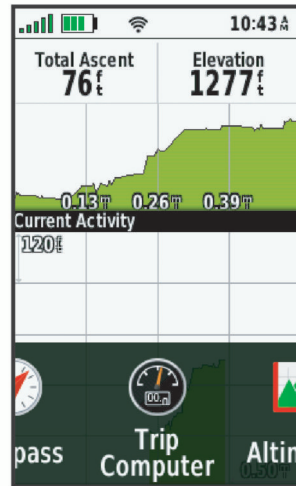

Configuring the Page Ribbon Display

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Menus > Page Sequence > Page Ribbon Display**.
- 3 Select an option:
 - To disable the page ribbon display, select **Off**.
 - To set the speed at which a page opens after being selected in the page ribbon display, select **Slow** or **Fast**.

Position Format Settings

NOTE: You should not change the position format or the map datum coordinate system unless you are using a map or chart that specifies a different position format.

Press **MENU** twice to open the main menu. Select **Setup > Position Format**.

Position Format: Sets the position format in which a location reading appears.

Map Datum: Sets the coordinate system on which the map is structured.

Map Spheroid: Shows the coordinate system the device is using. The default coordinate system is WGS 84.

Changing the Units of Measure

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Units**.
- 3 Select an option:
 - To change the unit of measure for speed and distance, select **Speed/Distance**.
 - To change the unit of measure for vertical speed, select **Vertical Speed**.
 - To change the unit of measure for elevation, select **Elevation > Elevation**.
 - To change the unit of measure for depth, select **Elevation > Depth**.
 - To change the unit of measure for temperature, select **Temperature**.
 - To change the unit of measure for pressure, select **Pressure**.
- 4 Select a unit of measure.

Time Settings

Press **MENU** twice to open the main menu. Select **Setup > Time**.

Time Format: Sets the device to show time in a 12-hour or 24-hour format.

Time Zone: Sets the time zone for the device. The Automatic option sets the time zone automatically based on your GPS position.

Daylight Saving Time: Sets the device to use daylight saving time.

Profiles

Profiles are a collection of settings that optimize your device based on how you are using it. For example, the settings and views are different when you use the device for hunting than when geocaching.

When you are using a profile and you change settings, such as data fields or units of measurement, the changes are saved automatically as part of the profile.

Creating a Custom Profile

If none of the preloaded profiles fit the needs of your activity or trip, you can create a custom profile with its own unique settings and data fields.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Profiles > Create Profile > OK**.

The new profile is created with a default name and number. For example, Profile 10. The new profile becomes the active profile.
- 3 Select the new profile.
- 4 Select an option:
 - Customize the default profile name ([Editing a Profile Name, page 49](#)).
 - Customize your settings as necessary ([Setup Menu, page 43](#)).
 - Customize the data fields as necessary ([Customizing the Data Fields, page 42](#)).

Any changes you make to the settings and data fields are automatically saved to the active profile.

Editing a Profile Name

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Profiles**.
- 3 Select a profile.
- 4 Select **Edit Name**.
- 5 Enter the new name.

Deleting a Profile

NOTE: You cannot delete a profile while it is in use.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Profiles**.
- 3 Select a profile.
- 4 Select **Delete**.

Resetting Data and Settings

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup > Reset**.
- 3 Select an option:
 - To reset data specific to a trip, such as distance and averages, select **Reset Trip Data**.
 - To delete all saved waypoints, select **Delete All Waypoints**.
 - To clear the data recorded since you started your current activity, select **Clear Current Activity**.
NOTE: The device continues to record new data for the current activity.
 - To reset only the settings for your current activity profile to the factory default values, select **Reset Profile Settings**.
 - To reset all device settings and profiles to the factory default values, select **Reset All Settings**.
NOTE: Resetting all settings clears all geocaching activity from your device. It does not remove your saved user data, such as tracks and waypoints.
 - To remove all saved user data and reset all settings on the device to the factory default values, select **Delete All**.
NOTE: Deleting all settings removes your personal data, history, and saved user data, including tracks and waypoints.

Restoring Default Page Settings

- 1 Press **PAGE** or **QUIT** to scroll to the page for which you will restore the settings.
- 2 Press **MENU**.
- 3 Select **Restore Defaults**.

Device Information

Product Updates

On your computer, install Garmin Express™ (www.garmin.com/express). On your phone, install the Garmin Explore app.

This provides easy access to these services for Garmin devices:

- Software updates
- Map updates
- Data uploads to Garmin Explore
- Product registration

Setting Up Garmin Express

- 1 Connect the device to your computer using a USB cable.
- 2 Go to garmin.com/express.
- 3 Follow the on-screen instructions.


Getting More Information

You can find more information about this product on the Garmin website.

- Go to support.garmin.com for additional manuals, articles, and software updates.
- Go to buy.garmin.com, or contact your Garmin dealer for information about optional accessories and replacement parts.

Attaching the Carabiner Clip

- 1 Position the carabiner clip ① in the slots on the mounting spine ② of the device.

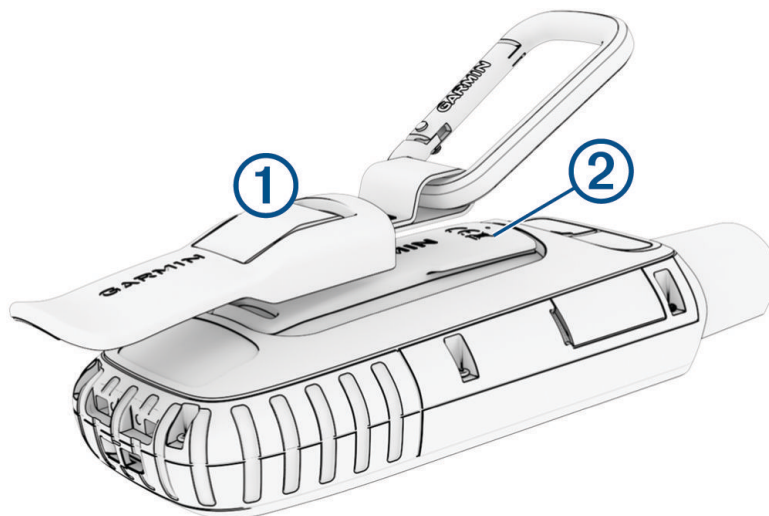


- 2 Slide the carabiner clip up until it locks in place.

Removing the Carabiner Clip

Lift up on the bottom of the carabiner clip, and slide the carabiner clip off the mounting spine.

Attaching a Lanyard

- 1 Insert the loop of the lanyard through the slot in the device.

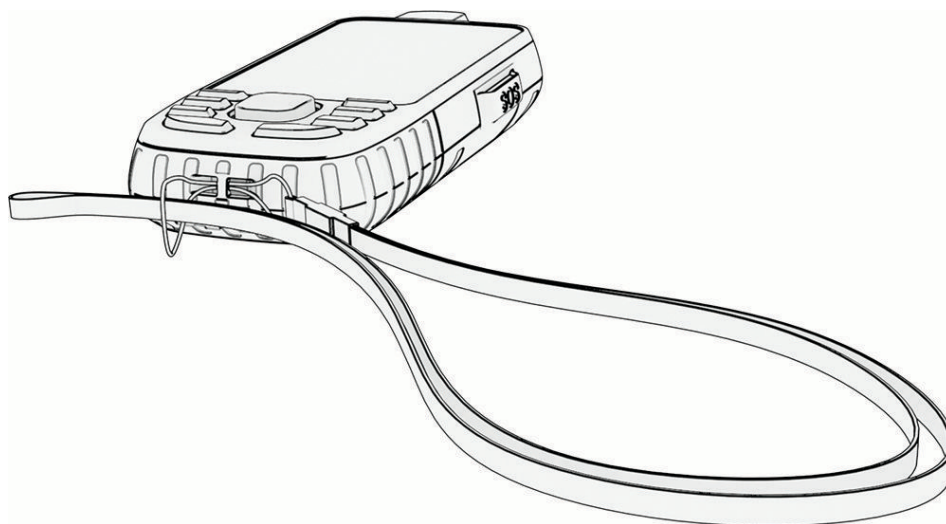

- 2 Thread the other end of the lanyard through the loop, and pull it tight.
- 3 If necessary, attach the lanyard to your clothing or backpack to tether it during an activity.

Device Care

NOTICE

Avoid chemical cleaners, solvents, and insect repellents that can damage plastic components and finishes.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

The device is water resistant to IEC Standard 60529 IPX7. It can withstand accidental immersion in 1 meter of water for 30 minutes. Prolonged submersion can cause damage to the device. After submersion, be certain to wipe dry and air dry the device before using or charging.

Thoroughly rinse the device with fresh water after exposure to chlorinated or salt water environments.

Cleaning the Device

- 1 Wipe the device using a cloth dampened with a mild detergent solution.
- 2 Wipe it dry.

Data Management

File Types

The handheld device supports these file types:

- Files from Garmin Explore.
- GPX route, track, and waypoint files.
- GPX geocache files ([Downloading Geocaches Using a Computer, page 37](#)).
- JPEG photo files.
- GPI custom POI files from the Garmin POI Loader. Go to www.garmin.com/products/poiloader.
- FIT files for exporting to Garmin Connect.

Installing a Memory Card

You can install a microSD memory card, up to 32 GB, for additional storage or pre-loaded maps.

- 1 Lift the weather cap on the side of the device ①.



- 2 Insert the memory card with the gold contacts facing the front of the device.

Connecting the Device to Your Computer

NOTICE

To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

- 1 Pull up the weather cap from the USB port.
- 2 Plug one end of the cable into the USB port on the device.
- 3 Plug the other end of the cable into a computer USB port.

Depending on your computer operating system, the device and memory card (optional) appear as either portable devices, removable drives, or removable volumes.

NOTE: Mac® operating systems do not detect the device by default. You must use Garmin Express software to interact with files on your device.

Transferring Files to Your Device

- 1 Connect the device to your computer.

Depending on your computer operating system, the device and memory card (optional) appear as either portable devices, removable drives, or removable volumes.

NOTE: Mac operating systems do not detect the device by default. You must use Garmin Express software to interact with files on your device.

- 2 On your computer, open the file browser.
- 3 Select a file.
- 4 Select **Edit > Copy**.
- 5 Open the portable device, drive, or volume for the device or memory card.
- 6 Browse to a folder.

NOTE: Most file types have a named folder within the Garmin folder.

- 7 Select **Edit > Paste**.

The file appears in the list of files in the device memory or on the memory card.

Deleting Files

NOTICE

If you do not know the purpose of a file, do not delete it. Your device memory contains important system files that should not be deleted.

- 1 Open the **Garmin** drive or volume.
- 2 If necessary, open a folder or volume.
- 3 Select a file.
- 4 Press the **Delete** key on your keyboard.

NOTE: If you are using an Apple® computer, you must empty the Trash folder to completely remove the files.

Disconnecting the USB Cable

If your device is connected to your computer as a removable drive or volume, you must safely disconnect your device from your computer to avoid data loss. If your device is connected to your Windows® computer as a portable device, it is not necessary to safely disconnect the device.

- 1 Complete an action:
 - For Windows computers, select the **Safely Remove Hardware** icon in the system tray, and select your device.
 - For Apple computers, select the device, and select **File > Eject**.
- 2 Disconnect the cable from your computer.

Specifications

| | |
|-----------------------------|---|
| Battery type | Rechargeable, built-in lithium-ion battery |
| Battery life | Up to 165 hr. with inReach technology enabled with 10 minute tracking interval Up to 180 hr. in GPS mode Up to 425 hr. in expedition mode with inReach technology enabled Up to 840 hr. in expedition mode |
| Water rating | IEC 60529 IPX7 ⁴ |
| Operating temperature range | From -20° to 60°C (from -4° to 140°F) |
| Charging temperature range | From 0° to 45°C (from 32° to 113°F) |
| Compass-safe distance | 17.5 cm (7 in.) |
| Wireless frequency/protocol | 2.4 GHz @ 16.74 dBm maximum 1.6 GHz @ 33.5 dBm maximum |
| EU SAR (body) | 1.07 W/kg simultaneous |

Viewing E-label Regulatory and Compliance Information

The label for this device is provided electronically. The e-label may provide regulatory information, such as identification numbers provided by the FCC or regional compliance markings, the IMEI number, as well as applicable product and licensing information.

- 1 Press **MENU** twice to open the main menu.
- 2 Select **Setup**.
- 3 Select **About**.

⁴ The device withstands incidental exposure to water of up to 1 m for up to 30 min. For more information, go to www.garmin.com/waterrating.

Appendix

Data Fields

Some data fields require you to be navigating or require wireless accessories to display data.

24 hr. Max. Temperature: The maximum temperature recorded in the last 24 hours from a compatible temperature sensor.

24 hr. Min. Temperature: The minimum temperature recorded in the last 24 hours from a compatible temperature sensor.

Accuracy of GPS: The margin of error for your exact location. For example, your GPS location is accurate to within +/- 3.65 m (12 ft.).

Activity Distance: The distance traveled for the current track or activity.

Alarm Timer: The current time of the countdown timer.

Ambient Pressure: The uncalibrated ambient pressure.

Ascent - Average: The average vertical distance of ascent since the last reset.

Ascent - Maximum: The maximum rate of ascent in feet per minute or meters per minute since the last reset.

Ascent - Total: The total elevation distance ascended during the activity or since the last reset.

Automotive Turn: The direction of the next turn in the route. You must be navigating for this data to appear.

Average Cadence: Cycling. The average cadence for the current activity.

Average HR %Max.: The average percentage of maximum heart rate for the current activity.

Average Lap: The average lap time for the current activity.

Avg. HR: The average heart rate for the current activity.

Barometer: The calibrated current pressure.

Battery Level: The remaining battery power.

Bearing: The direction from your current location to a destination. You must be navigating for this data to appear.

Cadence: Cycling. The number of revolutions of the crank arm. Your device must be connected to a cadence accessory for this data to appear.

Calories: The amount of total calories burned.

Compass Heading: The direction you are moving based on the compass.

Course: The direction from your starting location to a destination. Course can be viewed as a planned or set route. You must be navigating for this data to appear.

Current Lap: The stopwatch time for the current lap.

Date: The current day, month, and year.

Depth: The depth of the water. Your device must be connected to a NMEA® 0183 device capable of acquiring the water depth.

Descent - Average: The average vertical distance of descent since the last reset.

Descent - Maximum: The maximum rate of descent in meters per minute or feet per minute since the last reset.

Descent - Total: The total elevation distance descended during the activity or since the last reset.

Distance to Dest.: The remaining distance to the final destination. You must be navigating for this data to appear.

Distance to Next: The remaining distance to the next waypoint on the route. You must be navigating for this data to appear.

Elapsed Activity Time: The total time recorded. For example, if you start the timer and run for 10 minutes, then stop the timer for 5 minutes, then start the timer and run for 20 minutes, your elapsed time is 35 minutes.

Elevation: The altitude of your current location above or below sea level.

Elevation Above Ground: The altitude of your current location above ground level.

Elevation - Maximum: The highest elevation reached since the last reset.

Elevation - Minimum: The lowest elevation reached since the last reset.

ETA at Destination: The estimated time of day when you will reach the final destination (adjusted to the local time of the destination). You must be navigating for this data to appear.

ETA at Next: The estimated time of day when you will reach the next waypoint on the route (adjusted to the local time of the waypoint). You must be navigating for this data to appear.

Glide Ratio: The ratio of horizontal distance traveled to the change in vertical distance.

Glide Ratio to Dest.: The glide ratio required to descend from your current position to the destination elevation. You must be navigating for this data to appear.

GPS Elevation: The altitude of your current location using GPS.

GPS Heading: The direction you are moving based on GPS.

GPS Signal Strength: The strength of the GPS satellite signal.

Grade: The calculation of rise (elevation) over run (distance). For example, if you climb 3 m (10 ft.) for every 60 m (200 ft.) you travel, the grade is 5%.

Heading: The direction you are moving.

Heart Rate: Your heart rate in beats per minute (bpm). Your device must be connected to a compatible heart rate monitor.

Heart Rate - %Max.: The percentage of maximum heart rate.

Heart Rate Zone: The performance zone of your current heart rate (1 to 5). The default zones are based on your user profile and maximum heart rate (220 minus your age).

Lap Ascent: The vertical distance of ascent for the current lap.

Lap Cadence: Cycling. The average cadence for the current lap.

Lap Descent: The vertical distance of descent for the current lap.

Lap Distance: The distance traveled for the current lap.

Lap Heart Rate Percent: The average percentage of maximum heart rate for the current lap.

Lap HR: The average heart rate for the current lap.

Laps: The number of laps completed for the current activity.

Lap Speed: The average speed for the current lap.

Last Lap Ascent: The vertical distance of ascent for the last completed lap.

Last Lap Cadence: Cycling. The average cadence for the last completed lap.

Last Lap Descent: The vertical distance of descent for the last completed lap.

Last Lap Distance: The distance traveled for the last completed lap.

Last Lap HR: The average heart rate for the last completed lap.

Last Lap Speed: The average speed for the last completed lap.

Last Lap Time: The stopwatch time for the last completed lap.

Location (lat/lon): The current position in latitude and longitude, regardless of the selected position format setting.

Location (selected): The current position using the selected position format setting.

Location of Dest.: The position of your final destination. You must be navigating for this data to appear.

None: This is a blank data field.

Odometer: A running tally of the distance traveled for all trips. This total does not clear when resetting the trip data.

Off Course: The distance to the left or right by which you have strayed from the original path of travel. You must be navigating for this data to appear.

Pointer: An arrow points in the direction of the next waypoint or turn. You must be navigating for this data to appear.

Speed: The current rate of travel.

Speed Limit: The reported speed limit for the road. Not available in all maps and in all areas. Always rely on posted road signs for actual speed limits.

Speed - Maximum: The highest speed reached since the last reset.

Speed - Moving Avg.: The average speed while moving since the last reset.

Speed - Overall Avg.: The average speed while moving and stopped since the last reset.

Stopwatch Timer: The stopwatch time for the current activity.

Sunrise: The time of sunrise based on your GPS position.

Sunrise/Sunset: The time of the next sunrise or sunset based on your GPS position.

Sunset: The time of sunset based on your GPS position.

Temperature: The temperature of the air. Your body temperature affects the temperature sensor. Your device must be connected to a tempe™ sensor for this data to appear.

Temperature - Water: The temperature of the water. Your device must be connected to a NMEA 0183 device capable of acquiring the water temperature.

Time of Day: The time of day based on your current location and time settings (format, time zone, daylight saving time).

Time to Destination: The estimated time remaining before you reach the destination. You must be navigating for this data to appear.

Time to Next: The estimated time remaining before you reach the next waypoint in the route. You must be navigating for this data to appear.

To Course: The direction in which you must move to get back on the route. You must be navigating for this data to appear.

Total Lap: The stopwatch time for all the completed laps.

Trip Odometer: A running tally of the distance traveled since the last reset.

Trip Time: A running tally of the total time spent moving and not moving since the last reset.

Trip Time - Moving: A running tally of the time spent moving since the last reset.

Trip Time - Stopped: A running tally of the time spent not moving since the last reset.

Turn: The angle of difference (in degrees) between the bearing to your destination and your current course. L means turn left. R means turn right. You must be navigating for this data to appear.

Velocity Made Good: The speed at which you are closing on a destination along a route. You must be navigating for this data to appear.

Vertical Dist. to Dest.: The elevation distance between your current position and the final destination. You must be navigating for this data to appear.

Vertical Dist. to Next: The elevation distance between your current position and the next waypoint in the route. You must be navigating for this data to appear.

Vertical Speed: The rate of ascent or descent over time.

Vertical Speed to Dest.: The rate of ascent or descent to a predetermined altitude. You must be navigating for this data to appear.

Waypoint at Dest.: The last point on the route to the destination. You must be navigating for this data to appear.

Waypoint at Next: The next point on the route. You must be navigating for this data to appear.

Optional Accessories

Optional accessories, such as mounts, maps, fitness accessories, and replacement parts, are available at <http://buy.garmin.com> or from your Garmin dealer.

tempe

Your device is compatible with the tempe temperature sensor. You can attach the sensor to a secure strap or loop where it is exposed to ambient air, so it provides a consistent source of accurate temperature data. You must pair the tempe sensor with your device to display temperature data. See the instructions for your tempe sensor for more information.

Tips for Pairing Wireless Sensors

- Verify that the sensor is compatible with your Garmin device.
- Before you pair the sensor with your Garmin device, move 10 m (33 ft.) away from other sensors with ANT+ technology.
- Bring the Garmin device within range 3 m (10 ft.) of the sensor.
- After you pair the first time, your Garmin device automatically recognizes the sensor each time it is activated. This process occurs automatically when you turn on the Garmin device and only takes a few seconds when the sensors are activated and functioning correctly.
- When paired, your Garmin device receives data from only your sensor, and you can go near other sensors.

Troubleshooting

Maximizing Battery Life

You can do several things to extend the life of the batteries.

- Reduce the backlight brightness ([Adjusting the Backlight, page 4](#)).
- Reduce the backlight timeout ([Display Settings, page 44](#)).
- Reduce the flashlight brightness or flash frequency ([Using the Flashlight, page 36](#)).
- Turn off the screen automatically when the backlight times out ([Turning Off the Screen, page 44](#)).
- Use expedition mode ([Turning On Expedition Mode, page 45](#)).
- Turn off wireless connectivity ([Wi-Fi Settings, page 44](#)).
- Turn off Bluetooth technology ([Bluetooth Settings, page 44](#)).
- Turn off additional satellite systems ([GPS and Other Satellite Systems, page 4](#)).

Long-Term Storage

When you do not plan to use the device for several months, you should charge the battery to at least 50% before you store the device. You should store the device in a cool, dry place with temperatures around the typical household level. After storage, you should fully recharge the device before using it.

Restarting the Device

If the device stops responding, you may need to restart it. This does not erase any of your data or settings.

Hold the power button for approximately 30 seconds.

About Heart Rate Zones

Many athletes use heart rate zones to measure and increase their cardiovascular strength and improve their level of fitness. A heart rate zone is a set range of heartbeats per minute. The five commonly accepted heart rate zones are numbered from 1 to 5 according to increasing intensity. Generally, heart rate zones are calculated based on percentages of your maximum heart rate.

Fitness Goals

Knowing your heart rate zones can help you measure and improve your fitness by understanding and applying these principles.

- Your heart rate is a good measure of exercise intensity.
- Training in certain heart rate zones can help you improve cardiovascular capacity and strength.

If you know your maximum heart rate, you can use the table ([Heart Rate Zone Calculations, page 59](#)) to determine the best heart rate zone for your fitness objectives.

If you do not know your maximum heart rate, use one of the calculators available on the Internet. Some gyms and health centers can provide a test that measures maximum heart rate. The default maximum heart rate is 220 minus your age.

Heart Rate Zone Calculations

| Zone | % of Maximum Heart Rate | Perceived Exertion | Benefits |
|------|-------------------------|--|--|
| 1 | 50–60% | Relaxed, easy pace, rhythmic breathing | Beginning-level aerobic training, reduces stress |
| 2 | 60–70% | Comfortable pace, slightly deeper breathing, conversation possible | Basic cardiovascular training, good recovery pace |
| 3 | 70–80% | Moderate pace, more difficult to hold conversation | Improved aerobic capacity, optimal cardiovascular training |
| 4 | 80–90% | Fast pace and a bit uncomfortable, breathing forceful | Improved anaerobic capacity and threshold, improved speed |
| 5 | 90–100% | Sprinting pace, unsustainable for long period of time, labored breathing | Anaerobic and muscular endurance, increased power |

