


**GARMIN®**

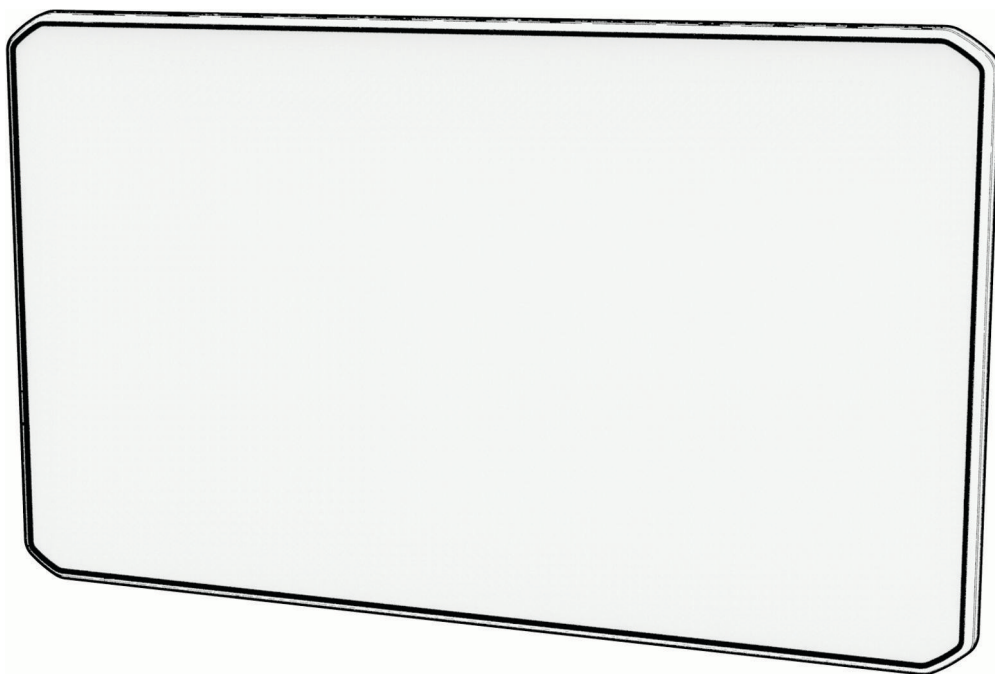

# **GARMIN DRIVECAM™ 76**

---

**Owner's manual**

© 2022 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organisation of such changes or improvements. Go to [www.garmin.com](http://www.garmin.com) for current updates and additional information concerning the use of this product.

Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin.

Garmin Drive™, Garmin DriveCam™, Garmin Express™ and myTrends™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Android™ is a trademark of Google LLC. Apple®, iPhone® and Mac® are trademarks of Apple Inc, registered in the U.S. and other countries. The BLUETOOTH® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such word mark or logo by Garmin is under licence. Foursquare® is a trademark of Foursquare Labs, Inc. in the U.S. and in other countries. microSD® and the microSDHC logo are trademarks of SD-3C, LLC. Tripadvisor® is a registered trademark of Tripadvisor LLC. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.

## Table of contents

<b>Getting started.....</b>	<b>1</b>
Garmin DriveCam Device Overview.....	1
Installing the dash camera memory card.....	2
Mounting Considerations.....	2
Mounting and Powering the Garmin DriveCam Device in Your Vehicle.....	3
Turning the device on or off.....	4
Acquiring GPS signals.....	5
Status bar icons.....	5
Using the on-screen buttons.....	5
Adjusting the volume.....	6
Using the audio mixer.....	6
Enabling or Disabling Sounds and Audio Sources.....	6
Adjusting the screen brightness.....	6
<b>Dash Cam.....</b>	<b>6</b>
Aligning the camera.....	6
Dash Cam Recording.....	7
Saving a Dash Cam Recording.....	7
Stopping or starting dash camera recording.....	7
Turning audio recording on or off.....	7
Viewing videos and photos.....	7
Videos on Your Computer.....	8
Deleting a video or photo.....	8
Vault Storage.....	8
Upgrading Your Vault Subscription....	8
Sharing a Video.....	8
Editing and Exporting a Video.....	9
Disabling a Shared Video Link.....	9
Removing a Video from the Vault.....	9
<b>Voice-activated features.....</b>	<b>9</b>
Voice Command tips.....	9
Launching Garmin Voice-Activated Navigation.....	10
Starting a route.....	10
Controlling the Camera Using Voice Commands.....	11
Placing a Phone Call Using Your Voice.....	11
Changing Device Settings Using Your Voice.....	11

<b>Driver awareness features and alerts.....</b>	<b>11</b>
Enabling or Disabling Driver Alerts.....	12
Red light and speed cameras.....	12
Advanced Driver Assistance System... ..	12
Go Alert.....	12
Forward collision warning system... ..	13
Lane departure warning system.....	13
<b>Finding and saving locations.....</b>	<b>15</b>
Finding a location using the search bar.....	15
Finding an address.....	15
Location Search Results.....	16
Changing the search area.....	17
Points of Interest.....	17
Finding a location by category.....	17
Finding National Parks.....	18
Foursquare.....	18
Tripadvisor.....	18
Navigating to points of interest within a venue.....	19
Search tools.....	19
Finding a junction.....	19
Finding a location using coordinates.....	19
Parking.....	19
Finding Parking Near Your Current Location.....	19
Finding Parking Near a Specified Location.....	20
Viewing history.....	20
Clearing the list of recently found places.....	20
Viewing current location information.. ..	20
Finding emergency services and fuel.....	20
Getting directions to your current location.....	20
Adding a shortcut.....	20
Removing a shortcut.....	21
Saving Locations.....	21
Saving a location.....	21
Saving your current location.....	21
Editing a Saved Location.....	21
Assigning Categories to a Saved Location.....	21

Deleting a favourite location.....	22	Viewing upcoming traffic.....	30
<b>Following a route.....</b>	<b>22</b>	Viewing traffic on the map.....	30
Routes.....	22	Searching for traffic incidents.....	30
Starting a route.....	22	Customising the map.....	30
Starting a route by using the map....	22	Customising the map layers.....	30
Going home.....	23	Changing the map data field.....	30
Your route on the map.....	23	Changing the map perspective.....	31
Active lane guidance.....	24	<b>Live services, traffic and smartphone</b>	<b>features.....</b>
Viewing turns and directions.....	24		<b>31</b>
Viewing the Entire Route on the		Pairing with Your Smartphone.....	31
Map.....	24	Disabling Bluetooth features	
Arriving at your destination.....	24	(Android™).....	31
Parking Near Your Destination.....	25	Disabling Bluetooth features	
Changing Your Active Route.....	25	(iPhone®).....	32
Adding a location to your route.....	25	Viewing Videos and Photos on Your	
Shaping Your Route.....	25	Smartphone.....	32
Taking a detour.....	26	Deleting a Video or Photo Using Your	
Changing the route calculation		Smartphone.....	32
mode.....	26	Smart Notifications.....	32
Avoiding environmental zones on your		Receiving notifications.....	33
route.....	26	Viewing the list of notifications.....	33
Stopping the route.....	26	Hands-free calling.....	34
Using Suggested Routes.....	26	Placing a call.....	34
Avoiding Delays, Tolls and Areas.....	26	Receiving a call.....	34
Avoiding traffic delays on your		Using the call history.....	34
route.....	26	Using in-call options.....	34
Avoiding toll roads.....	26	Saving a home phone number.....	35
Avoiding road features.....	27	Disconnecting a Bluetooth device.....	35
Avoiding environmental zones.....	27	Deleting a paired phone.....	35
Custom Avoidances.....	27	<b>Traffic.....</b>	<b>35</b>
<b>Using the Map.....</b>	<b>28</b>	Receiving traffic data using your	
Map tools.....	28	smartphone.....	35
Viewing a map tool.....	28	Enabling traffic.....	35
Up ahead.....	28	Viewing traffic on the map.....	36
Viewing upcoming locations.....	29	Searching for traffic incidents.....	36
Customising the up ahead		<b>Using the apps.....</b>	<b>36</b>
categories.....	29	Viewing the Owner's Manual on	
Towns Ahead.....	29	Your Device.....	36
Viewing Upcoming Towns and Exit		Viewing the Weather Forecast.....	36
Services.....	29	Viewing weather near a different	
Trip information.....	29	town.....	36
Viewing trip data from the map.....	29	Viewing the weather radar.....	36
Viewing Trip Data.....	29	Viewing weather alerts.....	37
Viewing the trip log.....	30	Checking road conditions.....	37
Resetting trip information.....	30		

Route Planner.....	37	Garmin Support Centre.....	45
Planning a Route.....	37	Map and Software Updates.....	46
Editing and Reordering Locations in a		Connecting to a Wi-Fi Network.....	46
Route.....	37	Updating Maps and Software Using a	
Changing Routing Options for a		Wi-Fi Network.....	47
Route.....	38	Updating Maps and Software with	
Navigating to a Saved Route.....	38	Garmin Express.....	48
Editing and saving your active		Device Care.....	49
route.....	38	Cleaning the outer casing.....	49
Wireless Cameras.....	38	Cleaning the Touchscreen.....	49
Pairing the Device with a Wireless		Cleaning the camera lens.....	49
Camera.....	38	Avoiding theft.....	49
Viewing the Wireless Camera.....	38	Restarting the Device.....	49
Viewing Previous Routes and		Removing the Device, Mount and Suction	
Destinations.....	39	Cup.....	50
Music Player.....	40	Removing the Device from the	
Adding the Music Player Tool to the		Mount.....	50
Map.....	40	Removing the Mount from the Suction	
<b>Settings.....</b>	<b>40</b>	Cup.....	50
Map and vehicle settings.....	40	Removing the Suction Cup from the	
Enabling maps.....	41	Windscreen.....	50
Navigation settings.....	41	<b>Data management.....</b>	<b>50</b>
Calculation Mode Settings.....	41	About memory cards.....	50
Setting a simulated location.....	41	Installing a memory card for maps and	
Adding an environmental zone vehicle		data.....	50
profile.....	41	Formatting the Dash Cam Memory	
Wireless network settings.....	42	Card.....	50
Driver Assistance Settings.....	42	Connecting the Device to Your	
Proximity alerts settings.....	42	Computer.....	51
Dash Cam Settings.....	43	Transferring data from your	
Wireless Camera Settings.....	43	computer.....	51
Backup camera settings.....	43	Disconnecting the USB cable.....	51
Display settings.....	43	<b>Troubleshooting.....</b>	<b>51</b>
Traffic Settings.....	44	My video recordings are blurry.....	51
Units and time settings.....	44	My memory card has degraded and	
Setting the Time.....	44	needs to be replaced.....	52
Language and Keyboard Settings.....	44	My video recordings are choppy or	
Device and privacy settings.....	44	incomplete.....	52
Resetting Data and Settings.....	45	The suction cup will not stay on my	
<b>Device information.....</b>	<b>45</b>	windscreen.....	52
Viewing E-label Regulatory and		My device is not acquiring satellite	
Compliance Information.....	45	signals.....	52
Specifications.....	45	My battery does not stay charged for	
Charging the Device.....	45	very long.....	52
<b>Device maintenance.....</b>	<b>45</b>	My device does not connect to my	
		phone.....	53

**Appendix..... 53**

- Viewing GPS signal status..... 53
- Purchasing additional maps..... 53
- Purchasing accessories..... 53
- European Emission Standards..... 53

# Getting started

## ⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

- Install the camera memory card.
- Update the maps and software on your device ([Map and Software Updates](#), page 46).
- Mount the device in your vehicle and connect it to power ([Mounting Considerations](#), page 2).
- Align the dash camera.
- Acquire GPS signals ([Acquiring GPS signals](#), page 5).
- Adjust the volume ([Adjusting the volume](#), page 6) and display brightness ([Adjusting the screen brightness](#), page 6).
- Navigate to your destination ([Starting a route](#), page 22).

## Garmin DriveCam Device Overview



①	Microphone for voice command or hands-free calling
②	Power button
③	USB power and data port
④	Camera memory card slot
⑤	Map and data memory card slot

## Installing the dash camera memory card

Before the device can record video from the integrated dash camera, you must install a camera memory card. The camera requires a microSD® memory card from 8 to 512 GB with a speed rating of Class 10 or higher. You can use the included memory card, or you can purchase a compatible memory card from an electronics supplier.

**NOTE:** a memory card is included so your device is ready to use out of the box. All memory cards have a limited life and must be replaced periodically. Your device alerts you when the memory card has exceeded its useful life and needs to be replaced. You can follow the troubleshooting tips to help extend the useful life of the memory card ([My memory card has degraded and needs to be replaced, page 52](#)).

- 1 Insert a memory card ① into the camera memory card slot ②.

**NOTE:** if you install the memory card into the incorrect slot, the camera cannot record video.



- 2 Press it in until it clicks.

## Mounting Considerations

- Do not mount the device in a location that obscures the driver's view of the road.

### WARNING

It is your responsibility to ensure that the mounting location complies with all applicable laws and ordinances, and does not block your view of the road during the safe operation of your vehicle.

- Choose a location that allows you to route the power cable safely.

### WARNING

When installing the device in a vehicle, install the device and power cable securely so they do not interfere with the vehicle operating controls. Interference with the vehicle operating controls can result in a collision, which could result in injury or death.

- Choose a location that allows the device to clearly hear your voice.  
You should avoid placing the device near a speaker or air vent, which can produce noise that interferes with the microphones.
- Choose a location that is within easy reach.
- Choose a location that provides the dash cam with a clear view of the road.  
You should verify that the vehicle's windscreen wipers clear the windscreen area in front of the dash cam, and you should avoid placing the dash cam behind a tinted area of the windscreen.
- Thoroughly clean the windscreen before installing the mount.



## Mounting and Powering the Garmin DriveCam Device in Your Vehicle

### WARNING


This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, store the device out of direct sunlight.

Before you use your device on battery power, you should charge it.

- 1 Press the suction cup to the windscreen, and flip the lever ① back toward the windscreen.



- 2 Plug the vehicle power cable into the USB port ② on the device.

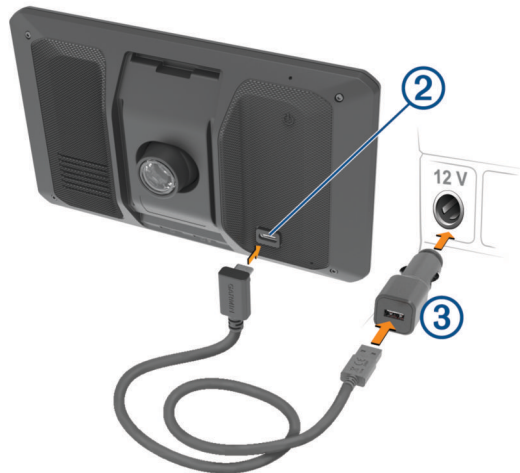

- 3 Plug the other end of the vehicle power cable ③ into a power outlet in your vehicle.
- 4 Fit the tab on the bottom of the mount into the slot ④ on the back of the device, and press the device into the mount until it clicks.



## Turning the device on or off

- To turn the device on, press the power button ①, or connect the device to power.




- To put the device in power saving mode, press the power button while the device is on.  
While in power saving mode, the screen is off and the device uses very little power, but it can wake instantly for use.  
**TIP:** you can charge your device faster by putting it in power saving mode while charging the battery.
- To turn off the device completely, hold the power button until a prompt appears on the screen and select **Off**.  
The prompt appears after five seconds. If you release the power button before the prompt appears, the device enters power saving mode.

## Acquiring GPS signals










When you turn on your navigation device, the GPS receiver must collect satellite data and establish the current location. The time required to acquire satellite signals varies based on several factors, including how far you are from the location where you last used your navigation device, whether you have a clear view of the sky, and how long it has been since you last used your navigation device. The first time you turn on your navigation device, it may take several minutes to acquire satellite signals.

- 1 Turn on the device.
- 2 Wait while the device locates satellites.
- 3 If necessary, go to an open area away from tall buildings and trees.

 in the status bar indicates the satellite signal strength. When at least half of the bars are filled, the device is ready for navigation.








## Status bar icons

The status bar is located at the top of the main menu. The status bar icons display information about features on the device. You can select some icons to change settings or view additional information.



	GPS signal status. Hold to view GPS accuracy and acquired satellite information ( <a href="#">Viewing GPS signal status, page 53</a> ).
	Bluetooth® technology status. Select to view the Bluetooth settings ( <a href="#">Wireless network settings, page 42</a> ).
	Wi-Fi signal strength. Select to change the Wi-Fi settings ( <a href="#">Wireless network settings, page 42</a> ).
	Connected to hands-free calling. Select to place a phone call ( <a href="#">Hands-free calling, page 34</a> ).
	Current time. Select to set the time ( <a href="#">Setting the Time, page 44</a> ).
	Battery charge level.
	Garmin Drive™ app connection status ( <a href="#">Pairing with Your Smartphone, page 31</a> ).
	Temperature. Select to view the weather forecast ( <a href="#">Viewing the Weather Forecast, page 36</a> ).
	Dash cam recording status. Select to open the dash cam controls.

## Using the on-screen buttons

On-screen buttons allow you to navigate the pages, menus and menu options on your device.


- Select  to return to the previous menu screen.
- Hold  to quickly return to the main menu.
- Select  or  to scroll through lists or menus.
- Hold  or  to scroll faster.
- Select  to see a context-based menu of options for the current screen.

## Adjusting the volume

- 1 Select .
- 2 Select an option:
  - Use the slider bar to adjust the volume.
  - Select  to mute the device.
  - Select a tick box to enable or disable additional sound options.


## Using the audio mixer

You can use the audio mixer to set the volume levels for different audio types, such as navigation prompts or phone calls. The level for each audio type is a percentage of the master volume.


- 1 Select .
- 2 Select **Mixer**.
- 3 Use the sliders to adjust the volume for each audio type.

## Enabling or Disabling Sounds and Audio Sources

You can turn specific audio sources and system sounds on or off without affecting other audio sources.

- 1 Select .
- 2 In the **Sounds** section, select an option:
  - To enable the device to speak navigation prompts and directions, select the **Spoken Navigation** check box.
  - To enable the device to say traffic alerts and prompts, select the **Spoken Traffic Alerts** check box.
  - To enable the device to play a tone when a driver awareness alert is triggered, select the **Alerts and Tones** check box.
  - To enable the device to play a sound when you touch on-screen buttons, select the **Button Presses** check box.

## Adjusting the screen brightness

- 1 Select  > **Display** > **Brightness**.
- 2 Use the slider bar to adjust the brightness.


# Dash Cam

## Aligning the camera

### **WARNING**

Do not attempt to align the camera while driving because doing so can cause distraction that could lead to an accident resulting in serious personal injury or death.

Advanced driver assistance features may not perform properly if the camera is not aligned. You should align the dash camera each time you mount or reposition the device.

- 1 Select  > **Dash Cam** > **Camera Placement**.
- 2 Select **Horizontal Placement**, and select the horizontal location of your device on the windscreen.
- 3 Select **Vehicle Height**, and select your vehicle type.
- 4 Select **Alignment**.
- 5 Tilt the device and turn the camera left or right to align the camera.

The camera should point straight ahead, and the horizon should be centred between the top and bottom of the screen.

## Dash Cam Recording

### NOTICE

Some jurisdictions may prohibit or regulate recording audio and video or taking photographs. Jurisdictions may require that all parties have knowledge of the recording and provide consent before you record audio and video or take photographs. It is your responsibility to know and comply with all laws, regulations and any other restrictions in your jurisdiction.

The dash cam records video to the camera memory card. By default, the device immediately starts recording video when it turns on, and it continues recording until it is turned off. If the memory card is full, the device automatically deletes the oldest unsaved video to create space for new video.


When the option to promptly delete unsaved video is enabled, the device continually deletes unsaved video more than three minutes old and deletes all unsaved video each time it is powered off. You can enable or disable this feature in the camera settings ([Dash Cam Settings, page 43](#)).


You can save a video recording to prevent it from being overwritten or deleted.

### Saving a Dash Cam Recording

You can save a portion of the recorded video to prevent it from being overwritten by new video. By default, the device uses a sensor to detect possible accidental collisions and saves video footage before, during and after the detected event. You can also manually save video at any time.

- 1 While the dash cam is recording, select **Dash Cam** > .

The device saves the video footage before, during and after you select .

- 2 Select  again to extend the saved recording time (optional).


A message indicates the video is saving.

The memory card has limited storage. After you save a video recording, you should transfer the recording to your computer or other external storage location for permanent storage ([Videos on Your Computer, page 8](#)).

### Stopping or starting dash camera recording

- 1 Select **Dash Cam**.

- 2 Select an option:

- To stop recording, select .

**TIP:** by default, recording starts automatically the next time you turn on the device. You can disable this option in the camera settings ([Dash Cam Settings, page 43](#)).

- To start recording, select .

### Turning audio recording on or off

### NOTICE

Some jurisdictions may prohibit recording audio in the vehicle or may require that all passengers have knowledge of the recording and provide consent before you record audio in the vehicle. It is your responsibility to know and follow all laws and restrictions for your jurisdiction.

The device can record audio using the integrated microphone whilst recording video. You can turn audio recording on or off at any time.

Select  > **Dash Cam** > **Record Audio**.

### Viewing videos and photos

**NOTE:** the device stops recording video while you view videos or photos.

- 1 Select **Gallery** > **Yes**.

- 2 Select a video or photo.

The device displays the video or photo. Videos start playing automatically. If the video or photo includes location information, a map shows the location.

## Videos on Your Computer

Media is stored in the DCIM folder on the camera memory card. Videos are stored in MP4 file format. Photos are stored in JPG format. You can view and transfer media by connecting the memory card or the device to your computer ([Connecting the Device to Your Computer, page 51](#)).

The media is sorted into several folders.


**100EVENT:** contains videos saved automatically when the device detected an incident.

**101PHOTO:** contains photos.

**102SAVED:** contains videos saved manually by the user.

**105UNSVD:** contains unsaved video footage. The device overwrites the oldest unsaved video when the storage space for unsaved video is full.

## Deleting a video or photo

- 1 Select **Gallery** > **Yes**.
- 2 Select a video or photo.
- 3 Select  > **Yes**.

## Vault Storage

**NOTE:** this feature is not available for all countries.


You can upload, manage and share dash camera footage on a secure, online storage drive using the Vault. The dash camera uploads saved videos to the Vault automatically while it is connected to a Wi-Fi® network.

You can store videos in the Vault for up to 24 hours with your Garmin Drive account. There is no size limit to the amount of data you can store. You can purchase an optional Vault subscription from the Garmin Drive app on your smartphone to extend your storage time.

**NOTE:** your dash camera must be connected to a Wi-Fi network to use this feature.

## Upgrading Your Vault Subscription

You can purchase an optional Vault subscription to extend your storage time.

- 1 From the Garmin Drive app on your smartphone, select  > **Vault Access** > **Need More Time?**.
- 2 Follow the on-screen instructions.

## Sharing a Video

You can share a secure link to a dash camera video from the Vault.


- 1 From the Garmin Drive app on your smartphone, select **Vault**.
- 2 Select a video, and select **Secure share**.
- 3 Follow the on-screen instructions.

## Editing and Exporting a Video

You can trim the length of your video to remove unnecessary footage before exporting it to the Vault.

**NOTE:** videos stored in the Vault cannot be trimmed.

- 1 While viewing a video, drag the trimming handles ① on the video progress bar left or right to trim the video length.

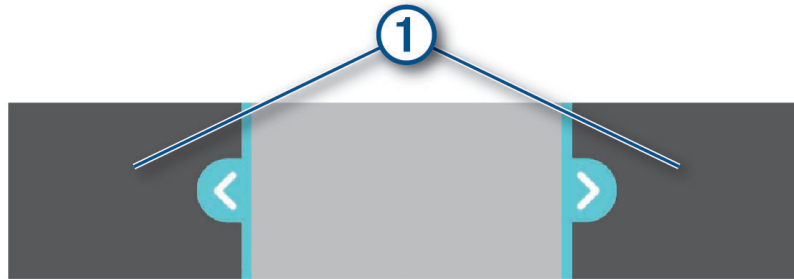

- 2 Select the **Include Audio** tick box to include the recorded audio (optional).
- 3 Select ➤ or select **Export**.  
**NOTE:** you must keep the app in the foreground while exporting a video.  
The app exports the trimmed video to the Vault and saves the video to your smartphone.
- 4 After the video export is complete, select an option (optional):
  - To remove the video from the camera memory card, select **Remove From Camera**.
  - To return to the gallery, select ➤ or select **Done**.

## Disabling a Shared Video Link

You can disable a link to a video that you previously shared from the Vault. When you disable a shared video link, the video is set to private and the shared link and passcode are disabled.

- 1 From the Garmin Drive app on your smartphone, select **Vault**.
- 2 Select a video, and select **Disable Link** > **Continue**.

## Removing a Video from the Vault

- 1 From the Garmin Drive app on your smartphone, select **Vault**.
- 2 Select a video, and select **Remove From {0}** > **Continue**.

# Voice-activated features

### ⚠ WARNING

The Garmin DriveCam device uses natural language processing to understand the intent of your spoken requests. You can ask questions or give spoken commands using natural language and complete sentences. Many example phrases are provided in the manual, but you can experiment with speaking to the device using the language most comfortable to you.

Garmin® voice-activated navigation allows you to search for locations and addresses, start routes with turn-by-turn directions, place hands-free phone calls and more. You can launch Garmin voice-activated navigation by saying *OK, Garmin* followed by a request.

**NOTE:** this feature is not available for all product models or languages.

## Voice Command tips

- Speak in a normal voice directed at the device.
- Reduce background noise, such as voices or the radio, to increase the accuracy of the voice recognition.
- Respond to prompts from the device as needed.

## Launching Garmin Voice-Activated Navigation

Garmin voice-activated navigation allows you to use requests spoken in plain language to search for locations and addresses, start routes with turn-by-turn directions, place hands-free phone calls and more.

- Say *OK, Garmin*, and make a spoken request.

For example, you can say phrases like these:

- *OK, Garmin, take me home.*
- *OK, Garmin, where's the library?*

## Starting a route

### Going to a Favourite Location Using Your Voice

It is useful to start a route on your Garmin DriveCam device each time you travel to a favourite location, even though you may already know how to get there. Your device can help you avoid reported traffic delays and construction that may affect your route.

You can say phrases like these to start a route to your favourite locations ([Saving Locations, page 21](#)).

- *OK, Garmin, take me home.*
- *OK, Garmin, take me to work.*
- *OK, Garmin, start a route to school.*

### Going to an Address Using Your Voice

You can say phrases like these to start a route to a nearby address or to an address in a specific town.

- *OK, Garmin, take me to One Garmin Way.*
- *OK, Garmin, start a route to twelve hundred East 151st Street in Olathe, Kansas.*

### Going to a Business or Named Location Using Your Voice

You can say phrases like these to find and navigate to a business or location by name or category.

#### Nearby locations

- *oK, Garmin, find a coffee shop.*
- *OK, Garmin, where's the library?*
- *OK, Garmin, take me to Starbucks.*

#### Locations near a different city

- *oK, Garmin, find Mexican food near Denver, Colorado.*
- *OK, Garmin, find The Field Museum near Chicago, Illinois.*
- *OK, Garmin, find Casa Bonita near Denver, Colorado.*

#### Locations near a junction

- *oK, Garmin, find barbecue near 12th Street and Vine Street.*
- *OK, Garmin, find Arthur Bryant's Barbecue near 12th Street and Vine Street.*

### Going to a Town or Junction Using Your Voice

You can say phrases like these to find and navigate to a town or junction.

- *OK, Garmin, find Chandler, Arizona.*
- *OK, Garmin, find Michigan Avenue and Erie Street.*

### Checking Your Arrival Time

While a route is active, you can say a phrase to check your estimated time of arrival at your destination.

Say *OK, Garmin, what time will we arrive?*.

### Stopping a Route Using Your Voice

You can say phrases like these to stop navigating a route.

- *OK, Garmin, stop the route.*
- *OK, Garmin, stop navigating.*



## Controlling the Camera Using Voice Commands

- 1 Say **OK Garmin** to activate the voice control feature.  
The camera plays a tone and starts listening for a command.
- 2 Say a command:
  - To save a video, say **Save Video**.
  - To take a picture, say **Take a picture**.The camera plays a tone when it recognises your command.

## Placing a Phone Call Using Your Voice

You can use a voice command to call a contact from the phone book of your paired smartphone.

Say *OK, Garmin, call*, and say the contact name.

For example, you can say *OK, Garmin, call Mum..*

## Changing Device Settings Using Your Voice

You can say phrases like these to set device settings to a value from 0 to 10.

- *OK, Garmin, increase the volume.*
- *OK, Garmin, set the volume to 0.*
- *OK, Garmin, set the volume to 9.*
- *OK, Garmin, decrease the brightness.*
- *OK, Garmin, set the brightness to 5.*

## Driver awareness features and alerts

### CAUTION

The driver alerts and speed limit features are for information only. They do not replace your responsibility to abide by all posted speed limit signs and to use safe driving judgement at all times. Garmin is not responsible for any traffic fines or citations that you receive for failing to follow all applicable traffic laws and signs.

Your device provides features that can help encourage safer driving and increase efficiency, even when you are driving in a familiar area. The device plays an audible tone or message and displays information for each alert. You can enable or disable the audible tone for some types of driver alerts. Not all alerts are available in all areas.

**Schools:** the device plays a tone and displays the speed limit (if available) for an upcoming school or school zone.

**Speed limit exceeded:** the device displays a red border on the speed limit icon when you exceed the posted speed limit for the current road.

**Speed limit reduced:** the device plays a tone and displays the upcoming speed limit so you can be prepared to adjust your speed.

**Wrong way on a one-way street:** the device plays a message and displays a full-screen warning if you travel the wrong way on a one-way street. The edges of the screen appear red and an alert remains at the top of the screen until you leave the one-way street or correct your direction of travel.

**Level crossing:** the device displays the distance to an upcoming railway crossing.

**Animal crossing:** the device plays a tone to indicate an upcoming animal crossing area.

**Bends:** the device plays a tone to indicate a bend in the road.

**Slower traffic:** the device plays a tone to indicate slower traffic when you approach slower traffic at a higher speed. Your device must be receiving traffic information to use this feature ([Traffic, page 35](#)).

**Construction zone:** the device plays a tone and displays a message when you approach a construction zone.

**Lane closure:** the device plays a tone and displays a message when you approach a lane closure.

**Break planning:** the device plays a tone and suggests upcoming rest stops after you have been driving for a long time.


**Forward collision warning:** the device alerts you when it detects that there is not a safe distance between your vehicle and the vehicle in front of you.

**Lane departure warning:** the device alerts you when it detects you may be crossing a lane boundary unintentionally.

**Go alert:** the device plays a tone and displays an alert when stopped traffic starts moving.

## Enabling or Disabling Driver Alerts

You can enable or disable several types of driver alerts.

- 1 Select  > **Driver Assistance** > **Driver Alerts**.
- 2 Select or clear the tick box next to each alert.

## Red light and speed cameras

### NOTICE

Garmin is not responsible for the accuracy of or the consequences of using a red light or speed camera database.

**NOTE:** this feature is not available for all regions or product models.

Information about red light and speed camera locations is available in some areas for some product models. The device alerts you when you approach a reported speed or red light camera.

- In some areas, your device can receive red light and speed camera data while connected to a smartphone running the Garmin Drive app.
- You can use the Garmin Express™ software ([garmin.com/express](https://garmin.com/express)) to update the camera database stored on your device. You should update your device frequently to receive the most up-to-date camera information.

## Advanced Driver Assistance System

Your device includes an advanced driver assistance system (ADAS), which uses the integrated dash camera to provide warnings and alerts about your driving environment.

You can enable or disable each of the advanced driver assistance features in the Driver Assistance settings ([Driver Assistance Settings, page 42](#)).

### Go Alert

The go alert plays a tone and displays an alert when stopped traffic ahead of your vehicle starts moving again. This alert appears only after the vehicle ahead has moved a substantial distance and your vehicle has remained stopped. This can be useful at stop lights or in traffic delays. This feature uses the dash camera to detect the stopped or moving vehicle and requires a clear view of the road.



## Forward collision warning system

### WARNING

The forward collision warning system (FCWS) feature is for information only and does not replace your responsibility to observe all road and driving conditions, abide by all traffic regulations, and use safe driving judgement at all times. The FCWS relies on the camera to provide a warning of upcoming vehicles and, as a result, may have limited functionality in low visibility conditions. For more information, go to [garmin.com/warnings](https://garmin.com/warnings).

The FCWS feature alerts you when the device detects that there is not a safe distance between your vehicle and the vehicle in front of you. The device determines your vehicle speed using GPS, and it calculates an estimated safe following distance based on your speed. The FCWS activates automatically when your vehicle speed exceeds 65 km/hr (40 mph).

When the device detects that you are too close to the vehicle in front of you, the device plays an audible alert and a warning appears on the screen.



### Forward collision warning system performance tips

Several factors affect the performance of the forward collision warning system (FCWS). Some conditions may prevent the FCWS feature from detecting a vehicle in front of you.


- The FCWS feature activates only when your vehicle speed exceeds 65 km/h (40 mph).
- The FCWS feature may not detect a vehicle in front of you when the camera's view of the vehicle is obscured by rain, fog, snow, sun or headlight glare, or darkness.
- The FCWS feature may not function properly if the camera is incorrectly aligned .
- The FCWS feature may not detect vehicles farther away than 40 m (130 ft.) or closer than 5 m (16 ft.).
- The FCWS feature may not function properly if the camera placement settings do not correctly indicate your vehicle height or the placement of your device in the vehicle .

## Lane departure warning system

### WARNING

The lane departure warning system (LDWS) feature is for information only and does not replace your responsibility to observe all road and driving conditions, abide by all traffic regulations, and use safe driving judgement at all times. The LDWS relies on the camera to provide warnings for lane markers and, as a result, may have limited functionality in low visibility conditions. For more information, go to [garmin.com/warnings](https://garmin.com/warnings).


The LDWS feature alerts you when the device detects you may be crossing a lane boundary unintentionally. For example, the device alerts you if you cross some solid painted lane boundaries. The LDWS feature provides alerts only when your vehicle speed exceeds 65 km/h (40 mph). The alert appears on the left or right side of the screen to indicate which lane boundary you crossed.

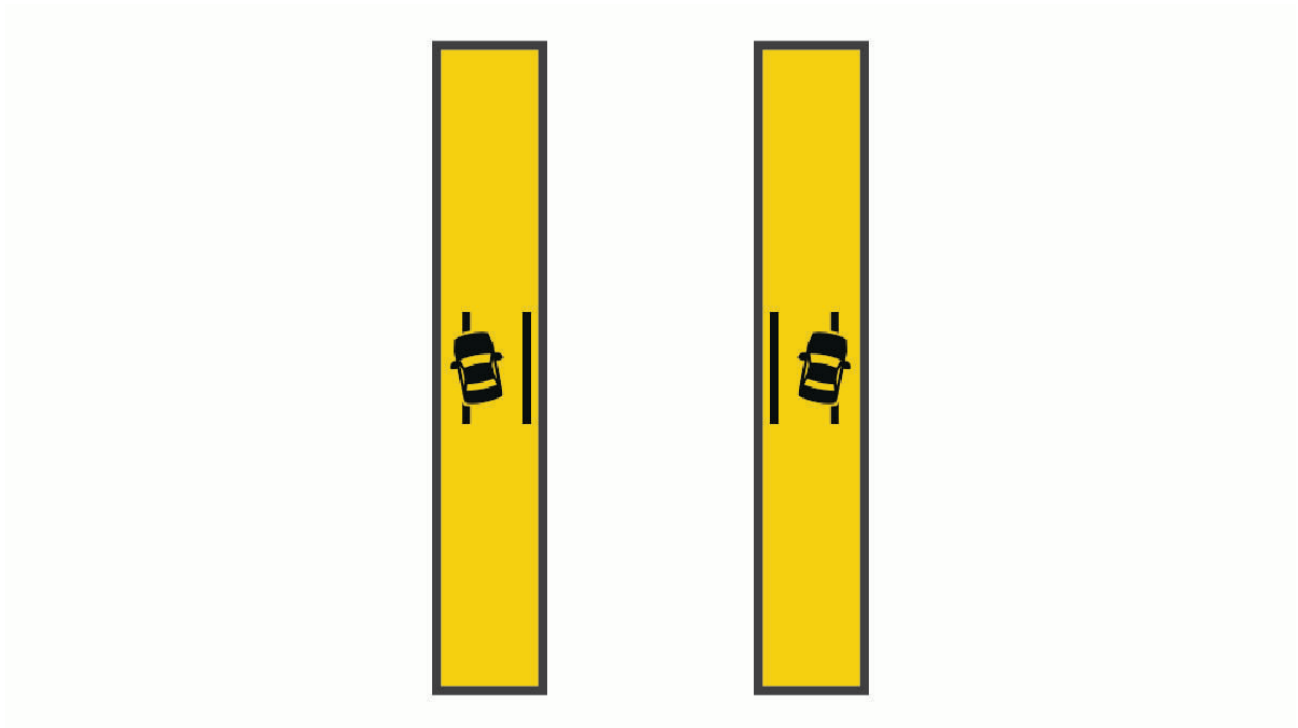

**NOTE:** for the best LDWS performance, you should set the Camera Placement option to indicate the location of the device in your vehicle.

### Setting the camera placement

You can mount the device in the left, centre or right of your windscreen or dashboard. for the best LDWS performance, you should set the Camera Placement option to indicate the location of your device in the vehicle.

- 1 Select  > **Dash Cam** > **Camera Placement** > **Horizontal Placement**.
- 2 Select the location of the device.

### Lane departure warning performance tips


Several factors affect the performance of the lane departure warning system (LDWS). Some conditions may prevent the LDWS feature from detecting lane departures.

- The LDWS feature provides alerts only when your vehicle speed exceeds 65 km/h (40 mph).
- The LDWS feature may not function properly if the camera is incorrectly aligned.
- The LDWS feature may not function properly if the camera placement settings do not correctly indicate your vehicle height or the placement of your device in the vehicle .
- The LDWS feature requires a clear, continuous view of the lane divider lines.
  - Lane departures may not be detected when divider lines are obscured by rain, fog, snow, extreme shadows, sun or headlight glare, road construction, or any other visual obstruction.
  - Lane departures may not be detected if lane divider lines are misaligned, missing or heavily worn.
- The LDWS feature may not detect lane departures on extremely wide, narrow or winding roads.

# Finding and saving locations


The maps loaded in your device contain locations, such as restaurants, hotels, vehicle services, and detailed street information. The Where To? menu helps you find your destination by providing several methods to browse, search, and save this information.

From the main menu, select **Where To?**.

- To quickly search all locations on your device, select **Search** (*Finding a location using the search bar, page 15*).
- To find an address, select **Address** (*Finding an address, page 15*).
- To browse or search pre-loaded points of interest by category, select **Categories** (*Finding a location by category, page 17*).
- To search near a different town or area, select  next to the current search area (*Changing the search area, page 17*).
- To view and edit your saved locations, select **Saved** (*Saving Locations, page 21*).
- To view locations you have recently selected from the search results, select **Recent** (*Viewing history, page 20*).
- To browse and search Foursquare® points of interest, select **Foursquare®** (*Searching Foursquare points of interest, page 18*).
- To browse and search Tripadvisor® traveller ratings, select **Tripadvisor** (*Tripadvisor, page 18*).
- To find national parks and explore park maps, select **National Parks** (*Finding National Parks, page 18*).
- To navigate to specific geographic coordinates, select **Coordinates** (*Finding a location using coordinates, page 19*).


## Finding a location using the search bar

You can use the search bar to search for locations by entering a category, brand name, address or town name.

- 1 Select **Where To?**.
- 2 Select **Search** in the search bar.
- 3 Enter all or part of the search term.  
Suggested search terms appear below the search bar.
- 4 Select an option:
  - To search for a type of business, enter a category name (for example, "cinemas").
  - To search for a business name, enter all or part of the name.
  - To search for an address near you, enter the house number and street name.
  - To search for an address in another town, enter the house number, street name, town and county.
  - To search for a town, enter the town and county.
  - To search for coordinates, enter latitude and longitude coordinates.
- 5 Select an option:
  - To search using a suggested search term, select the term.
  - To search using the text you entered, select .
- 6 If necessary, select a location.


## Finding an address

**NOTE:** the order of the steps may change depending on the map data loaded on your device.

- 1 Select **Where To?**.
- 2 If necessary, select  to search near a different town or area.
- 3 Select **Address**.
- 4 Follow the on-screen instructions to enter address information.
- 5 Select the address.

## Location Search Results

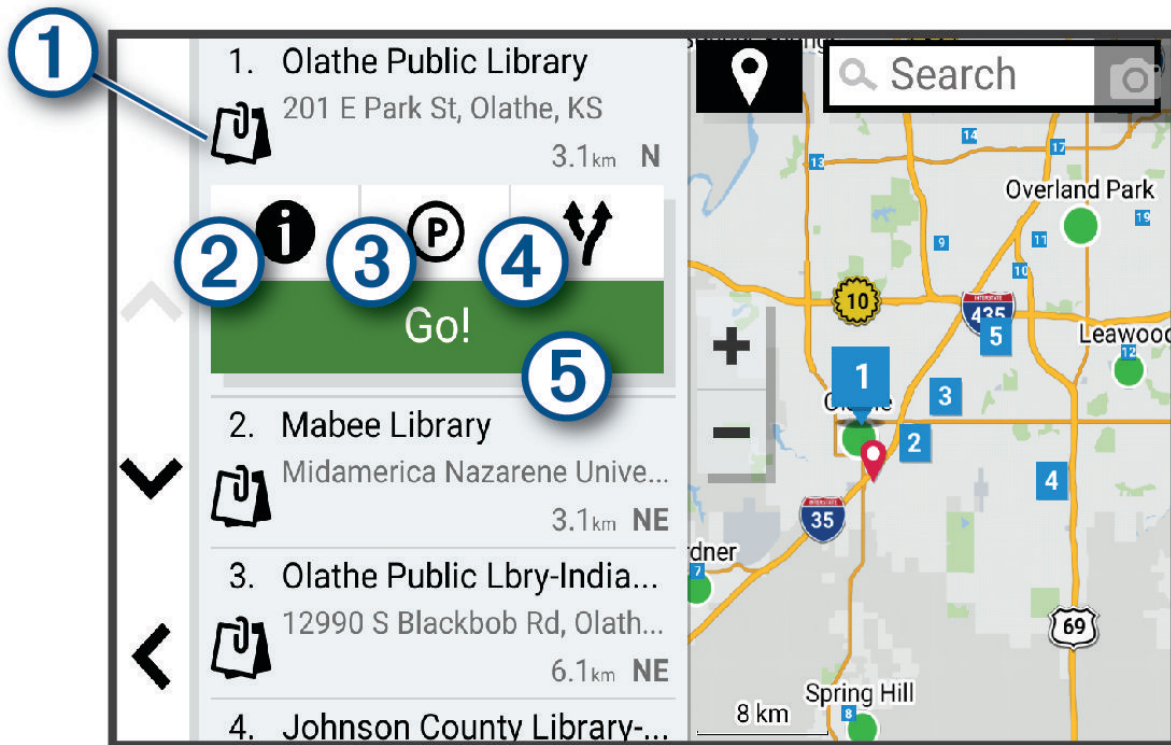

The location search results appear in a list, with the nearest location at the top. Each numbered location also appears on the map. You can scroll down to view more results.




①	Select a location to view the option menu.
② ⓘ	Select to view detailed information about the location.
③ ⓘ	Select to find parking areas near the location.
④ ⤵	Select to view alternative routes to the location.
⑤ Go!	Select to start navigating to the location using the recommended route.


## Changing the search area

By default, the device searches for locations near your current location. You can also search other areas, such as near your destination, near another city, or along your active route.

- 1 Select **Where To?**.
- 2 Select  next to the current search area .

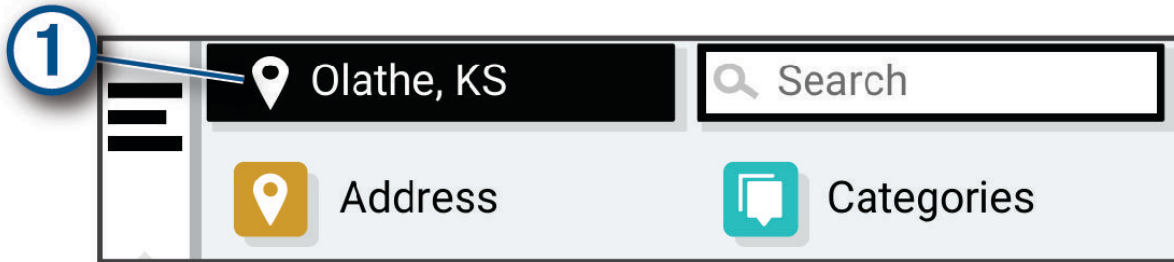

- 3 Select a search area.
- 4 If necessary, follow the on-screen instructions to select a specific location.

The selected search area appears next to . When you search for a location using any of the options in the Where To? menu, the device suggests locations near this area first.

## Points of Interest

### NOTICE

You are responsible for understanding and complying with any applicable rules, laws or regulations associated with points of interest.

A point of interest is a place that you may find useful or interesting. Points of interest are organised by category and can include popular travel destinations such as petrol stations, restaurants, hotels, and entertainment venues.

### Finding a location by category

- 1 Select **Where To?**.
- 2 Select a category or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select a location.

### Searching within a category

After you have performed a search for a point of interest, certain categories may display a Quick Search list that displays the last four destinations you selected.

- 1 Select **Where To? > Categories**.
- 2 Select a category.
- 3 Select an option:
  - Select a destination from the quick search list on the right side of the screen.  
The quick search list provides a list of recently found locations in the selected category.
  - Select a subcategory, if necessary, and select a destination.



## Finding National Parks

Device models that include maps for North America or the United States also include detailed information for national parks in the United States. You can navigate to a national park or to a location within a national park.

**1** Select **Where To? > National Parks**.

A list of national parks appears, with the nearest park at the top.

**2** Select **Search**, and enter all or part of the park name to narrow the results (optional).

**3** Select a national park.

A list of categories for locations of features and amenities within the park appears below the park name.

**4** Select an option:

- To start navigating to the park, select **Go!**.
- To view more park information or explore the park features and amenities, select **i**.
- To quickly find a location within the park, select a category from the list below the park name and select a location.

## Exploring National Park Features and Amenities

On North American product models, you can explore detailed information about the features and amenities available inside a national park and navigate to specific locations in the park. For example, you can find campgrounds, landmarks, visitor centres and popular attractions.

**1** From the location search results, select a national park.

A list of categories for park features and amenities appears.

**2** Select a category.

**3** Select a location and select **Go!**.

## Foursquare

### NOTICE

Garmin is not responsible for the accuracy or timeliness of information provided by Foursquare.

You are responsible for understanding and complying with any applicable rules, laws or regulations associated with points of interest.

Foursquare is a location-based social network. Your device includes millions of pre-loaded Foursquare points of interest, which are indicated by the Foursquare logo in your location search results.

## Searching Foursquare points of interest

You can search for Foursquare points of interest loaded on your device.

Select **Where To? > Foursquare®**.

## Viewing Foursquare location details

You can view Foursquare location information and user ratings.

**1** From the location search results, select a Foursquare point of interest.

**2** Select **i**.

## Tripadvisor

### NOTICE


Garmin is not responsible for the accuracy or timeliness of the Tripadvisor information.

You are responsible for understanding and complying with any applicable rules, laws or regulations associated with points of interest.

Your device includes Tripadvisor traveller ratings. Tripadvisor ratings appear automatically in the search results list for restaurants, hotels and attractions. You can also search for nearby Tripadvisor points of interest and sort by distance or popularity.




## Finding Tripadvisor points of interest

- 1 Select **Where To? > Tripadvisor**.
- 2 Select a category.
- 3 If necessary, select a subcategory.  
A list of nearby Tripadvisor points of interest for the category appears.
- 4 Select **Sort Results** to filter the displayed points of interest by distance or popularity (optional).
- 5 Select  and enter a search term (optional).

## Navigating to points of interest within a venue

**NOTE:** this feature may not be available in all areas or for all product models.

You can create a route to a point of interest (POI) within a larger venue, such as a store in a shopping centre or a specific terminal in an airport.

- 1 Select **Where To? > Search**.
- 2 Enter the name of the venue and select .
- 3 Select the venue.  
A list of categories for POIs within the venue appears.
- 4 Select a category, select a location and select **Go!**.

The device creates a route to the parking area or venue entrance closest to the POI. When you arrive at the destination, a chequered flag indicates the recommended parking area. A labelled point indicates the location of the POI within the venue.

## Search tools

Search tools allow you to search for specific types of locations by responding to on-screen prompts.


### Finding a junction

You can search for a junction between two streets, motorways, or other roads.

- 1 Select **Where To? > Intersections**.
- 2 Follow the on-screen instructions to enter street information.
- 3 Select the junction.

### Finding a location using coordinates

You can find a location using latitude and longitude coordinates.


- 1 Select **Where To? > Coordinates**.
- 2 If necessary, select , and change the coordinate format or datum.
- 3 Enter the latitude and longitude coordinates.
- 4 Select an option:
  - To save the coordinates as a location, select **Save**.
  - To start a route to the coordinates, select **Go!**.

## Parking

### Finding Parking Near Your Current Location

- 1 Select **Where To? > Categories > Parking**.
- 2 Select a parking location.
- 3 Select **Go!**.

## Finding Parking Near a Specified Location

- 1 Select **Where To?**.
- 2 Search for a location.
- 3 From the location search results, select a location.
- 4 Select .
- A list of parking areas near the selected location appears.
- 5 Select a parking location.
- 6 Select **Go!**.

## Viewing history

Your device stores a history of the last 50 locations you have found.

Select **Where To?** > **Recent**.

## Clearing the list of recently found places

Select **Where To?** > **Recent** >  > **Clear** > **Yes**.


## Viewing current location information

You can use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.

From the map, select the vehicle.


## Finding emergency services and fuel

You can use the Where Am I? page to find the nearest hospitals, police stations, and fuel stations.

- 1 From the map, select the vehicle.
- 2 Select **Hospitals**, **Police Stations**, or **Fuel**.  
**NOTE:** some service categories are not available in all areas.  
A list of locations for the selected service appears, with the nearest locations at the top.
- 3 Select a location.
- 4 Select an option:
  - To navigate to the location, select **Go!**.
  - To view the phone number and other location details, select .

## Getting directions to your current location

If you need to tell another person how to get to your current location, your device can give you a list of directions.


- 1 From the map, select the vehicle.
- 2 Select  > **Directions to Me**.
- 3 Select a starting location.
- 4 Select **Select**.

## Adding a shortcut

You can add shortcuts to the Where To? menu. A shortcut can point to a location, a category, or a search tool. The Where To? menu can contain up to 36 shortcut icons.


- 1 Select **Where To?** > **Add Shortcut**.
- 2 Select an item.

## Removing a shortcut

- 1 Select **Where To?** >  > **Remove Shortcut(s)**.
- 2 Select a shortcut to remove.
- 3 Select the shortcut again to confirm.
- 4 Select **Done**.

## Saving Locations



### Saving a location

- 1 Search for a location ([Finding a location by category, page 17](#)).
- 2 From the search results, select a location.
- 3 Select  > **Save**.
- 4 If necessary, enter a name, and select **Done**.
- 5 Select **Save**.

### Saving your current location

- 1 From the map, select the vehicle icon.
- 2 Select **Save**.
- 3 Enter a name and select **Done**.



### Editing a Saved Location

- 1 Select **Where To?** > **Saved**.
- 2 If necessary, select a category.
- 3 Select a location.
- 4 Select .
- 5 Select  > **Edit**.
- 6 Select an option:
  - Select **Name**.
  - Select **Phone Number**.
  - Select **Categories** to assign categories to the saved location.
  - Select **Map Symbol** to change the symbol used to mark the saved location on a map.
- 7 Edit the information.
- 8 Select **Done**.

### Assigning Categories to a Saved Location


You can add custom categories to organise your saved locations.

**NOTE:** categories appear in the saved locations menu after you have saved more than 12 locations.

- 1 Select **Where To?** > **Saved**.
- 2 Select a location.
- 3 Select .
- 4 Select  > **Edit** > **Categories**.
- 5 Enter one or more category names, separate by commas.
- 6 If necessary, select a suggested category.
- 7 Select **Done**.

## Deleting a favourite location

**NOTE:** deleted locations cannot be recovered.

- 1 Select **Where To? > Saved**.
- 2 Select  > **Delete**.
- 3 Select the box next to the saved locations to delete and select **Delete**.



# Following a route

## Routes

A route is a path from your current location to one or more destinations.

- The device calculates a recommended route to your destination based on the preferences you set, including the route calculation mode ([Changing the route calculation mode, page 26](#)) and avoidances ([Avoiding Delays, Tolls and Areas, page 26](#)).
- You can start navigating to your destination quickly using the recommended route, or you can select an alternative route ([Starting a route, page 22](#)).
- If there are specific roads you need to use or avoid, you can customise the route ([Shaping Your Route, page 25](#)).
- You can add multiple destinations to a route ([Adding a location to your route, page 25](#)).

## Starting a route


- 1 Select **Where To?**, and search for a location ([Finding and saving locations, page 15](#)).
- 2 Select a location.
- 3 Select an option:
  - To start navigating using the recommended route, select **Go!**.
  - To choose an alternative route, select  and select a route.  
Alternative routes appear to the right of the map.
  - To edit the course of the route, select  > **Edit Route** and add shaping points to the route ([Shaping Your Route, page 25](#)).

The device calculates a route to the location and guides you using voice prompts and information on the map ([Your route on the map, page 23](#)). A preview of the major roads in your route appears at the edge of the map for several seconds.

If you need to stop at additional destinations, you can add the locations to your route ([Adding a location to your route, page 25](#)).

## Starting a route by using the map

You can start a route by selecting a location from the map.


- 1 Select **View Map**.
- 2 Drag and zoom the map to display the area to search.
- 3 If necessary, select  to filter the displayed points of interest by category.  
Location markers (coloured dots) appear on the map.
- 4 Select an option:
  - Select a location marker.
  - Select a point, such as a street, junction or address location.
- 5 Select **Go!**.

## Going home

The first time you start a route home, the device prompts you to enter your home location.


- 1 Select **Where To? > Go Home**.
- 2 If necessary, enter your home location.

## Editing your home location

- 1 Select **Where To? >  > Set Home Location**.
- 2 Enter your home location.

## Your route on the map


As you travel, the device guides you to your destination using voice prompts and information on the map. Instructions for your next turn or exit, or other actions appear across the top of the map.

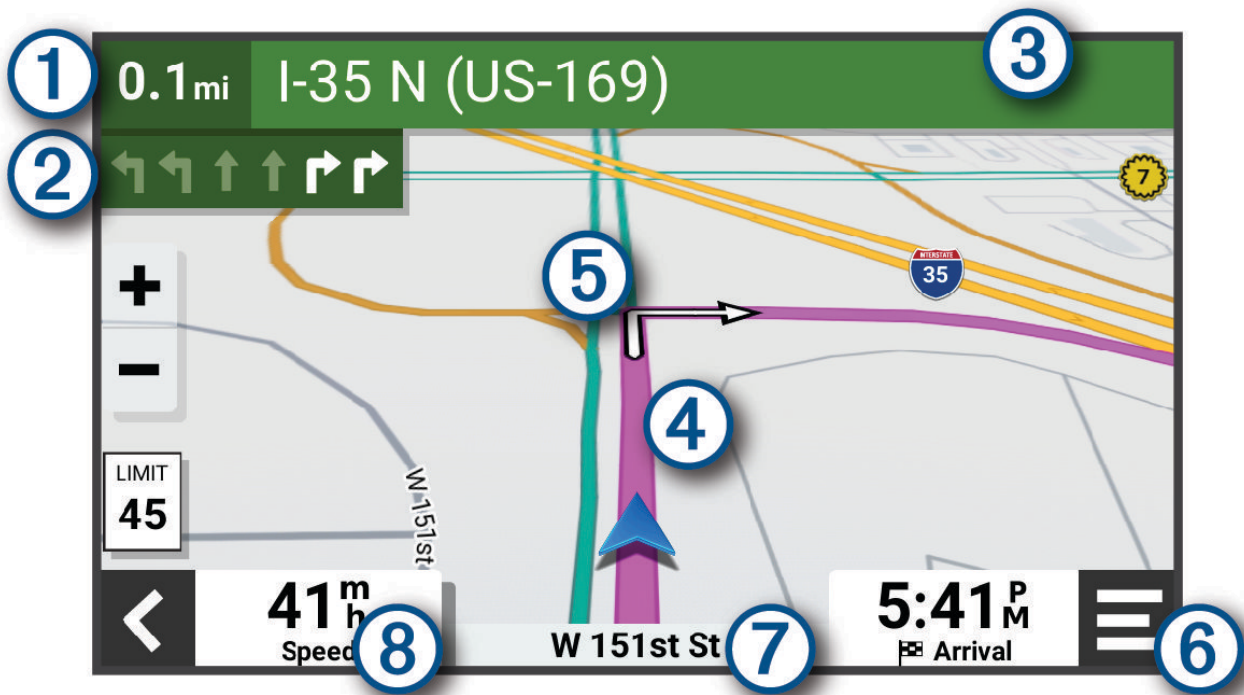

①	Distance to the next action.
②	Next action in the route. Indicates the next turn, exit, or other action and the lane in which you should travel, if available.
③	Name of the street or exit associated with the next action.
④	Route highlighted on the map.
⑤	Next action in the route. Arrows on the map indicate the location of upcoming actions.
⑥	Map tools. Provides tools to show you more information about your route and surroundings.
⑦	Name of the road on which you are travelling.
⑧	Vehicle speed.

## Active lane guidance


As you approach some turns, exits, or interchanges in your route, a detailed simulation of the road appears beside the map, if available. A coloured line ① indicates the proper lane for the turn.

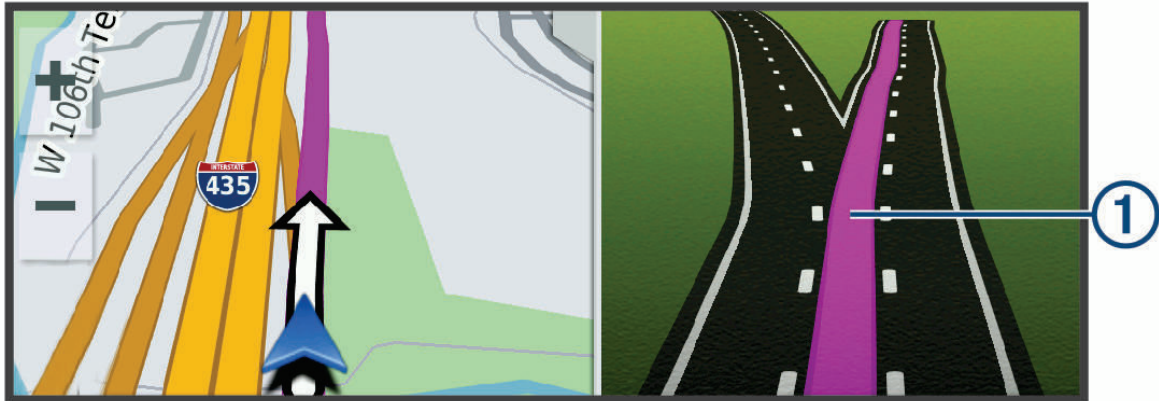

## Viewing turns and directions

While navigating a route, you can view next turns, lane changes, or other directions for your route.

1 From the map, select an option:

- To view next turns and directions as you navigate, select  > **Turns**.  
The map tool displays the next several turns or directions beside the map. The list updates automatically as you navigate the route.
- To view the complete list of turns and directions for the entire route, select the text bar at the top of the map.

2 Select a turn or direction (optional).

Detailed information appears. An image of the junction may appear for junctions on major roads, if available.



## Viewing the Entire Route on the Map

1 While navigating a route, select anywhere on the map.

2 Select .

## Arriving at your destination

When you approach your destination, the device provides information to help you complete your route.

-  indicates the location of your destination on the map, and a voice prompt announces you are approaching your destination.
- When you approach some destinations, the device automatically suggests parking areas. You can select **More** to view a full list of suggested parking areas ([Parking Near Your Destination, page 25](#)).
- When you stop at your destination, the device automatically ends the route. If the device does not detect your arrival automatically, you can select  > **Stop** to end your route.


## Parking Near Your Destination

Your device can help you find a parking spot near your destination. When you approach some destinations, the device automatically suggests parking areas.

1 Select an option:

- When the device suggests parking, select **More** to see all suggested parking areas.

**NOTE:** when you select a suggested parking area, the device automatically updates your route.

- If the device does not suggest parking locations, select **Where To? > Categories > Parking**, and select  **> My Destination**.

2 Select a parking location and select **Go!**.

The device guides you to the parking area.

## Changing Your Active Route

### Adding a location to your route

Before you can add a location to your route, you must be navigating a route ([Starting a route, page 22](#)).

You can add locations to the middle or end of your route. For example, you can add a petrol station as the next destination in your route.

**TIP:** to create complex routes with multiple destinations or scheduled stops, you can use the route planner to plan, schedule and save a route ([Planning a Route, page 37](#)).

1 From the map, select  **> Where To?**.

2 Search for a location ([Finding and saving locations, page 15](#)).

3 Select a location.

4 Select **Go!**.

5 Select an option:

- To add the location as the next destination in your route, select **Add As Next Stop**.
- To add the location to the end of your route, select **Add As Last Stop**.
- To add the location and edit the order of destinations in your route, select **Add to Active Route**.

The device re-calculates the route to include the added location and guides you to the destinations in order.

### Shaping Your Route

Before you can shape your route, you must start a route ([Starting a route, page 22](#)).

You can manually shape your route to change its course. This allows you to direct the route to use a certain road or go through a certain area without adding a destination to the route.

1 Select anywhere on the map.

2 Select **Shape Route**.

**TIP:** you can select  to zoom in on the map and select a more precise location.

The device enters route-shaping mode and recalculates the route to travel through the selected location.


3 Select **Go!**.

4 If necessary, select an option:

- To add more shaping points to the route, select additional locations on the map.
- To remove a shaping point, select the shaping point and select **Remove**.

## Taking a detour

You can take a detour for a specified distance along your route or detour around specific roads. This is useful if you encounter construction zones, closed roads or poor road conditions.

- 1 From the map, select  > **Edit Route**.
- 2 Select an option:
  - To re-route for a specific distance, select **Detour by Distance**.
  - To detour around a specific road on the route, select **Detour by Road**.

## Changing the route calculation mode

- 1 Select **Calculation Mode**.
- 2 Select an option:
  - Select **Faster Time** to calculate routes that are faster to drive, but can be longer in distance.
  - Select **Straight Line** to calculate point-to-point routes (without roads).

## Avoiding environmental zones on your route

Your device can avoid areas with environmental or emissions restrictions that may apply to your vehicle.


Before you can use this feature, you must add an environmental zone vehicle profile to your device ([Adding an environmental zone vehicle profile, page 41](#)).

Before you can avoid environmental zones on your route, you must start a route.

**NOTE:** this feature is not available for all regions or product models.

When the device prompts you, select **Go!** to take an alternative route.

## Stopping the route

From the map, select  > **Stop**.

## Using Suggested Routes

Before you can use this feature, you must save at least one location and enable the travel history feature ([Navigation settings, page 41](#)).

Using the myTrends™ feature, your device predicts your destination based on your travel history, the day of the week and the time of day. After you have driven to a favourite location several times, the location may appear in the navigation bar on the map, along with the estimated time of travel and traffic information.


Select the navigation bar to view a suggested route to the location.

## Avoiding Delays, Tolls and Areas

### Avoiding traffic delays on your route

Before you can avoid traffic delays, you must be receiving traffic information ([Receiving traffic data using your smartphone, page 35](#)).

By default, the device optimises your route to avoid traffic delays automatically. If you have disabled this option in the traffic settings ([Traffic Settings, page 44](#)), you can view and avoid traffic delays manually.

- 1 While navigating a route, select  > **Traffic**.
- 2 Select **Alternate Route**, if available.
- 3 Select **Go!**.


### Avoiding toll roads

Your device can avoid routing you through areas that require tolls, such as toll roads, toll bridges, or congestion areas. The device may still include a toll area in your route if no other reasonable routes are available.

- 1 Select  > **Navigation** > **Avoidances** > **Tolls and Fees**.
- 2 Select **Save**.




## Avoiding road features

- 1 Select  > **Navigation** > **Avoidances**.
- 2 Select the road features to avoid on your routes and select **Save**.

## Avoiding environmental zones


Your device can avoid areas with environmental or emissions restrictions that may apply to your vehicle.

- 1 Select  > **Navigation** > **Environmental Zones**.
- 2 Select an option:
  - To be asked each time before routing through an environmental zone, select **Always Ask**.
  - To always avoid environmental zones, select **Avoid**.
  - To always allow environmental zones, select **Allow**.
- 3 Select **Save**.


## Custom Avoidances

Custom avoidances allow you to select specific areas or sections of road to avoid. When the device calculates a route, it avoids these areas and roads unless no other reasonable route is available.

### Avoiding a road



- 1 Select  > **Navigation** > **Custom Avoidances**.
- 2 If necessary, select **Add Avoidance**.
- 3 Select **Add Avoid Road**.
- 4 Select the starting point of the section of road to avoid and select **Next**.
- 5 Select the ending point of the road section and select **Next**.
- 6 Select **Done**.

### Avoiding an area



- 1 Select  > **Navigation** > **Custom Avoidances**.
- 2 If necessary, select **Add Avoidance**.
- 3 Select **Add Avoid Area**.
- 4 Select the upper left corner of the area to avoid and select **Next**.
- 5 Select the lower right corner of the area to avoid and select **Next**.  
The selected area is shaded on the map.
- 6 Select **Done**.

### Disabling a custom avoidance

You can disable a custom avoidance without deleting it.

- 1 Select  > **Navigation** > **Custom Avoidances**.
- 2 Select a created avoidance.
- 3 Select  > **Disable**.

### Deleting custom avoidances

- 1 Select  > **Navigation** > **Custom Avoidances** > .
- 2 Select an option:
  - To delete all custom avoidances, select **Select All** > **Delete**.
  - To delete one custom avoidance, select the avoidance and select **Delete**.

# Using the Map

You can use the map to navigate a route ([Your route on the map, page 23](#)) or to view a map of your surroundings when no route is active.

- 1 Select **View Map**.
- 2 Touch anywhere on the map.
- 3 Select an option:
  - Drag the map to pan left, right, up, or down.
  - To zoom in or out, select **+** or **-**.
  - To switch between North Up and 3-D views, select **▲**.
  - To filter the displayed points of interest by category, select **Q**.
  - To start a route, select a location on the map, and select **Go!** ([Starting a route by using the map, page 22](#)).

## Map tools

Map tools provide quick access to information and device functions while you view the map. When you activate a map tool, it appears in a panel at the edge of the map.

**Stop:** stops navigation of the active route.

**Camera:** provides dash cam controls and displays forward collision and lane departure alerts. Also allows you to open the dash cam viewfinder and the driver assistance settings.

**Edit Route:** allows you to re-route or skip locations in your route ([Changing Your Active Route, page 25](#)).

**Mute Navigation:** mutes the device audio.

**Cities Ahead:** displays upcoming towns and services along your active route or along a motorway ([Towns Ahead, page 29](#)).

**Up Ahead:** displays upcoming locations along the route, or the road on which you are travelling ([Up ahead, page 28](#)).

**Traffic:** displays traffic conditions along your route or in your area ([Viewing upcoming traffic, page 30](#)). This feature is not available in all areas or for all device models.

**Trip Data:** displays customisable trip data, such as speed or mileage ([Viewing trip data from the map, page 29](#)).

**Turns:** displays a list of upcoming turns in your route ([Viewing turns and directions, page 24](#)).

**Phone:** displays a list of recent phone calls from your connected phone and displays in-call options while a phone call is active ([Using in-call options, page 34](#)).

**Weather:** displays weather conditions for your area.

**Music Player:** displays media controls and media information.

## Viewing a map tool

- 1 From the map, select **≡**.
- 2 Select a map tool.

The map tool appears in a panel at the edge of the map.
- 3 When you have finished using the map tool, select **✕**.

## Up ahead

The Up Ahead tool provides information about upcoming locations along your route or the road on which you are travelling. You can view upcoming points of interest by category, such as restaurants, fuel stations or roadside services.

You can customise the categories that show in the Up Ahead tool.

## Viewing upcoming locations

- 1 From the map, select  > **Up Ahead**.

While you are travelling, the map tool shows the next location along your road or route.


- 2 Select an option:
  - If the map tool shows categories, select a category to view a list of nearby locations in that category.
  - If the map tool shows upcoming locations, select a location to view location details or start a route to the location.

## Customising the up ahead categories

You can change the location categories that appear in the Up Ahead tool.

- 1 From the map, select  > **Up Ahead**.

- 2 Select a category.

- 3 Select .

- 4 Select an option:
  - To move a category up or down in the list, select and drag the arrow next to the category name.
  - To change a category, select the category.
  - To create a custom category, select a category, select **Custom Search** and enter the name of a business or category.
- 5 Select **Save**.

## Towns Ahead

While you are travelling on a highway or navigating a route that includes a highway, the Towns Ahead tool provides information about upcoming towns along the highway. For each town, the map tool shows the distance to the highway exit and the services available, similar to the information on highway road signs.

## Viewing Upcoming Towns and Exit Services

- 1 From the map, select  > **Cities Ahead**.

While you are travelling along a motorway or an active route, the map tool shows information about upcoming towns and exits.

- 2 Select a town.

The device shows a list of points of interest located at the selected town exit, such as fuel stations, lodging or restaurants.


- 3 Select a location, and select **Go!** to start navigating.

## Trip information

### Viewing trip data from the map

From the map, select  > **Trip Data**.

### Customising the trip data fields

- 1 From the map, select  > **Trip Data**.

- 2 Select a trip data field.

- 3 Select an option.

The new trip data field appears in the trip data map tool.

## Viewing Trip Data

The trip data tool displays your speed and provides statistics about your trip.


From the map, select **Speed**.

## Viewing the trip log

Your device keeps a trip log, which is a record of the path you have travelled.

- 1 Select  > **Map Display** > **Map Layers**.
- 2 Select the **Travel History** tick box.

## Resetting trip information

- 1 From the map, select **Speed**.
- 2 Select  > **Reset Field(s)**.
- 3 Select an option:
  - When not navigating a route, select **Select All** to reset every data field except the speedometer, on the first page.
  - Select **Reset Overall Data** to reset Trip A and total data.
  - Select **Reset Trip B** to reset the odometer.
  - Select **Reset Max. Speed** to reset the maximum speed.


## Viewing upcoming traffic

### NOTICE

Garmin is not responsible for the accuracy or timeliness of the traffic information.



Before you can use this feature, your device must be receiving traffic data ([Traffic, page 35](#)).

You can view traffic incidents coming up along your route or along the road on which you are travelling.



- 1 While navigating a route, select  > **Traffic**.  
The nearest upcoming traffic incident appears in a panel on the right side of the map.
- 2 Select the traffic incident to view additional details.

## Viewing traffic on the map

The traffic map shows colour-coded traffic flow and delays on nearby roads.

- 1 From the main menu, select  > **Traffic**.
- 2 If necessary, select  > **Legend** to view the legend for the traffic map.


## Searching for traffic incidents

- 1 From the main menu, select  > **Traffic**.
- 2 Select  > **Incidents**.
- 3 Select an item in the list.
- 4 If there is more than one incident, use the arrows to view additional incidents.

## Customising the map

### Customising the map layers


You can customise which data appears on the map, such as icons for points of interest and road conditions.

- 1 Select  > **Map Display** > **Map Layers**.
- 2 Select the tick box next to each layer you want to show on the map.

### Changing the map data field

- 1 From the map, select a data field.  
**NOTE:** you cannot customise Speed.
- 2 Select a type of data to display.

## Changing the map perspective

- 1 Select  > **Map Display** > **Driving Map View**.
- 2 Select an option:
  - Select **Track Up** to display the map in two dimensions (2-D), with your direction of travel at the top.
  - Select **North Up** to display the map in 2-D with North at the top.
  - Select **3-D** to display the map in three dimensions.

## Live services, traffic and smartphone features

### **WARNING**

Do not read or interact with notifications while driving, because doing so can cause distraction that could lead to an accident resulting in serious personal injury or death.

The Garmin Drive app allows your device to receive smart notifications and live information, such as live traffic data and weather information.

**Live traffic data:** sends real-time traffic data to your device, such as traffic incidents and delays, construction zones and road closings ([Traffic, page 35](#)).

**Weather information:** sends real-time weather forecasts, road conditions and weather radar to your device ([Viewing the Weather Forecast, page 36](#)).

**Smart Notifications:** displays phone notifications and messages on your device. This feature is not available for all languages.

**Hands-Free calling:** allows you to make and receive phone calls using your device, and allows you to use the device as a hands-free speaker phone. If the selected language supports the voice command feature, you can place calls using voice commands.

**Send locations to device:** allows you to send locations from your smartphone to your navigation device.

## Pairing with Your Smartphone


You can pair your Garmin DriveCam device with your smartphone and the Garmin Drive app to enable additional features and access live information ([Live services, traffic and smartphone features, page 31](#)).

- 1 From the app store on your smartphone, install the Garmin Drive app.
- 2 Turn on your Garmin DriveCam device and place the device and your smartphone within 3 m (10 ft.) of each other.
- 3 On your phone, open the Garmin Drive app.
- 4 Follow the on-screen instructions to sign in to a Garmin account and complete the pairing and setup process.

The main app dashboard appears. After the devices are paired, they connect automatically when they are turned on and within range.


## Disabling Bluetooth features (Android™)

By default, all compatible Bluetooth features are enabled when you pair your phone. You can disable specific Bluetooth features and remain connected to the other features.

- 1 Select  > **Wireless Networks**.
- 2 Select an option:
  - To disable all Bluetooth features, clear the Bluetooth tick box.
  - To disable only hands-free calling, select the phone name and clear the **Phone Calls** tick box.


## Showing or hiding app notifications (Android)

You can use the Garmin Drive app to customise which types of smartphone notifications appear on your Garmin DriveCam device.

- 1 On your phone, open the Garmin Drive app.
- 2 Select  > **Smart Notifications**.  
A list of smartphone app categories appears.
- 3 Select a category to enable or disable notifications for that type of app.



## Disabling Bluetooth features (iPhone)

By default, all compatible Bluetooth features are enabled when you pair your phone. You can disable specific Bluetooth features and remain connected to the other features.

- 1 Select  > **Wireless Networks**.
- 2 Select an option:
  - To disable all Bluetooth features, clear the Bluetooth tick box.
  - To disable hands-free calling, select the phone name and clear the **Phone Calls** check box.

## Showing or hiding notification categories (iPhone)

You can filter the notifications shown on your device by showing or hiding categories.

- 1 Select  > **Wireless Networks**.
- 2 Select **Smartphone services**.  
**TIP:**  appears coloured when the services are active.
- 3 Select **Smart Notifications**.
- 4 Select the check box next to each notification to show.


## Viewing Videos and Photos on Your Smartphone

Before you can view videos and photos on your smartphone, you must pair your Garmin DriveCam device with the Garmin Drive app ([Pairing with Your Smartphone, page 31](#)).

**NOTE:** the device stops recording and alerts are disabled while viewing videos or photos.


- 1 From the Garmin Drive app on your smartphone, select **Videos and photos**.
- 2 Select an option:
  - To view a photo or video you saved, select a file from the **Favourites** category.
  - To view recent video footage that has not been saved, select a video from the **Temporary** category.

## Deleting a Video or Photo Using Your Smartphone

- 1 When you are viewing the list of saved videos or photos on your smartphone, select **Select**.
- 2 Select one or more files.
- 3 Select .

## Smart Notifications

While your device is connected to the Garmin Drive app, you can view notifications from your smartphone on your Garmin DriveCam device, such as text messages, incoming calls, and calendar appointments.

**NOTE:** you may need to wait a few minutes to receive notifications on your navigation device after it connects to the Garmin Drive app.  appears coloured in the Bluetooth settings when smart notifications are connected and active ([Wireless network settings, page 42](#)).

## Receiving notifications

### WARNING

Do not read or interact with notifications while driving, because doing so can cause distraction that could lead to an accident resulting in serious personal injury or death.

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app ([Live services, traffic and smartphone features, page 31](#)).

From most pages, a pop-up appears when the device receives a notification from your smartphone. If the device is moving, you must verify you are a passenger and not the driver before you can view notifications.

**NOTE:** if you are viewing the map, notifications appear in a map tool.

- To ignore a notification, select **OK**.  
The pop-up closes, but the notification remains active on your phone.
- To view a notification, select **View**.
- To listen to the notification, select **View > Play**.  
The device reads the notification using text-to-speech technology. This feature is not available for all languages.
- To perform additional actions, such as dismissing the notification from your phone, select **View**, and select an option.

**NOTE:** additional actions are available for only some notification types and must be supported by the app generating the notification.


## Receiving notifications while viewing the map

### WARNING

Do not read or interact with notifications while driving, because doing so can cause distraction that could lead to an accident resulting in serious personal injury or death.

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app ([Live services, traffic and smartphone features, page 31](#)).

When you are viewing the map, new notifications appear in a map tool at the edge of the screen. If the device is moving, you must verify you are a passenger and not the driver before you can view notifications.

- To ignore a notification, select  or wait for the pop-up to expire.  
The pop-up closes, but the notification remains active on your phone.
- To view a notification, select the notification text.
- To listen to the notification, select **Play Message**.  
The device reads the notification using text-to-speech technology. This feature is not available for all languages.


## Viewing the list of notifications

You can view a list of all active notifications.

- 1 Select  > **Smart Notifications**.

The list of notifications appears. Unread notifications appear black, and previously read notifications appear grey.

- 2 Select an option:

- To view a notification, select the notification description.
- To listen to a notification, select .

The device reads the notification using text-to-speech technology. This feature is not available for all languages.


## Hands-free calling

**NOTE:** while most phones are supported and can be used, it cannot be guaranteed that a particular phone can be used. All features may not be available for your phone.

Using Bluetooth wireless technology, your device can connect to your mobile phone to become a hands-free device ([Live services, traffic and smartphone features, page 31](#)). While connected, you can place or receive calls using your device.


### Placing a call

#### Dialling a number


- 1 Select  > **Phone** > **Dial**.
- 2 Enter the number.
- 3 Select **Dial**.

#### Calling a contact in your phone book

Your phone book is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the phone book to be available. Some phones do not support this feature.

- 1 Select  > **Phone** > **Phone Book**.
- 2 Select a contact.
- 3 Select **Call**.

#### Calling a location


- 1 Select  > **Phone** > **Browse Categories**.
- 2 Select a point of interest.
- 3 Select **Call**.

### Receiving a call

When you receive a call, select **Answer** or **Ignore**.


### Using the call history

Your call history is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the call history to be available. Some phones do not support this feature.

- 1 Select  > **Phone** > **Call History**.
- 2 Select a category.  
A list of calls appears, with the most recent calls at the top.
- 3 Select a call.

### Using in-call options

In-call options are available when you answer a call. Some options may not be compatible with your phone.



**TIP:** if you close the in-call options page, you can open it again by selecting  from any screen. You can also select the caller from the map.

- To set up a conference call, select **Add Call**.
- To transfer audio to your phone, select **Call in Progress on Navigator**.  
**TIP:** you can use this feature if you want to disconnect the Bluetooth connection and remain on the call, or if you need privacy.
- To use the dial pad, select **Keypad**.  
**TIP:** you can use this feature to use automated systems, such as voice mail.
- To mute the microphone, select **Mute**.
- To hang up, select **End Call**.



## Saving a home phone number

**TIP:** after you save a home number, you can edit the home number by editing "Home" in your list of favourite locations ([Editing a Saved Location, page 21](#)).

- 1 Select  > **Phone** >  > **Set Home Number**.
- 2 Enter your phone number.
- 3 Select **Done**.


## Calling home

Before you can call home, you must enter a phone number for your home location.

Select  > **Phone** > **Call Home**.


## Disconnecting a Bluetooth device

You can temporarily disconnect a Bluetooth device without deleting it from the paired devices list. The Bluetooth device can connect to your Garmin DriveCam device automatically in the future.

- 1 Select  > **Wireless Networks**.
- 2 Select the device to disconnect.
- 3 Select **Disconnect**.

## Deleting a paired phone

You can delete a paired phone to prevent it from automatically connecting to your device in the future.

- 1 Select  > **Wireless Networks**.
- 2 Select the phone, then select **Forget Device**.

# Traffic

### NOTICE

Garmin is not responsible for the accuracy or timeliness of the traffic information.

Your device can provide information about traffic on the road ahead or on your route. You can set your device to avoid traffic when calculating routes, and to find a new route to your destination if a large traffic delay occurs on your active route ([Traffic Settings, page 44](#)). The traffic map allows you to browse the map for traffic delays in your area.

To provide traffic information, your device must be receiving traffic data.

- All product models can receive subscription-free traffic data using the Garmin Drive app ([Receiving traffic data using your smartphone, page 35](#)).

Traffic data is not available in all areas. For information about traffic coverage areas, go to [garmin.com/traffic](http://garmin.com/traffic).

## Receiving traffic data using your smartphone

Your device can receive subscription-free traffic data while connected to a smartphone running the Garmin Drive app.

- 1 Connect your device to the Garmin Drive app ([Live services, traffic and smartphone features, page 31](#)).
- 2 On your Garmin DriveCam device, select  > **Traffic** and verify that the **Traffic** option is selected.



## Enabling traffic

You can enable or disable traffic data.



- 1 Select  > **Traffic**.
- 2 Select the **Traffic** tick box.

## Viewing traffic on the map

The traffic map shows colour-coded traffic flow and delays on nearby roads.

- 1 From the main menu, select  > **Traffic**.
- 2 If necessary, select  > **Legend** to view the legend for the traffic map.



## Searching for traffic incidents

- 1 From the main menu, select  > **Traffic**.
- 2 Select  > **Incidents**.
- 3 Select an item in the list.
- 4 If there is more than one incident, use the arrows to view additional incidents.

# Using the apps

## Viewing the Owner's Manual on Your Device

You can view the complete owner's manual on the device screen in many languages.


- 1 Select  > **Owner's Manual**.  
The owner's manual appears in the same language as the software text ([Language and Keyboard Settings, page 44](#)).
- 2 Select  to search the owner's manual (optional).

## Viewing the Weather Forecast


### NOTICE

Garmin is not responsible for the accuracy or timeliness of the weather data.

Before you can use this feature, your device must be receiving weather data. You can connect your device to the Garmin Drive app to receive weather data ([Live services, traffic and smartphone features, page 31](#)).



- 1 Select  > **Weather**.  
The device shows the current weather conditions and a forecast for the next several days.
- 2 Select a day.  
The detailed forecast for that day appears.

## Viewing weather near a different town

- 1 Select  > **Weather** > **Current Location**.
- 2 Select an option:
  - To view weather for a favourite town, select a town in the list.
  - To add a favourite town, select **Add City**, and enter a town name.

## Viewing the weather radar

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app ([Live services, traffic and smartphone features, page 31](#)).



- 1 Select  > **Weather Radar**.
- 2 Select  to animate the radar map.

## Viewing weather alerts

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app ([Live services, traffic and smartphone features, page 31](#)).

**NOTE:** this feature is not available in all areas.



While you are travelling with your device, weather alerts may appear on the map. You can also view a map of weather alerts near your current location or near a selected town.

- 1 Select  > **Weather**.
- 2 If necessary, select a town.
- 3 Select  > **Weather Alerts**.

## Checking road conditions

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app ([Live services, traffic and smartphone features, page 31](#)).

You can view weather-related road conditions for the roads in your area, on your route or in another town.

- 1 Select  > **Weather**.
- 2 If necessary, select a town.
- 3 Select  > **Road Conditions**.



## Route Planner

You can use the route planner to create and save a route, which you can navigate later. This can be useful for planning a delivery route, a vacation, or a road trip. You can edit a saved route to further customise it, including reordering locations, adding suggested attractions and adding shaping points.





You can also use the route planner to edit and save your active route.

### Planning a Route

A route can include many locations and it must include at least a starting location and one destination. The starting location is the location from which you plan to start your route. If you start navigating the route from a different location, the device gives you the option to route to your starting location first. For a round trip, the starting location and final destination can be the same.



- 1 Select **Route Planner > Create Route**.
- 2 If necessary, select a calculation mode.  
**NOTE:** the Faster Time mode is selected by default.
- 3 Select an option to choose a location for your starting point:
  - Select a location on the map.
  - Select  and search for a location ([Finding a location using the search bar, page 15](#)).
- 4 Repeat step 3 to add more locations.  
**NOTE:** the last location you add is the destination.
- 5 After you have added all the necessary locations, select .

### Editing and Reordering Locations in a Route


- 1 Select  > **Route Planner**.
- 2 Select a saved route.
- 3 Select **List**.
- 4 Select a location.
- 5 Select an option:
  - To move the location up or down, select , and drag the location to a new position in the route.
  - To add a new location after the selected location, select .
  - To remove the location, select .

## Changing Routing Options for a Route

You can customise how the device calculates your route.


- 1 Select  > **Route Planner**.
- 2 Select a saved route.
- 3 Select .
- 4 Select an option:
  - To add shaping points to your route, select **Shaping** and select at least one location.
  - To change the calculation mode for the route, touch a route segment and select a calculation mode.

## Navigating to a Saved Route

- 1 Select  > **Route Planner**.
  - 2 Select a saved route.
  - 3 Select **Go!**.
  - 4 Select the first location to navigate to and select **OK**.
  - 5 Select **Start**.
- The device calculates a route from your current location to the selected location and then it guides you to the remaining route destinations in order.

## Editing and saving your active route

If a route is active, you can use the route planner to edit and save it.

- 1 Select  > **Route Planner** > **My Active Route**.
- 2 Edit your route using any of the route planner features.

The route recalculates each time you make a change.
- 3 Select **Save** to save your route, which you can navigate again later (optional).


## Wireless Cameras

Your device can display the video feed from one or more connected wireless cameras (sold separately).

### Pairing the Device with a Wireless Camera

You can pair a wireless camera with your Garmin DriveCam device.

- 1 Update your Garmin DriveCam device to the latest software version ([Map and Software Updates, page 46](#)).


Your device may not support the wireless camera without the latest software.
- 2 Select  > **Wireless Camera** > **Add New Camera**.
- 3 Follow the on-screen instructions to finish pairing and setting up the camera.

After you complete the pairing process with a camera for the first time, it connects automatically to the Garmin navigation device when power is applied.

### Viewing the Wireless Camera

#### **WARNING**

This device is intended to enhance situational awareness when used properly. If used improperly, you could become distracted by the display, which could lead to an accident causing serious personal injury or death. Always view the display at a glance when the vehicle is in motion to avoid becoming distracted.



From the home screen or the map, select .


## Aligning the Guidance Lines


For the best reference points, the guidance lines should be aligned to reflect the outside edges of the vehicle. You should align the guidance lines separately for each backup camera. On some models, adjustment is automatically available after pairing a camera.

### WARNING

You must ensure that the guidance lines are properly aligned before using the device and after making any camera angle adjustments. Failure to properly align the guidance lines could result in an accident or collision, resulting in death, serious injury or property damage.

- 1 Position the vehicle with one side closely aligned to a kerb, driveway or parking stall lines.  
You may want to position the vehicle in the centre of a parking stall and then pull forwards into the next stall. This allows you to use the parking stall lines at the rear of the vehicle as reference points for alignment.  
The kerb, driveway or parking stall lines should be clearly visible on the device.
- 2 Select an option:
  - From the camera view, tap the screen and select .
  - From the camera view, select  > **Adjust Video**.
- 3 Drag the circles on the corners of the guidance lines ①, or tap the arrows until they match the angle and position of the kerb, driveway or parking stall lines.  
The guidance lines should appear directly on top of your reference points.  
The red or orange section of the guidance lines should align with the rear of your vehicle.

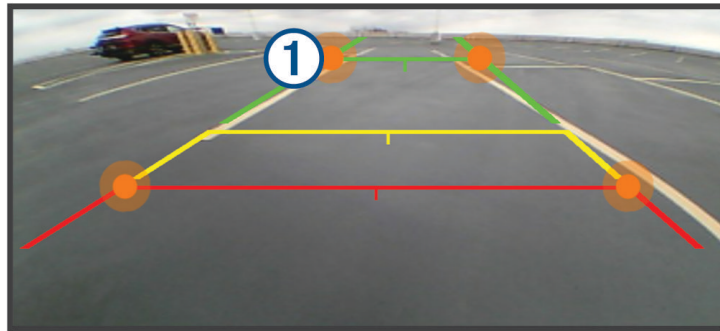


- 4 If necessary, reposition the vehicle with the other side closely aligned to a kerb, driveway or parking stall lines, and repeat the alignment process.  
You should attempt to keep the guidance lines symmetrical, even if your vehicle is not in perfect alignment with the kerb, driveway or parking stall lines.
- 5 Select  after alignment is complete.

## Viewing Previous Routes and Destinations


Before you can use this feature, you must enable the travel history feature ([Device and privacy settings, page 44](#)).

You can view your previous routes and places where you have stopped on the map.

Select  > **Trip History**.

# Music Player

The music player allows your device to control the music currently playing from a media app on your paired phone. You can open the media player at any time by selecting Music Player from the main menu.

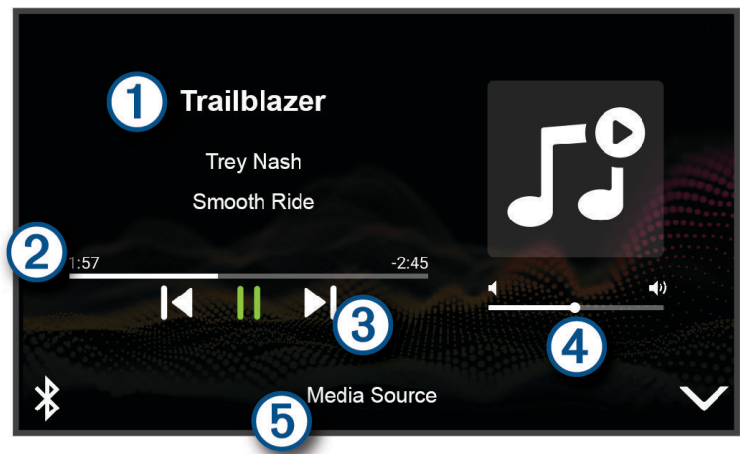

1	Information about the currently playing media, such as title, artist, album, station or channel.
2	Progress through the current media item.
3	Playback controls. The controls change based on the source providing the media.
4	Volume controls. You can use the slider to adjust the volume.
5	The name of the connected media source.

## Adding the Music Player Tool to the Map

The music player map tool enables you to control the music player from your map.

1 Open the map.

2 Select  > **Music Player**.

The music player controls appear on the map.

# Settings

## Map and vehicle settings

Select  > **Map Display**.

**Map Vehicle Icon:** sets the vehicle icon that represents your position on the map.

**Driving Map View:** sets the perspective on the map.

**Map Detail:** sets the level of detail on the map. More detail may cause the map to be drawn more slowly.

**Map Theme:** changes the colour of the map data.

**Map Layers:** sets the data that appears on the map page ([Customising the map layers, page 30](#)).

**Auto Zoom:** automatically selects the zoom level for optimal use of your map. When disabled, you must zoom in or out manually.

**myMaps:** sets which installed maps the device uses.

## Enabling maps

You can enable map products installed on your device.

**TIP:** to purchase additional map products, go to [buy.garmin.com](http://buy.garmin.com).

- 1 Select  > **Map Display** > **myMaps**.
- 2 Select a map.

## Navigation settings

Select  > **Navigation**.

**Calculation Mode:** sets the route calculation method.

**Avoidances:** sets road features to avoid on a route.

**Custom Avoidances:** allows you to avoid specific roads or areas.

**Environmental Zones:** sets the avoidance preferences for areas with environmental or emissions restrictions that may apply to your vehicle.

**Restricted Mode:** disables all functions that require significant operator attention.

**GPS Simulator:** stops the device from receiving a GPS signal and saves battery power.

## Calculation Mode Settings

Select  > **Navigation** > **Calculation Mode**.


The route calculation is based on road speeds and vehicle acceleration data for a given route.

**Faster Time:** calculates routes that are faster to drive but can be longer in distance.

**Straight Line:** calculates a direct line from your location to your destination.

## Setting a simulated location


If you are indoors or not receiving satellite signals, you can use the GPS simulator to plan routes from a simulated location.

- 1 Select  > **Navigation** > **GPS Simulator**.
- 2 From the main menu, select **View Map**.
- 3 Tap the map twice to select an area.  
The address of the location appears at the bottom of the screen.
- 4 Select the location description.
- 5 Select **Set Location**.

## Adding an environmental zone vehicle profile

You can add a vehicle profile for the environmental zone settings specific to your vehicle, such as fuel type and emission standard.

**NOTE:** this feature is not available for all regions or product models.

- 1 Select  > **Navigation** > **Environmental Zones**.
- 2 Follow the on-screen instructions.

## Wireless network settings

The wireless network settings allow you to manage Wi-Fi networks, paired Bluetooth devices and Bluetooth features.

Select  > **Wireless Networks**.

**Bluetooth:** enables Bluetooth wireless technology.

**Paired Device Name:** the names of paired Bluetooth devices appear in the menu. You can select a device name to change Bluetooth feature settings for that device.

**Search for Devices:** searches for nearby Bluetooth devices.

**Friendly Name:** allows you to enter a friendly name that identifies your device on other devices with Bluetooth wireless technology.

**Wi-Fi:** enables the Wi-Fi technology.

**Saved Networks:** allows you to edit or remove saved networks.

**Search for Networks:** searches for nearby Wi-Fi networks ([Connecting to a Wi-Fi Network, page 46](#)).

## Driver Assistance Settings

Select  > **Driver Assistance**.

**Driver Alerts:** allows you to enable or disable alerts for upcoming zones or road conditions ([Driver awareness features and alerts, page 11](#)).

**Speeding Alert:** alerts you when you are exceeding the speed limit.

**Reduced Speed Tone:** alerts you when the speed limit decreases.

**Route Preview:** displays a preview of the major roads on your route when you start navigation.

**Break Planning:** reminds you to take a break, and displays upcoming services after you drive for an extended time. You can enable or disable break reminders and upcoming service suggestions.

**Proximity Alerts:** alerts you when you approach speed cameras or red light cameras.

**Forward Collision Warning:** allows you to enable and set the sensitivity of the forward collision warning. A higher sensitivity alerts you sooner than a lower sensitivity.

**Go Alert:** alerts you when stopped traffic starts moving.

**Lane Departure Warning:** enables the device to alert you when it detects you may be crossing a lane boundary unintentionally.

### Proximity alerts settings

**NOTE:** you must have custom points of interest (POIs) loaded for proximity points alerts to display.

**NOTE:** this feature is not available in all areas.

Select  > **Driver Assistance** > **Proximity Alerts**.

**Audio:** sets the style of alert that plays when you approach proximity points.

**Alerts:** sets the type of proximity points for which alerts are played.



## Dash Cam Settings

Select  > **Dash Cam**.

**Camera Placement:** allows you to set the vehicle height and camera position, and align the dash cam.

**Record on Startup:** enables the dash camera to start recording video automatically when you turn on the device.

**Video Resolution:** sets the resolution and quality for dash cam recordings.

**Incident Detection:** sets the sensitivity for incident detection features. The device saves video automatically when it detects a possible driving incident.


**Data Overlay:** includes date, time, location and speed information in the recorded video.

**Unsaved Footage:** determines when the device deletes unsaved video footage. When the **Delete When Full** option is selected, the device deletes the oldest unsaved video when the memory card storage is full. When the **Promptly Delete** option is selected, the device continually deletes unsaved video more than three minutes old and deletes all unsaved video each time it is powered off. This is useful to help protect data privacy. While the Promptly Delete option is selected, you cannot view unsaved video in the gallery.

## Wireless Camera Settings

The wireless camera settings allow you to manage paired Garmin wireless cameras and camera settings. Settings in this menu only appear when a wireless camera is connected to your Garmin DriveCam device. See the manual for your wireless camera for more information about pairing a wireless camera with your Garmin DriveCam device.

### Backup camera settings

Select  > **Wireless Camera** and select the backup camera name.

**Flip Video:** allows you to flip or mirror the video.

**Guidance Lines:** sets preferences for guidance lines displayed on the camera video.

**Rename:** allows you to rename the paired camera.

**Set Default Camera:** sets the order in which cameras appear in the camera view. The camera at the top of the list is the default camera and appears first each time the camera view appears.

**Unpair:** removes the paired camera.

**Automatic Activation:** enables the Garmin navigation device to display the default camera view automatically each time the navigation device is turned on. If the navigation device is connected to an ignition-switched power outlet, this feature allows you to view the backup camera automatically when you start your vehicle.

**Video Resolution:** allows you to set the quality of the camera video. Higher resolution settings provide a more detailed image but use more battery power.

**NOTE:** this setting is not available for all navigation device product models.

## Display settings

Select  > **Display**.


**Color Mode:** allows you to select day or night colour mode. If you select the Auto option, the device automatically switches to day or night colours based on the time of day.

**Brightness:** allows you to adjust the display brightness.

**Display Timeout:** allows you to set the amount of idle time before your device enters sleep mode while using battery power.

**Screenshot:** allows you to take a picture of the device screen. Screenshots are saved in the Screenshot folder of the device storage.

## Traffic Settings

From the main menu, select  > **Traffic**.


**Traffic**: enables the traffic feature.

**Current Provider**: sets the traffic provider to use for traffic data. The Auto option selects the best available traffic data automatically.

**Subscriptions**: lists the current traffic subscriptions.

**Optimize Route**: enables the device to use optimised alternative routes automatically or upon request ([Avoiding traffic delays on your route, page 26](#)).

## Units and time settings

To open the Units and Time settings page, from the main menu, select  > **Units & Time**.

**Current Time**: sets the device time.

**Time Format**: allows you to select a 12-hour, 24-hour or UTC display time.

**Units**: sets the unit of measure used for distances.

**Position Format**: sets the co-ordinate format and datum used for geographical co-ordinates.


### Setting the Time

1 From the main menu, select the time.

2 Select an option:

- To set the time automatically using GPS information, select **Automatic**.
- To set the time manually, drag the numbers up or down.

## Language and Keyboard Settings

To open the Language and Keyboard settings, from the main menu, select  > **Language & Keyboard**.

**Voice Language**: sets the language for voice prompts.

**text language**: sets all on-screen text to the selected language.

**NOTE**: changing the text language does not change the language of user-entered data or map data, such as street names.

**Keyboard language**: enables keyboard languages.

## Device and privacy settings

Select  > **Device**.

**About**: displays the software version number, the unit ID number and information on several other software features.

**Regulatory**: displays regulatory markings and information.

**EULAs**: displays the end-user licence agreements.

**NOTE**: you need this information when you update the system software or purchase additional map data.

**Software Licenses**: displays software licensing information.

**Device Data Reporting**: shares anonymous data to improve the device.

**Travel History**: allows the device to store a record of the places you go. This allows you to view the trip log, use the Trip History feature and use myTrends suggested routes.

**Reset**: allows you to clear your travel history, reset settings or delete all user data.

## Resetting Data and Settings

The device offers several options for deleting your user data and resetting all settings to the factory default values.

1 Select  > **Device** > **Reset**.

2 Select an option:

- To clear your travel history, select **Clear Travel History**.  
This option deletes all records of the places you have travelled. It does not delete saved locations or installed maps.
- To reset all settings to the factory default values, select **Reset Default Settings**.  
This option does not delete any user data.
- To delete all user data and reset all settings to the factory default values, select **Delete Data and Reset Settings**.  
This option deletes all user data, including your saved locations, recently found locations and travel history. Installed maps are not deleted.

## Device information

### Viewing E-label Regulatory and Compliance Information

- 1 From the settings menu, swipe to the bottom of the menu.
- 2 Select **Device** > **Regulatory**.

### Specifications

Operating temperature range	From -20° to 55°C (from -4° to 131°F)
Charging temperature range	From 0° to 45°C (from 32° to 113°F)
Power input	Vehicle power using the included vehicle power cable. AC power using an optional accessory (for home and office use only).
Battery type	Rechargeable lithium-ion

### Charging the Device

**NOTE:** this Class III product shall be powered by an LPS power supply.

You can charge the battery in the device using any of these methods.

- Connect the device to vehicle power.
- Connect the device to an optional power adapter accessory, such as a wall power adapter.

You can purchase an approved Garmin AC-DC adapter suitable for home or office use from a Garmin dealer or [www.garmin.com](http://www.garmin.com). The device may charge slowly when connected to a third-party adapter.

## Device maintenance

### Garmin Support Centre

Go to [support.garmin.com](http://support.garmin.com) for help and information, such as product manuals, frequently asked questions, videos and customer support.

## Map and Software Updates

For the best navigation experience, you should keep the maps and software on your device up to date.

Map updates provide the newest available changes to roads and locations in the maps used by your device. Keeping maps up to date helps your device find recently added locations and calculate more accurate routes. Map updates are large and may take several hours to complete.


Software updates provide changes and improvements to the device features and operation.

You can update your device using two methods.

- You can connect the device to a Wi-Fi network to update directly on the device (recommended). This option allows you to update your device conveniently without connecting it to a computer.
- You can connect the device to a computer and update it using the Garmin Express application ([garmin.com/express](https://garmin.com/express)).

### Connecting to a Wi-Fi Network

The first time you turn on the device, it prompts you to connect to a Wi-Fi network and register your device. You can also connect to a Wi-Fi network using the settings menu.

- 1 Select  > **Wireless Networks**.
- 2 If necessary, select **Wi-Fi** to enable Wi-Fi technology.
- 3 Select **Search for Networks**.  
The device displays a list of nearby Wi-Fi networks.
- 4 Select a network.
- 5 If necessary, enter the password for the network, and select **Done**.

The device connects to the network, and the network is added to the list of saved networks. The device reconnects to this network automatically when it is within range.



## Updating Maps and Software Using a Wi-Fi Network

### NOTICE

Map and software updates may require the device to download large files. Regular data limits or charges from your internet service provider apply. Contact your internet service provider for more information about data limits or charges.

You can update the maps and software by connecting your device to a Wi-Fi network that provides access to the internet. This allows you to keep your device up to date without connecting it to a computer.

- 1 Connect the device to a Wi-Fi network ([Connecting to a Wi-Fi Network, page 46](#)).

While connected to a Wi-Fi network, the device checks for available updates. When an update is available,  appears on the  icon in the main menu.

- 2 Select  > **Updates**.

The device checks for available updates. When an update is available, **Update Available** appears below Map or Software.

- 3 Select an option:

- To install all available updates, select **Install All**.
- To install only map updates, select **Map > Install All**.
- To install only software updates, select **Software > Install All**.

- 4 Read the licence agreements, and select **Accept All** to accept the agreements.

**NOTE:** if you do not agree with the licence terms, you can select **Reject**. This stops the update process. You cannot install updates until you accept the licence agreements.

- 5 Using the included USB cable, connect the device to external power, and select **Continue** ([Charging the Device, page 45](#)).


For the best results, a USB wall charger that provides at least 2 A power output is recommended. Many USB power adapters for smartphones, tablets or portable media devices may be compatible.


- 6 Keep the device connected to external power and within range of the Wi-Fi network until the update process is complete.

**TIP:** if a map update is interrupted or cancelled before it completes, your device may be missing map data. To repair missing map data, you must update the maps again using either Wi-Fi or Garmin Express.


## Updating Maps and Software with Garmin Express

You can use the Garmin Express application to download and install the latest map and software updates for your device.

- 1 If you do not have the Garmin Express application installed on your computer, go to [garmin.com/express](https://garmin.com/express) and follow the on-screen instructions to install it (*Installing Garmin Express, page 49*).
- 2 Open the  Garmin Express application.
- 3 Connect your device to your computer using a USB cable.  
The small end of the cable connects to the USB port **1** on your Garmin DriveCam device, and the large end connects to an available USB port on your computer.

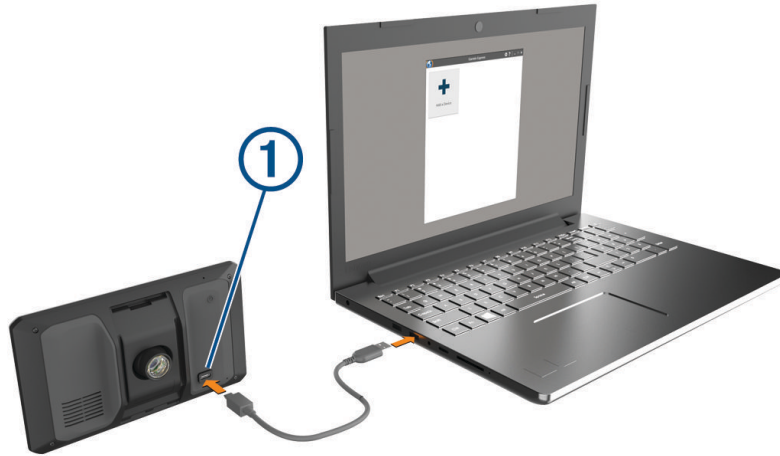

- 4 From your Garmin DriveCam device, select **Tap to Connect to Computer**.
- 5 When your Garmin DriveCam device prompts you to enter file transfer mode, select **Continue**.
- 6 In the Garmin Express application, click **Add a Device**.  
The Garmin Express application searches for your device and displays the device name and serial number.
- 7 Click **Add Device** and follow the on-screen instructions to add your device to the Garmin Express application.  
When setup is complete, the Garmin Express application displays the updates available for your device.

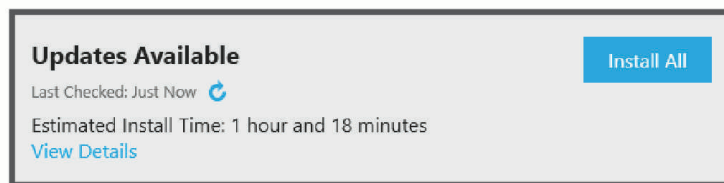

- 8 Select an option:
  - To install all available updates, click **Install All**.
  - To install a specific update, click **View Details** and click **Install** next to the update you want.

The Garmin Express application downloads and installs the updates onto your device. Map updates are very large and this process may take a long time on slower internet connections.

**NOTE:** if a map update is too large for the internal storage of the device, the software may prompt you to install a microSD card in your device to add storage space (*Installing a memory card for maps and data, page 50*).
- 9 Follow the on-screen instructions during the update process to finish installing updates.  
For example, during the update process, the Garmin Express application may instruct you to disconnect and reconnect your device.

## Installing Garmin Express

The Garmin Express application is available for Windows® and Mac® computers.

- 1 On your computer, go to [garmin.com/express](http://garmin.com/express).
- 2 Select an option:
  - To view the system requirements and verify the Garmin Express application is compatible with your computer, select **System Requirements**.
  - To install on a Windows computer, select **Download for Windows**.
  - To install on a Mac computer, select **Download for Mac**.
- 3 Open the downloaded file, and follow the on-screen instructions to complete the installation.

## Device Care

### NOTICE

Avoid dropping your device.

Do not store the device where prolonged exposure to extreme temperatures can occur, as it can cause permanent damage.

Never use a hard or sharp object to operate the touchscreen as this may result in damage.

Do not expose the device to water.

## Cleaning the outer casing

### NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

- 1 Clean the outer casing of the device (not the touchscreen) using a cloth dampened with a mild detergent solution.
- 2 Wipe the device dry.

## Cleaning the Touchscreen

- 1 Use a soft, clean, lint-free cloth.
- 2 If necessary, lightly dampen the cloth with water.
- 3 If using a dampened cloth, turn off the device and disconnect the device from the power.
- 4 Gently wipe the screen with the cloth.

## Cleaning the camera lens

### NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

You should clean the camera lens regularly to improve the quality of recorded video.

- 1 Wipe the lens with a non-scratch lens cloth, optionally dampened with isopropyl alcohol.
- 2 Allow the lens to air dry.

## Avoiding theft

- Remove the device and mount from sight when not in use.
- Remove the residue left on the windscreen by the suction cup.
- Do not keep your unit in the glove compartment.
- Register your device using the Garmin Express software ([garmin.com/express](http://garmin.com/express)).

## Restarting the Device

You can restart your device if it stops functioning.

Hold the power button for 12 seconds.

## Removing the Device, Mount and Suction Cup

### Removing the Device from the Mount

- 1 Press the release tab or button on the mount.
- 2 Tilt the top of the device downwards and lift the device from the mount.

### Removing the Mount from the Suction Cup

- 1 Turn the device mount to the right or left.
- 2 Apply pressure until the socket on the mount releases the ball on the suction cup.

### Removing the Suction Cup from the Windscreen

- 1 Flip the lever on the suction cup towards you.
- 2 Pull the tab on the suction cup towards you.

## Data management

The device has a memory card slot for additional data storage.

**NOTE:** the device is compatible with Windows 7 and newer, and Mac OS 10.7 and newer.

### About memory cards

You can purchase memory cards from an electronics supplier, or purchase pre-loaded Garmin mapping software ([www.garmin.com](http://www.garmin.com)). Memory cards can be used to store files such as maps and custom POIs.

### Installing a memory card for maps and data

You can install a memory card to increase the storage space for maps and other data on your device. You can purchase memory cards from an electronics supplier. The device supports microSD memory cards from 4 to 512 GB. Memory cards must use the FAT32 file system format. Memory cards greater than 32 GB must be formatted using the device.

- 1 Locate the map and data memory card slot on your device (*Garmin DriveCam Device Overview, page 1*).
- 2 Insert a memory card into the slot.
- 3 Press it in until it clicks.

### Formatting the Dash Cam Memory Card

The dash cam requires a memory card formatted using the FAT32 file system. You can use the device to format your card using this file system.

You should format your memory card at least once every 6 months to help extend the useful life of the memory card. You must also format a brand new memory card if it is not formatted using the FAT32 file system.

**NOTE:** formatting the memory card deletes all data on the card.

- 1 Select  > **Gallery**.
- 2 Select  > **Format Memory Card**.



## Connecting the Device to Your Computer

You can connect the device to your computer using a USB cable.

- 1 Plug the small end of the USB cable into the port on the device.
- 2 Plug the larger end of the USB cable into a port on your computer.
- 3 From your Garmin DriveCam device, select **Tap to Connect to Computer**.
- 4 When your Garmin DriveCam device prompts you to enter file transfer mode, select **Continue**.

A picture of your device connected to a computer appears on the device screen.

Depending on your computer operating system, the device appears as either a portable device, a removable drive, or a removable volume.

## Transferring data from your computer

- 1 Connect the device to your computer ([Connecting the Device to Your Computer, page 51](#)).  
Depending on your computer operating system, the device appears as either a portable device, a removable drive, or a removable volume.
- 2 On your computer, open the file browser.
- 3 Select a file.
- 4 Select **Edit > Copy**.
- 5 Browse to a folder on the device.  
**NOTE:** for a removable drive or volume, you should not place files in the Garmin folder.
- 6 Select **Edit > Paste**.

## Disconnecting the USB cable

If your device is connected to your computer as a removable drive or volume, you must safely disconnect your device from your computer to avoid data loss. If your device is connected to your Windows computer as a portable device, it is not necessary to safely disconnect the device.

- 1 Complete an action:
  - For Windows computers, select the **Safely Remove Hardware** icon in the system tray and select your device.
  - For Apple® computers, select the device, and select **File > Eject**.
- 2 Disconnect the cable from your computer.

# Troubleshooting

## My video recordings are blurry

- Clean the camera lens ([Cleaning the camera lens, page 49](#)).
- Clean the windscreen in front of the camera.
- Verify the area of the windscreen in front of the camera is cleared by the windscreen wipers, and move the device, if necessary.

## My memory card has degraded and needs to be replaced

All microSD memory cards wear out after they are overwritten a large number of times. Periodically formatting the card can extend the useful life and improve performance. Because the dash camera records continuously, you may need to replace the memory card periodically. Your device detects memory card errors automatically and alerts you when it is time to format or replace your memory card.

You can take these actions to help extend the useful life of the memory card.

- Format the memory card at least one time every six months.
- If the device displays a memory card error alert, first try formatting the memory card and then, if necessary, replace the memory card.
- Turn off the device when your vehicle is not in use.

If your device is not connected to an ignition-switched vehicle power outlet, you should turn off the device when your vehicle is not in use to prevent the dash camera from recording unneeded footage.

- Use a memory card with a higher storage capacity.  
Because higher-capacity memory cards are overwritten less frequently, they usually last longer.
- Use a high-quality memory card with a speed rating of class 10 or higher.
- Purchase your replacement memory card from a high-quality manufacturer and a reputable vendor.

## My video recordings are choppy or incomplete

- For the best camera and video results, use a high-quality memory card with a speed rating of class 10 or higher.  
A slower memory card may not record video quickly enough.
- If you are viewing videos on your smartphone using a wireless connection to the camera, try viewing them in another location with less wireless interference, or try transferring videos to the smartphone.
- Transfer important recordings to a computer or smartphone, and format the memory card.
- If the device displays a memory card error alert, first try formatting the memory card and then, if necessary, replace the memory card.
- Update your device to the latest software ([Map and Software Updates, page 46](#)).

## The suction cup will not stay on my windshield

- 1 Clean the suction cup and windshield with surgical spirit.
- 2 Dry with a clean, dry cloth.
- 3 Mount the suction cup ([Mounting Considerations, page 2](#)).

## My device is not acquiring satellite signals

- Verify the GPS simulator is turned off ([Navigation settings, page 41](#)).
- Take your device out of car parks and away from tall buildings and trees.
- Remain stationary for several minutes.

## My battery does not stay charged for very long

- Decrease the screen brightness ([Display settings, page 43](#)).
- Shorten the display timeout ([Display settings, page 43](#)).
- Decrease the volume ([Adjusting the volume, page 6](#)).
- Turn off the Wi-Fi radio when it is not in use ([Wireless network settings, page 42](#)).
- Put the device in power saving mode when not in use ([Turning the device on or off, page 4](#)).
- Keep your device away from extreme temperatures.
- Do not leave your device in direct sunlight.

## My device does not connect to my phone

- Select  > **Wireless Networks**.

The Bluetooth option must be enabled.

- Enable Bluetooth wireless technology on your phone and bring your phone within 10 m (33 ft.) of the device.
- Verify your phone is compatible.


Go to [www.garmin.com/bluetooth](http://www.garmin.com/bluetooth) for more information.

- Complete the pairing process again.

To repeat the pairing process, you must unpair your phone and device (*Deleting a paired phone, page 35*) and complete the pairing process (*Live services, traffic and smartphone features, page 31*).

## Appendix

### Viewing GPS signal status

Hold  for three seconds.

### Purchasing additional maps

- 1 Go to your device product page at [garmin.com](http://garmin.com).
- 2 Click on the **Maps** tab.
- 3 Follow the on-screen instructions.

### Purchasing accessories

- Optional accessories are available at [garmin.com](http://garmin.com) or from your Garmin dealer.

### European Emission Standards

The European Emission Standards are standards for exhaust emissions that limit the amount of air pollutants that are released from new vehicles sold in Europe.

You can find your vehicle's emission standards in your vehicle's owner's manual, your vehicle registration documents, or printed on your vehicle's door frame. If you are unable to locate the emission standard for your vehicle, you can contact your vehicle dealer or manufacturer for more information.

